

[manuals.plus](#) /

- › [Coolpad](#) /
- › [Coolpad Tasker 10" HD Android 10 Tablet User Manual](#)

**Coolpad Coolpad Tasker Tablet 3667AT 10IN WiFi**

# Coolpad Tasker 10" HD Android 10 Tablet User Manual

Model: Coolpad Tasker Tablet 3667AT 10IN WiFi

## INTRODUCTION

Welcome to the user manual for your new Coolpad Tasker 10" HD Android 10 Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Designed for both entertainment and productivity, your tablet features a vibrant 10-inch HD display, a powerful Qualcomm 64-bit processor, 3GB RAM, and 32GB of internal storage, expandable up to 128GB with a Micro SD card. It also includes a 6000mAh battery with Quick Charge 3.0 support and comes with a shock-absorbing protective case for enhanced durability.

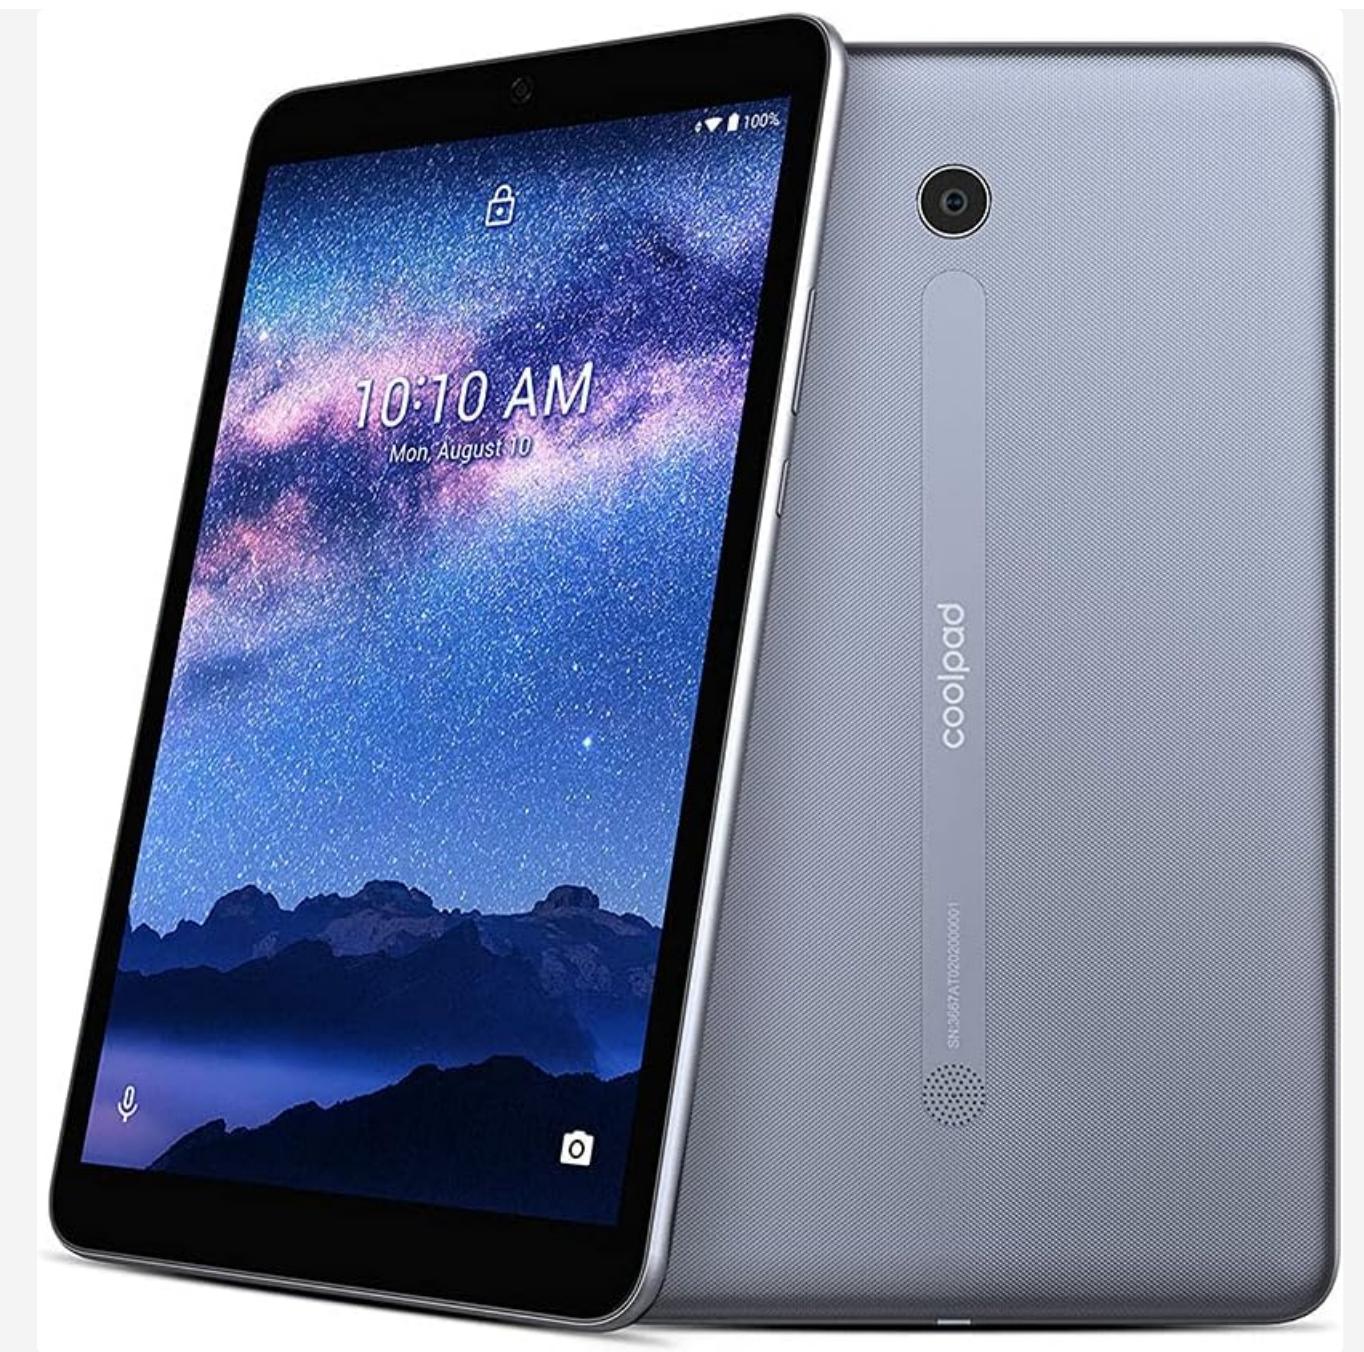


Figure 1: Front and Rear View of the Coolpad Tasker Tablet. The tablet features a sleek design with a camera on the rear and a large display on the front.

## WHAT'S IN THE BOX

Upon unboxing your Coolpad Tasker Tablet, please ensure all the following items are present:

- Coolpad Tasker 10" HD Android 10 Tablet
- USB-C Cable
- Travel Charger
- Coolpad Tasker Shock Protection Case



Figure 2: Coolpad Tasker Tablet and its Shock Protection Case. The image displays the tablet alongside its durable protective case, highlighting the included accessory.

## SETUP GUIDE

### 1. Initial Charging

Before first use, it is recommended to fully charge your tablet. Connect the provided USB-C cable to the tablet's charging port and the travel charger, then plug it into a power outlet. The tablet supports Quick Charge 3.0 for faster charging.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the Coolpad logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off".

### 3. Initial Android Setup

Upon first power-on, you will be guided through the Android 10 setup process. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, set up your Google account, and configure basic settings.

#### 4. Inserting a Micro SD Card (Optional)

To expand your tablet's storage, you can insert a Micro SD card (up to 128GB). Locate the SIM/SD card tray on the side of the tablet. Use the provided tool (if any) or a paperclip to eject the tray, place the Micro SD card into the designated slot, and reinsert the tray firmly.



Figure 3: Micro SD Card Slot. The image shows the tablet with its Micro SD card slot open, ready for memory expansion.

### OPERATING YOUR TABLET

#### Basic Navigation

Your Coolpad Tasker Tablet uses a capacitive touchscreen for navigation. Use gestures such as tapping, swiping, pinching, and spreading to interact with apps and content. The Android 10 operating system provides an intuitive user

experience.



Figure 4: Android 10 Interface. This image illustrates the clean and secure interface of Android 10 on the Coolpad tablet.

## Wi-Fi Connectivity

To connect to the internet, navigate to **Settings > Network & Internet > Wi-Fi**. Select your desired network from the list and enter the password if prompted. The tablet supports 802.11ac wireless standards for fast and reliable connections.



Figure 5: Wi-Fi Connectivity. The tablet is shown with a Wi-Fi signal icon, indicating active wireless internet connection.

## Camera Usage

Your tablet is equipped with a 5MP HDR rear-facing camera and a 2MP front-facing camera. Open the Camera app to capture photos, selfies, or record videos. Tap the screen to focus and press the shutter button to take a picture.



Figure 6: Capturing Moments with the Camera. The image shows the tablet's camera in use, ready to capture special moments.

## Battery Management

The 6000mAh battery provides extended usage time. To optimize battery life, reduce screen brightness, close unused applications, and disable Wi-Fi or Bluetooth when not in use. Utilize the Quick Charge 3.0 feature for rapid recharging.



Figure 7: 6000mAh Battery Capacity. This image highlights the tablet's large battery, designed for extended productivity.

## App Installation

Download and install applications from the Google Play Store. Ensure you have a stable internet connection and a Google account logged in to access the store.

## MAINTENANCE

### Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of your tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

### Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update** to check for and install available updates.

### Battery Care

To prolong battery lifespan, avoid extreme temperatures and do not let the battery completely drain frequently. It is best to keep the battery charge between 20% and 80% for optimal long-term health.

### Protective Case

The included shock protection case is designed to safeguard your tablet from accidental drops and impacts. It is recommended to keep the case on your tablet during daily use.

## TROUBLESHOOTING

### Tablet Not Powering On

- Ensure the tablet is sufficiently charged. Connect it to the charger and wait a few minutes before attempting to power on again.
- Try holding the Power button for an extended period (10-15 seconds) to force a restart.

### Wi-Fi Connectivity Issues

- Restart your Wi-Fi router and the tablet.

- Forget the network in Wi-Fi settings and reconnect.
  - Ensure you are within range of the Wi-Fi signal.

## Apps Crashing or Freezing

- Close and reopen the app.
  - Clear the app's cache and data in **Settings > Apps & notifications > [App Name] > Storage & cache**
  - Ensure the app is updated to its latest version from the Google Play Store.

## Factory Reset

If you encounter persistent issues, a factory reset can resolve many software-related problems. **Warning: This will erase all data on your tablet. Back up important data before proceeding.** Go to **Settings > System > Reset options > Erase all data (factory reset)** and follow the prompts.

## SPECIFICATIONS

Below are the key technical specifications for the Coolpad Tasker Tablet 3667AT 10IN WiFi:

## Qualcomm 215 Mobile Platform

<b>CPU</b> 4x Arm Cortex A53 Up to 1.3GHz	<b>Connectivity</b> Snapdragon XS Cat 4 DL, up to 150 Mbps		<b>Camera</b> Dual camera support 1080p HD video capture 13 Megapixels	<b>Security</b> Qualcomm Processor Security
<b>Display</b> Up to HD+ display	Dual SIM Dual VoLTE Carrier Aggregation WiFi 802.11ac NFC			
<b>GPU</b> Adreno 308			<b>Charging</b> Qualcomm® Quick Charge™ 1.0 technology	<b>Security</b> Qualcomm Hexagon DSP

Figure 8: Qualcomm 215 Mobile Platform. This diagram details the capabilities of the Qualcomm 215 processor, including CPU, GPU, connectivity, camera, charging, and security features.

Feature	Specification
Model Name	Coolpad Tasker Tablet 3667AT 10IN WiFi
Operating System	Android 10
Display Size	10 inches
Screen Resolution	1280 x 800 Pixels (HD)
Processor	Qualcomm 64-bit Processor (QM215 Quad-Core)
RAM	3 GB DDR3 SDRAM
Internal Storage	32 GB eMMC
Expandable Storage	Micro SD up to 128 GB
Rear Camera	5 MP HDR
Front Camera	2 MP

Feature	Specification
Battery Capacity	6000 mAh
Charging	Quick Charge 3.0
Wireless Type	802.11ac
Item Weight	2.07 pounds (approx. 939 grams)
Product Dimensions	10 x 6 x 0.35 inches (254 x 152 x 9.2 mm)



Figure 9: Tablet Dimensions and Weight. This image illustrates the physical dimensions (254\*152\*9.2mm) and weight (526.8 Gram) of the tablet, noting it is 15% lighter than comparable devices.

## Beautiful True Color 10" High Definition Energy Efficient Display



Figure 10: 10" IPS TFT WXGA 1280\*800 Display. The image showcases the tablet's high-definition display, emphasizing its vibrant and clear visual quality.

## WARRANTY AND SUPPORT

Your Coolpad Tasker Tablet comes with a standard manufacturer's warranty. For detailed warranty information, including terms and conditions, please refer to the warranty card included with your product or visit the official Coolpad website. For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact Coolpad customer support through their official channels.

You can find more information and support resources by visiting the [Coolpad Store on Amazon](#).