

Skechers SR5156

Skechers Men's Truxton Analog-Digital Watch SR5156 Instruction Manual

Model: SR5156

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The Skechers Men's Truxton Analog-Digital Watch, Model SR5156, combines classic analog timekeeping with modern digital functionalities. Designed for an active lifestyle, this watch features a durable construction and a versatile design suitable for various occasions. It includes dual movements for both analog and digital displays, a chronograph, alarm, and is water-resistant.

Key Features:

- **Dual Analog-Digital Movement:** Provides both traditional hand-based time and a digital display for enhanced versatility.
- **Chronograph Display:** Mimics the look of a chronograph for stopwatch functions.
- **Durable Construction:** Features a round alloy metal case and a black silicone band for comfort and resilience.
- **Water Resistance:** Water resistant to 30 meters (100 feet), suitable for splashes or brief immersion, but not for swimming or showering.
- **EL Backlight:** For visibility in low-light conditions.
- **Alarm & Hourly Chime:** For time management and alerts.
- **Calendar:** Displays date information.
- **12/24 Hour Selectable Format:** Choose your preferred time display.



Figure 1: Skechers Truxton Watch Face with Labeled Features.

2. INITIAL SETUP

Before using your Skechers Truxton watch, you may need to set the time and date for both the analog and digital displays.

2.1 Setting Analog Time

1. Pull out the crown (the knob on the right side of the watch case) to the first or second click position.
2. Rotate the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back in to its normal position to start the analog movement.







Figure 2: Side view of the watch, highlighting the crown and function buttons.

2.2 Setting Digital Time and Date

The digital display typically has multiple modes (Time, Alarm, Stopwatch, Date). Use the "MODE" button (usually bottom left) to cycle through these modes.

1. Press the "MODE" button repeatedly until the digital time display starts flashing, indicating it's in setting mode.
2. Use the "RESET" button (usually top left) to select the digit or setting you wish to change (e.g., hours, minutes, year, month, day).
3. Use the "START/STOP" button (usually top right) to increase the selected value.
4. Once all settings are correct, press the "MODE" button again to exit the setting mode.

3. OPERATING INSTRUCTIONS

3.1 Using the Chronograph (Stopwatch)

1. Press the "MODE" button until the stopwatch display appears (usually indicated by "ST" or "STOPW").
2. Press the "START/STOP" button to begin timing.
3. Press "START/STOP" again to pause the timing.
4. To resume, press "START/STOP". To reset, press the "RESET" button while the stopwatch is paused.

3.2 Setting and Using the Alarm

1. Press the "MODE" button until the alarm display appears (usually indicated by "AL" or "ALARM").
2. Press the "RESET" button to select the hour or minute digits for setting.
3. Use the "START/STOP" button to adjust the alarm time.
4. Press "MODE" to confirm and exit. To turn the alarm ON/OFF, typically press "START/STOP" while in alarm mode.

3.3 Using the EL Backlight

To illuminate the digital display in low-light conditions, press the "LIGHT" button (usually bottom right). The backlight will typically stay on for a few seconds.

3.4 12/24 Hour Format Selection

While in the normal time display mode, press the "RESET" button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4. CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch case and band regularly with a soft, damp cloth. For silicone bands, mild soap and water can be used. Ensure the watch is dry before wearing.
- **Water Resistance:** The watch is water resistant to 30 meters (100 feet). This means it can withstand splashes, rain, or brief immersion in water. It is **not** suitable for swimming, diving, or showering, as steam and direct water pressure can compromise seals. Always ensure the crown is fully pushed in before any contact with water.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as

this can affect its accuracy and lifespan.

- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, which can damage the case, band, or seals.
- **Battery Replacement:** The watch uses a 12V battery. When the display dims or the watch stops, it's time for a battery replacement. It is recommended to have this done by a professional watch repair service to ensure water resistance is maintained.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving	Dead battery; Crown pulled out.	Replace battery; Push crown fully in.
Digital display blank or dim	Low or dead battery.	Replace battery.
Incorrect digital time/date	Not set correctly.	Refer to "Setting Digital Time and Date" section.
Watch fogging up internally	Moisture ingress; Seal compromised.	Avoid further water exposure. Seek professional repair immediately to prevent damage.
Buttons not responding	Stuck button; Internal malfunction.	Gently try to free the button. If unresponsive, contact support.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Truxton
Model Number	SR5156
Display Type	Analog-Digital
Watch Movement Type	Quartz
Case Material	Alloy Steel
Case Diameter	45 Millimeters
Case Thickness	14 Millimeters
Band Material Type	Silicone
Band Width	24 Millimeters
Band Length	205 Millimeters
Water Resistance Depth	30 Meters (100 Feet)
Power Source Type	Battery Powered (1 x 12V battery included)
Item Weight	120 Grams

Feature	Detail
Country of Origin	China
UPC	796483527812

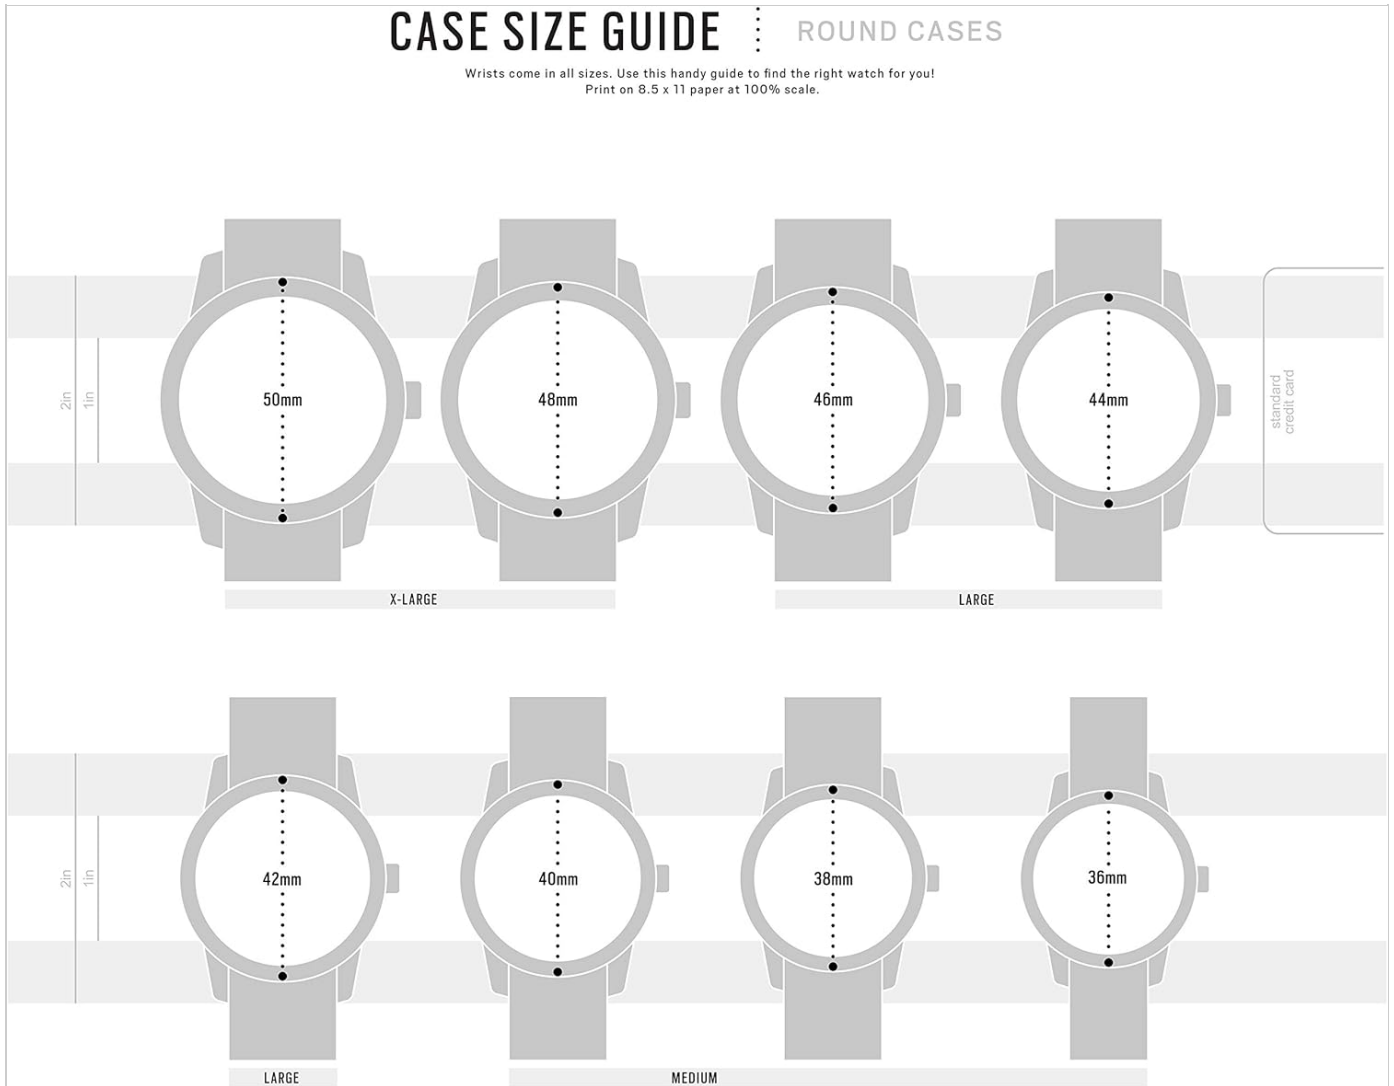


Figure 3: Men's Watch Case Size Guide for reference.

7. WARRANTY AND SUPPORT

This Skechers watch comes with a Manufacturer's Warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase or contact Skechers customer support. For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Skechers customer service. Contact information can typically be found on the official Skechers website or on the packaging.

Manufacturer: Skechers

Place of Business: Oakville, ON L6L 0B6, CA

8. ADDITIONAL RESOURCES

Product Videos

Your browser does not support the video tag.

Video 1: Overview of a Skechers Analog-Digital Watch (Model SR1042). While this video features a similar Skechers analog-digital watch (SR1042), the general operation and features may be comparable to the Truxton SR5156 model.

