

- Manuals.plus /
- › Xqisit /
- › Xqisit 20000mAh Powerbank User Manual

Xqisit x

Xqisit 20000mAh Powerbank User Manual

Model: x

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Xqisit 20000mAh Powerbank. Please read it thoroughly before use and retain it for future reference.

PRODUCT OVERVIEW



Figure 1: Front view of the Xqisit 20000mAh Powerbank. The digital display shows "100", indicating a full charge. The "XQ" logo is visible at the bottom of the device. The power bank has a sleek, dark grey finish.

The Xqisit 20000mAh Powerbank is a portable external battery designed to charge various electronic devices, including tablets and smartphones. It features Power Delivery (PD) and Quick Charge (QC) 3.0 technologies for fast and efficient charging.

Key Features:

- **High Capacity:** 20000mAh battery for multiple charges.
- **Fast Charging:** Supports Power Delivery (PD) and Quick Charge (QC) 3.0.
- **Connectivity:** USB Type-C connector.
- **Compact Design:** Slim and portable.
- **Digital Display:** Shows battery percentage.

SETUP

Initial Charging of the Powerbank:

1. Connect the Xqisit Powerbank to a compatible USB wall charger (not included) using a USB Type-C cable.
2. The digital display on the power bank will illuminate and show the charging progress, increasing from 0 to 100.
3. Charge the power bank fully before its first use to optimize battery life. A full charge is indicated by "100" on the display.

What's in the Box:

- Xqisit 20000mAh Powerbank (Model: x)
- *Note: Charging cables for devices and wall adapter are typically sold separately.*

OPERATING INSTRUCTIONS

Charging Your Devices:

1. Ensure the Xqisit Powerbank has sufficient charge (check the digital display).
2. Connect your device (e.g., smartphone, tablet) to the power bank using an appropriate charging cable (e.g., USB Type-C to USB Type-C, USB Type-C to Lightning).
3. The power bank will automatically begin charging your device. The digital display will show the remaining battery percentage of the power bank.
4. Once your device is fully charged, disconnect it from the power bank.

Checking Battery Level:

Briefly press the power button (if available, otherwise it's always on display) on the power bank to activate the digital display, which will show the current battery percentage.

MAINTENANCE

- Keep the power bank dry and away from moisture.
- Avoid extreme temperatures (hot or cold).
- Do not drop, puncture, or disassemble the device.
- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use for extended periods. It is recommended to charge it to about 50-70% before long-term storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Faulty cable or adapter; power bank fully charged; internal issue.	Try a different USB Type-C cable and wall adapter. Ensure the adapter meets the power bank's input requirements. If the display shows "100", it is fully charged.
Device not charging from power bank	Power bank empty; faulty cable; incompatible device; power bank in standby.	Charge the power bank. Try a different charging cable for your device. Ensure your device is compatible with USB charging. Briefly press the power button on the power bank to activate output.

Problem	Possible Cause	Solution
Slow charging	Cable not supporting fast charge; device not supporting fast charge; multiple devices charging.	Use a high-quality cable that supports PD/QC. Ensure your device supports fast charging protocols. Charging multiple devices simultaneously may reduce individual charging speeds.
Power bank gets hot during use/charging	Normal operation; excessive load; poor ventilation.	Slight warming is normal. Ensure adequate ventilation. If it becomes excessively hot, disconnect immediately and contact support.
Digital display not working	Device fault; low battery.	Try charging the power bank. If the issue persists, the device may be faulty.

If you encounter persistent issues not covered here, please contact Xqisit customer support.

SPECIFICATIONS

Feature	Detail
Model Number	x
Battery Capacity	20000 Milliamperestunden (mAh)
Connector Type	USB Typ-C
Color	Schwarz
Special Feature	Schlank (Slim)
Dimensions (L x W x H)	19,3 x 10,1 x 2,9 cm
Weight	430 Gramm
Batteries Required	1 AA Batterien erforderlich (enthalten)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Xqisit website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: Xqisit

First Available: January 26, 2021

For further assistance, you may visit the [Xqisit Brand Store on Amazon](#).

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08V3YJ2XR>

More documents and user manuals: <https://manuals.plus/>