

VAYDEER Vaydeer-FM701

VAYDEER USB Mouse Jiggler (Model Vaydeer-FM701) Instruction Manual

INTRODUCTION

The VAYDEER USB Mouse Jiggler (Model Vaydeer-FM701) is a compact, undetectable device designed to prevent your computer from entering sleep mode or displaying an 'away' status. It simulates subtle mouse movements, ensuring your system remains active without requiring software installation or administrative privileges. This manual provides detailed instructions for setup, operation, and troubleshooting.

PRODUCT FEATURES

- **100% Undetectable Security:** Registers as a standard Human Interface Device (HID), ensuring it passes corporate IT audits and remains compatible with system updates like Windows Security Update 2025 and macOS Sonoma.
- **Smart Mode Memory & Automatic Rotation:** Features a patented triple-track algorithm that mimics human mouse patterns. It includes modes for Office (subtle 2px changes), Gaming (random 15° arcs), and Stealth (zero cursor deviation). The device remembers the last used mode.
- **Universal Compatibility:** Certified for Windows 11 23H2, macOS Monterey/Ventura, and Linux Kernel 6.5. It functions with various platforms including Citrix VDI, AWS Workspaces, and RDP, keeping applications like Slack and Teams active without triggering Data Loss Prevention (DLP) alerts.
- **Integrated ON/OFF Switch:** Allows for easy activation and deactivation without needing to repeatedly plug and unplug the device, protecting your computer's USB ports.
- **Driver-Free Operation:** Requires no software installation or drivers, offering true plug-and-play functionality.
- **ISO27001 Certified Firmware:** Ensures data security with zero data leakage.

PACKAGE CONTENTS

- 1 x VAYDEER USB Mouse Jiggler (Model Vaydeer-FM701)
- 1 x User Manual

SETUP

1. Locate an available USB port on your computer (laptop or desktop).
2. Insert the VAYDEER USB Mouse Jiggler into the USB port.
3. Ensure the ON/OFF switch on the device is in the 'ON' position. The device will typically have an indicator light (e.g., blue LED) to show it is active.

The device is plug-and-play and does not require any driver installation. Your computer will recognize it as a standard mouse.

SMALLER



No one will see it as **a mouse juggler** since.
it's just like a bluetooth receiver



Image: The VAYDEER USB Mouse Jiggler plugged into a laptop's USB port, highlighting its compact design and the visible ON/OFF switch with a blue indicator light.

OPERATING INSTRUCTIONS

Once the VAYDEER USB Mouse Jiggler is plugged in and turned on, it will automatically begin simulating mouse

movement to keep your computer active. You can cycle through the different movement modes by pressing the button on the device.

Modes of Movement

The device offers three distinct movement modes, each designed for different scenarios:

- **Mode 1 (Wide Range of Movement):** Simulates larger, more noticeable mouse movements, suitable for general use.
- **Mode 2 (Small Range of Movement):** Provides subtle, less conspicuous mouse movements, ideal for office environments.
- **Mode 3 (Jiggler Range of Movement / Stealth Mode):** Generates minimal or zero cursor deviation, ensuring activity without visible cursor movement.

Press the button on the jiggle to switch between these modes. The device will remember the last selected mode even after being unplugged or turned off.



Image: Visual representation of the three movement modes (A1, A2, A3) and a crucial note regarding mouse settings for optimal performance.

COMPATIBILITY

The VAYDEER USB Mouse Jiggler is designed for broad compatibility with various operating systems and software environments:

- **Operating Systems:** Windows (Win7/8/10/11 23H2), macOS (Sonoma, Monterey, Ventura), Linux (Kernel 6.5), Unix, Android.
- **Compatible Devices:** Laptops, Desktop Computers.
- **Software/Platforms:** Microsoft Teams, Skype, Webex, Outlook, Citrix VDI, AWS Workspaces, RDP, Zoom.

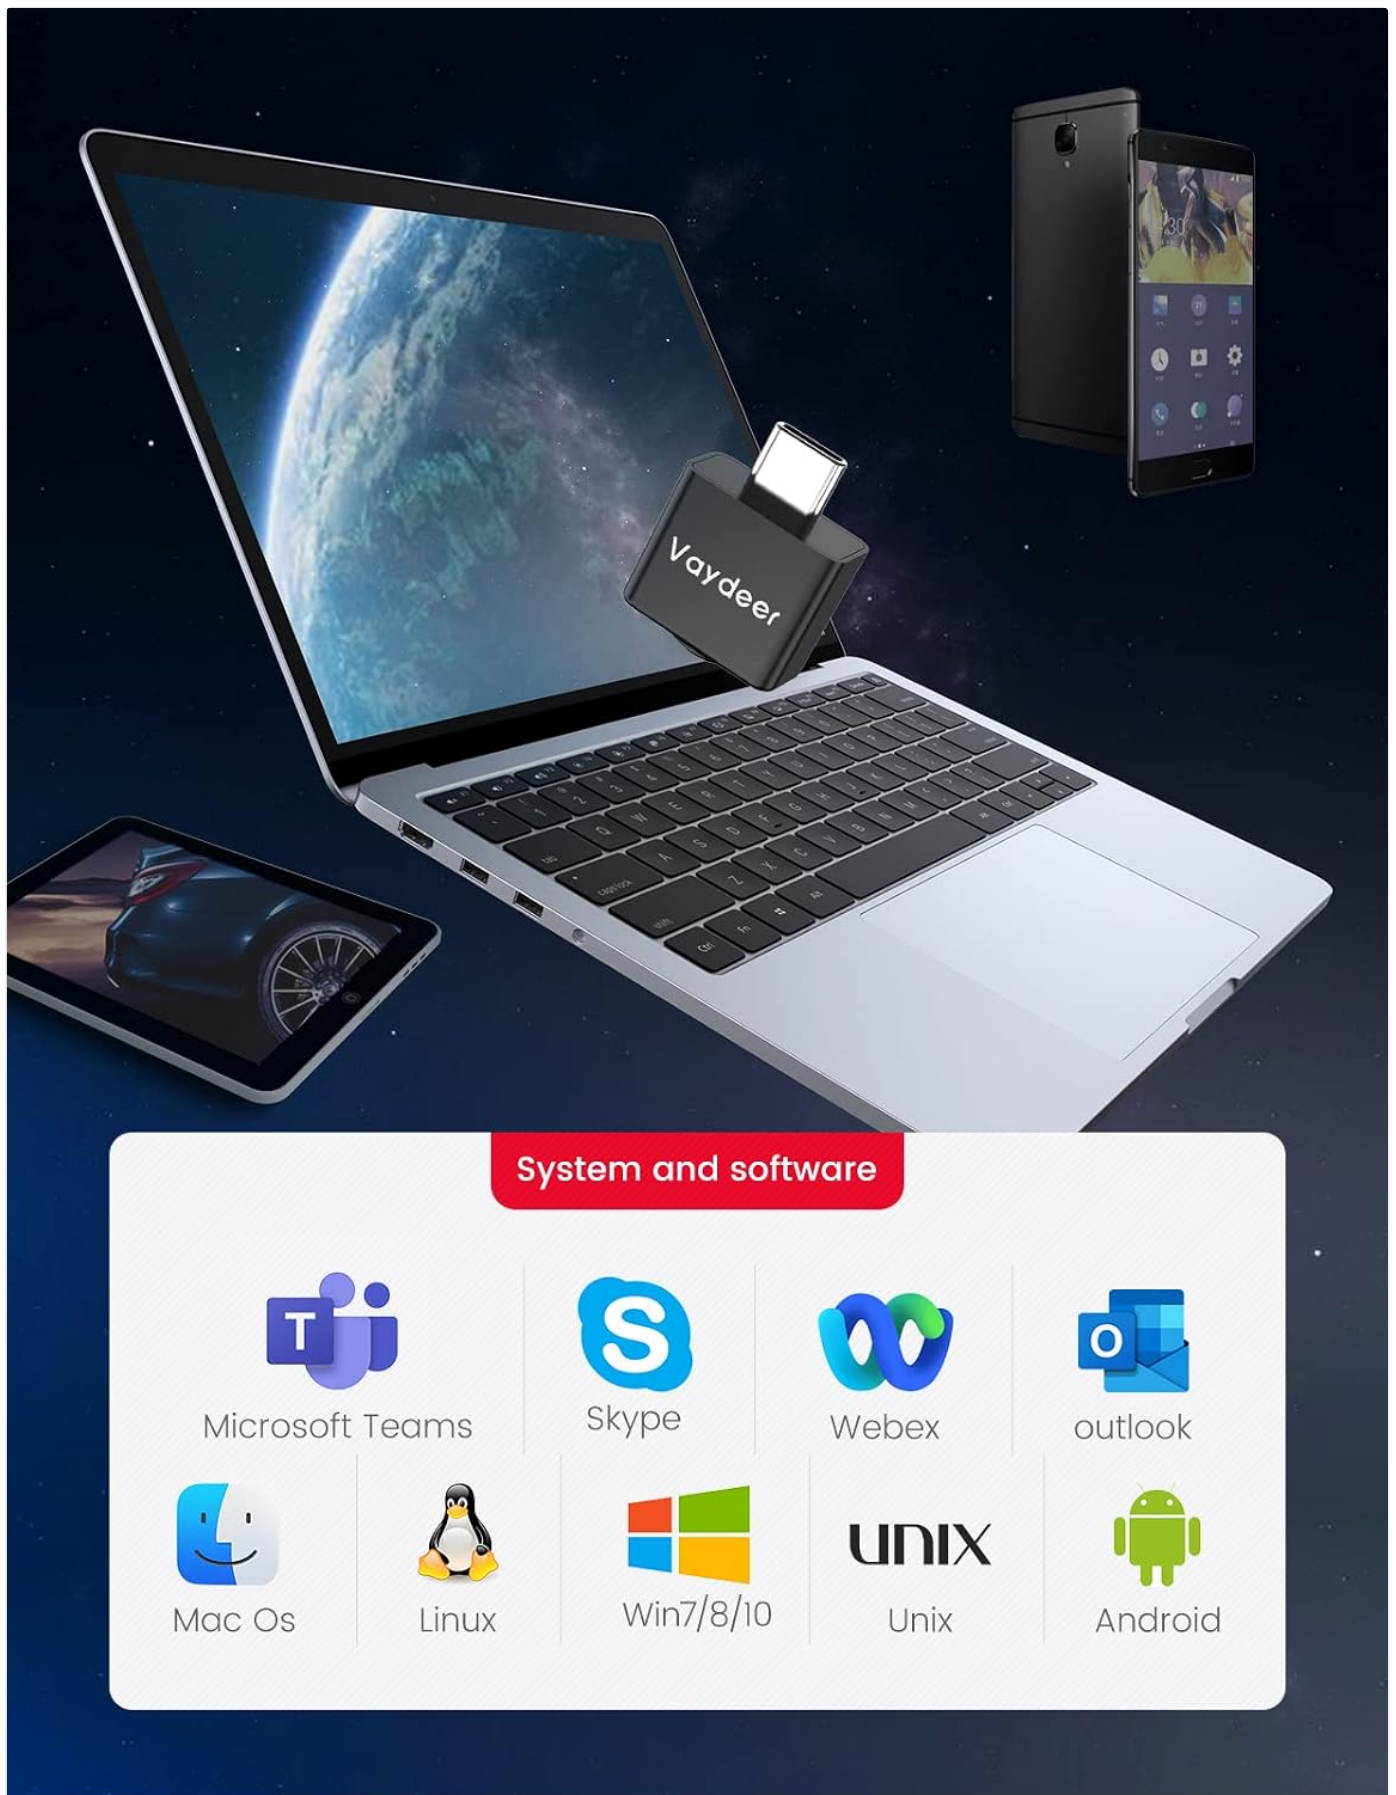 


Image: Overview of supported operating systems and communication platforms.

MAINTENANCE

To ensure the longevity and optimal performance of your VAYDEER USB Mouse Jiggler, follow these simple maintenance guidelines:


- Keep the device clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or modify the device, as this will void the warranty and may cause damage.
- Store the device in a safe place when not in use to prevent physical damage.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Mouse pointer does not move.	Device not powered, incorrect mode, or conflicting system settings.	• Ensure the device is securely plugged into a functional USB port. • Verify the ON/OFF switch is in the 'ON' position and the indicator light is active. • Press the mode button to cycle through the three movement modes. • In your computer's mouse settings, ensure 'Enhance pointer precision' is unchecked. (Refer to the image in the 'Operating Instructions' section for visual guidance).
Device is not recognized by the computer.	Faulty USB port or temporary system glitch.	• Try plugging the device into a different USB port on your computer. • Restart your computer. • The device is driver-free; no special software installation is needed.
Device stops working intermittently.	System interference or power fluctuation.	• Ensure no other software or system settings are overriding mouse input. • Try unplugging and re-plugging the device. • If using a USB hub, try plugging directly into the computer.

SPECIFICATIONS


- **Model Number:** Vaydeer-FM701
- **Dimensions:** 2.5 x 1.9 x 0.25 cm (0.98 x 0.75 x 0.1 inches)
- **Weight:** 3.5 g (0.12 oz)
- **Material:** Aluminum Alloy / Metal Finish
- **Connectivity:** USB
- **Motion Detection:** Laser, Optical (simulated)
- **Number of Buttons:** 1 (for mode switching)
- **Hand Orientation:** Ambidextrous (N/A for this device type, but listed in source)
- **Power Source:** USB Powered

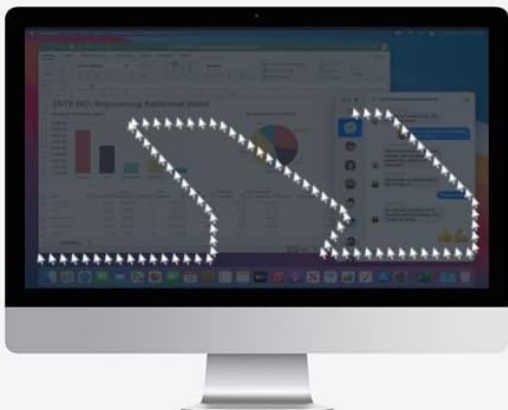



A1: Wide Range of Movement



A2: A Small Range of Movement

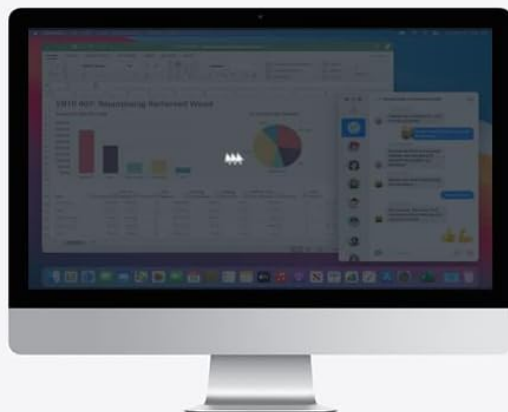

A3: A jiggler Range of Movement

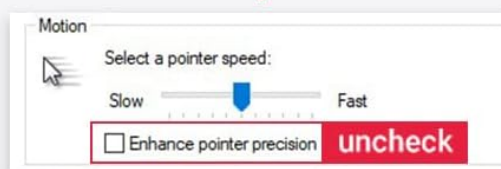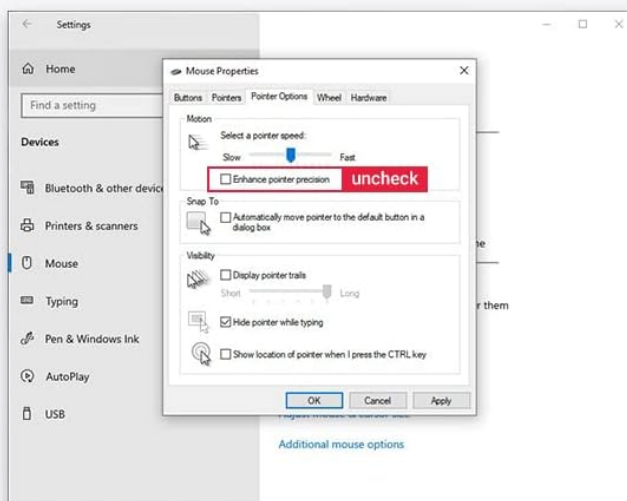

Note:

The mouse pointer will not move in mode **A3** if you check enhance pointer precision. but the mouse jiggler is still working.

Image: The compact size of the VAYDEER USB Mouse Jiggler.

WARRANTY AND SUPPORT

Warranty Information

This VAYDEER USB Mouse Jiggler (Model Vaydeer-FM701) comes with a **12-month replacement warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper handling.

Customer Support

For any questions, technical assistance, or warranty claims, please contact VAYDEER customer support through the retailer's platform or the official VAYDEER website. Please have your product model number (Vaydeer-FM701) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question