

[Manuals.plus](#) /

› [TECKNET](#) /

› TECKNET Wireless Doorbell Instruction Manual

TECKNET 1 Button & 2 Plug-in Receivers, Black

TECKNET Wireless Doorbell Instruction Manual

Model: 1 Button & 2 Plug-in Receivers, Black

Brand: TECKNET

PRODUCT OVERVIEW

The TECKNET Wireless Doorbell system provides a reliable and convenient solution for home security and visitor notification. This kit includes one wireless doorbell button (transmitter) and two plug-in receivers, designed for extensive coverage within your home.

Key features include an impressive 1300ft (400m) operating range, IP65 waterproof rating for outdoor durability, 60 selectable melodies, and 5 adjustable volume levels (0-120 dB). It also offers three working modes, including an RGB light flashing mode beneficial for individuals with hearing impairments or for quiet environments.



Figure 1: TECKNET Wireless Doorbell System Components

PACKAGE CONTENTS

- 1 x Wireless Doorbell Button (Transmitter)
- 2 x Plug-in Receivers
- Mounting Hardware (Screws and Double-sided Tape)
- User Manual

SETUP AND INSTALLATION

Installation of the TECKNET Wireless Doorbell is straightforward and requires no complex wiring.

Installing the Doorbell Button (Transmitter)

1. Choose a suitable location near your door. Ensure the surface is clean and dry.
2. Remove the protective film from the double-sided tape on the back of the doorbell button.
3. Firmly press the doorbell button onto the desired surface. For a more permanent installation, use the provided screws to secure it to the door frame or wall.

RGB Indicator & Mute Mode

Specialized for baby sleeping and nap time



Flashing RGB light is also helpful
for the hearing impaired person



RGB Indicator



Mute Mode

Figure 2: Attaching the Doorbell Button

Installing the Receivers

1. Plug each receiver into a standard power outlet in your desired locations. Consider placing one on each floor or in areas where you need to hear the chime clearly.
2. Once plugged in, the receivers are ready to pair with the doorbell button.



Memory Function

Preserves your last set melody and volume level



Figure 3: Plugging in the Receiver

Pairing the Devices

The doorbell button and receivers are typically pre-paired from the factory. If re-pairing is needed or you add more components:

1. Plug in the receiver.
2. Press and hold the volume button on the receiver for approximately 5 seconds until the LED indicator flashes rapidly.
3. Immediately press the doorbell button. The receiver will chime, indicating successful pairing.

Your browser does not support the video tag.

Video 1: Overview and Setup of TECKNET Wireless Doorbell. This video demonstrates the components and basic setup process.

OPERATING INSTRUCTIONS

Customize your doorbell experience with various settings.

Adjusting Volume Levels

The receivers offer 5 adjustable volume levels, ranging from 0 dB (mute) to 120 dB. Press the volume button on the side of the receiver to cycle through the levels.



Figure 4: Volume and Chime Options

Selecting Melodies

Choose from 60 different ringtones. Press the melody selection button on the side of the receiver to cycle through the available tunes.

Working Modes

The doorbell features three working modes:

- **Ring Mode:** Standard chime sound.
- **RGB Light Flashing Mode:** The RGB light indicator flashes without sound, ideal for quiet times or for the hearing impaired.
- **Chime and RGB Light Mode:** Both the chime and RGB light activate simultaneously.



Figure 5: RGB Indicator and Mute Mode

Memory Function

The doorbell system retains your last selected melody and volume level even after being unplugged or experiencing a power outage.



Figure 6: Memory Function

Your browser does not support the video tag.

Video 2: TECKNET Wireless Doorbell Features. This video highlights the various melodies, volume levels, and working modes.

MAINTENANCE

The TECKNET Wireless Doorbell is designed for durability and minimal maintenance.

- **Waterproof Rating:** The doorbell button has an IP65 waterproof rating, making it suitable for outdoor use in various weather conditions.
- **Operating Temperature:** The system is designed to operate within a temperature range of -4°F to 140°F (-20°C to 60°C).
- **Battery Life:** The doorbell button is designed for a long lifespan, with an estimated maximum lifespan of 4.5 years under normal usage.
- **Cleaning:** Wipe the devices with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.

IP65 & 4.5Y Life

Stay Dry. Built to Last. Long Power



-4°F/-20°C~140°F/60°C
Operating Temperature



4.5 Years
Maximum Lifespan

Figure 7: Durability and Lifespan Features

TROUBLESHOOTING

If you encounter issues with your TECKNET Wireless Doorbell, try the following steps:

- **No Chime/Signal:**

- Ensure receivers are properly plugged into a live power outlet.
- Verify the doorbell button's battery is not depleted.
- Re-pair the doorbell button and receivers as described in the "Setup and Installation" section.
- Check for excessive interference from other wireless devices or thick walls/metal objects between the transmitter and receiver.

- **Chime is Too Quiet/Loud:**

- Adjust the volume level using the dedicated button on the receiver.

- **Unexpected Chimes:**
 - If the doorbell chimes unexpectedly, it might be due to interference. Try re-pairing the devices or changing the melody.
- **Resetting the System:**
 - If issues persist, a full reset and re-pairing might be necessary. Consult the detailed user manual for specific reset procedures if available beyond the pairing instructions.

SPECIFICATIONS

Feature	Specification
Operating Range	Up to 1300 ft (400 m) in open air
Melodies	60 selectable chimes
Volume Levels	5 levels (0-120 dB)
Waterproof Rating (Button)	IP65
Operating Temperature	-4°F to 140°F (-20°C to 60°C)
Button Lifespan	Up to 4.5 years (estimated)
Receiver Dimensions	Approx. 2.9in x 2.9in (7.4cm x 7.4cm)
Button Dimensions	Approx. 2.8in x 1.6in (7.1cm x 4.1cm)



Figure 8: Product Dimensions



**1300ft (400M)
Wireless Range**
Never miss a visitor or delivery

Other Doorbells
Only 500-650ft
(150-200m)
wireless range

Figure 9: Wireless Range Capability

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your TECKNET Wireless Doorbell, please refer to the contact details provided on the product packaging or visit the official TECKNET website.

© 2025 TECKNET. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question