

[Manuals.plus](#) /

› [Instant Pot](#) /

› Instant Pot Vortex 5.7QT Air Fryer Instruction Manual

Instant Pot 140-3080-01

Instant Pot Vortex 5.7QT Air Fryer Instruction Manual

Brand: Instant Pot | Model: 140-3080-01

INTRODUCTION

The Instant Pot Vortex 5.7QT Air Fryer is designed for quick and delicious meals, offering 4-in-1 functionality including air fry, bake, roast, and reheat. Featuring EvenCrisp™ technology for crispy results and smart cooking programs for ease of use, this appliance is a versatile addition to any kitchen. It includes built-in safety features like Overheat Protection and auto-off for peace of mind.

KEY FEATURES

- **4-in-1 Functionality:** Air fry, bake, roast, and reheat with one appliance.
- **EvenCrisp™ Technology:** Advanced technology drives air flow from top down for a perfect golden finish and crispy, tender results every time.
- **One-Touch Smart Programs:** Customizable programs for wings, roasted veggies, garlicky potatoes, cookies, cinnamon buns, and more.
- **Fast Preheating:** Little to no preheating time, from frozen to golden in minutes. Temperature range of 120 to 400°F.
- **Easy Clean-Up:** Non-stick, dishwasher-safe air fry basket and tray.
- **Included Accessories:** Grill plate and skewer set for diverse recipes.
- **Instant Brands Connect App:** Access to 100+ in-app recipes for quick and delicious meals.
- **Safety Features:** Built-in Overheat Protection and auto-off.

4-in-1 Functionality

Air Fry
Bake
Reheat
Roast



**Get this recipe and more from the
FREE Instant Brands Connect App:**
Crispy Panko Fish Fry

Image: The Instant Pot Vortex 5.7QT Air Fryer highlighting its Air Fry, Bake, Reheat, and Roast functions.

Easy-to-use controls



**4 ONE-TOUCH COOKING PROGRAMS WITH
STEP-BY-STEP MESSAGE DISPLAY**



Image: Close-up of the easy-to-use control panel with one-touch cooking programs and message display.

EvenCrisp™ Technology



**Creates the
perfect crunch
with 95% less oil.***


*Compared to deep frying.



Image: The air fryer basket filled with crispy french fries, illustrating the EvenCrisp Technology.

The perfect bundle

WITH 5.7QT CAPACITY AND THE INCLUDED ACCESSORIES, PREPARE ENDLESS AMOUNTS OF SIDE DISHES AND APPETIZERS.

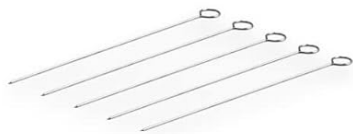

Skewer set



Cooking rack



Non-stick grill pan



Non-stick cooking tray



Image: The Instant Pot Vortex 5.7QT Air Fryer displayed with its cooking rack, non-stick grill pan, non-stick cooking tray, and skewer set.



Image: A smartphone showing the Instant Brands Connect App with a recipe, highlighting the availability of guided recipes.

SETUP

1. **Unboxing:** Carefully remove the air fryer and all accessories from the packaging.
2. **Initial Cleaning:** Before first use, wash the air fry basket and cooking tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface away from heat sources and flammable materials. Ensure adequate space around the appliance for proper ventilation.
4. **Power Connection:** Plug the power cord into a 120V grounded electrical outlet.

Frozen to table in minutes



LITTLE-TO-NO PREHEATING TIME, PERFECT FOR QUICK AND DELICIOUS MEALS

from the
makers of
**INSTANT
POT®**



Image: The Instant Pot Vortex 5.7QT Air Fryer positioned on a kitchen counter, ready for use.

OPERATING INSTRUCTIONS

1. **Power On:** Plug in the appliance. The display will show 'OFF'.
2. **Select Function:** Press the desired smart program button (Air Fry, Roast, Bake, Reheat).
3. **Adjust Settings:** Use the 'Temp' and 'Time' buttons, and the central dial, to adjust the cooking temperature (120-400°F) and time as needed.
4. **Preheat (Optional):** Some recipes may require preheating. The appliance will indicate when preheating is complete.
5. **Add Food:** Place food in the air fry basket. For best results, do not overcrowd the basket.
6. **Start Cooking:** Press the 'Start' button. The display will show 'COOKING' and the fan speed.
7. **Shake Reminder:** For certain programs, the appliance may prompt you to 'SHAKE' the basket halfway through cooking to ensure even results.
8. **Monitor Progress:** You can pull out the basket at any time to check on your food. The cooking will pause and resume once the basket is reinserted.
9. **Completion:** The appliance will beep and display 'END' when cooking is complete.



Image: The spacious 5.7QT air fry basket, demonstrating its large capacity for cooking various foods.

Video: A product overview demonstrating the Instant Pot Vortex Air Fryer's features and basic operation.

Video: Demonstration of the Instant Pot Vortex Air Fryer's spacious basket, highlighting its capacity for cooking larger quantities.

Video: An overview of the Instant Pot Vortex Air Fryer's features, including its intuitive controls and cooking modes.

MAINTENANCE AND CLEANING

1. **Daily Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning. The air fry basket and cooking tray are non-stick and dishwasher safe. For stubborn food residue, soak in warm, soapy water before washing.
2. **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or other liquids.
3. **Filter Replacement:** The Instant Pot Vortex Air Fryer features an OdorErase filter system. The appliance display will indicate when the filter needs to be changed. To replace, unplug the unit, remove the filter cover located on the top rear of the appliance, discard the old filters, insert two new filters, and replace the cover. After replacing, plug in the unit and press the 'Bake' and 'Reheat' buttons simultaneously to reset the filter indicator.



MAKES CLEAN UP FASTER
Dishwasher safe basket and non-stick cooking tray

Image: The removable air fry basket and non-stick cooking tray, designed for quick and easy cleanup.

TROUBLESHOOTING

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working 120V outlet.
- **Food Not Cooking Evenly:** Do not overcrowd the air fry basket. Shake or flip food halfway through cooking as prompted by the appliance or as needed.
-

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08V5DPMM5>

More documents and user manuals: <https://manuals.plus/>