

[Manuals.plus](#) /

› [NKF](#) /

› Instruction Manual for NKF EN2G27S Replacement Remote Control

NKF EN2G27S

Instruction Manual

NKF EN2G27S REPLACEMENT REMOTE CONTROL

1. Introduction

This manual provides detailed instructions for the NKF EN2G27S replacement remote control, designed for use with various Sharp Smart LCD LED TV models. This remote control offers a straightforward, ready-to-use solution without the need for complex programming or pairing.

The EN2G27S remote control is an infrared (IR) replacement unit, ensuring compatibility and ease of use with your Sharp television.

2. Package Contents

Upon opening the package, verify that you have received the following item:

- 1 x NKF EN2G27S Replacement Remote Control

Note: Batteries and additional instructions are not included in the package.

3. Setup

The NKF EN2G27S remote control is designed for immediate use without any programming or pairing steps. Simply install the batteries, and it will be ready to operate your compatible Sharp TV.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the EN2G27S remote control with the battery compartment open, illustrating the correct orientation for battery insertion.

4. Operating the Remote Control

Once batteries are installed, the remote control is ready to operate your Sharp TV. Point the remote directly at the TV's infrared sensor.





Image: Front view of the EN2G27S remote control, displaying the button layout.

4.1 Key Functions

- **Power Button:** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **CC (Closed Caption):** Toggles closed captions on/off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Live TV:** Switches to live television broadcast.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **Mute:** Mutes or unmutes the TV audio.
- **Play/Pause, Rewind, Fast Forward:** Media playback controls.
- **Sleep:** Sets a sleep timer for the TV.
- **Netflix, YouTube, Dailymotion, Browser:** Dedicated quick access buttons for these applications.

5. Compatible TV Models

This NKF EN2G27S replacement remote control is compatible with a wide range of Sharp Smart LCD LED TV models, including but not limited to:

- Aquos LC-40N5000, LC-40N5000U, LN-75N8000
- LC-43N5000, LC-43N610, LC-43N6100, LC-43N7000, LC-43N7000U
- LC-50N5000, LC-50N6000, LC-50N7000, LC-50N7000U
- LC-55N6000, LC-55N620CU, LC-55N7000, LC-55N7000U
- LC-60N6200, LC-60N6200U, LC-60N7000, LC-60N7000U
- LC-65N5200, LC-65N5200U, LC-65N7000, LC-65N7000U, LC-65N9000
- LC-75N8000, LN-60N7000
- 43H5C, 43H7C, 50H5C, 50H6B, 50H7GB, 50H8C
- 55H5C, 55H6B, 55H7B, 55H8C, 55H9B
- 65H10B, 65H7B
- Q5000 Series: LC-32Q5100U, LC-32Q5200U, LC-32Q5220U, LC-32Q5230U, LC-32Q5240U, LC-32Q5250U, LC-

If your Sharp TV model is not listed, please refer to your TV's original manual or contact customer support to confirm compatibility.

6. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical agents, as these may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (1.5V AAA alkaline).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

7. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

1. **Remote Not Responding:**

- Ensure the remote is pointed directly at the TV's IR sensor.
- Check the batteries. Replace them with new 1.5V AAA alkaline batteries, ensuring correct polarity (+/-).
- Remove any obstructions between the remote and the TV.

2. **Buttons Not Working:**

- Press each button firmly.
- Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be obstructing them.

3. **Interference:**

- Bright lights (e.g., fluorescent lights, direct sunlight) can interfere with the remote's infrared signal. Try operating the remote in a different lighting condition.
- Other electronic devices emitting IR signals might cause interference. Move such devices away from the TV or remote.

If the issue persists after trying these steps, please refer to the "Support and Contact Information" section.

8. Specifications

Feature	Detail
Model Number	EN2G27S
Brand	NKF
Product Dimensions	7.3 x 1.86 x 0.7 inches
Item Weight	3 ounces

Batteries Required	2 x 1.5V AAA Alkaline Batteries (not included)
Color	Black
Special Feature	Ergonomic design
Compatible Devices	Sharp Smart LCD LED Televisions
Max Supported Devices	1 (Television)
Connectivity Technology	Infrared (IR)

9. Support and Contact Information

For any questions, concerns, or issues regarding your NKF EN2G27S replacement remote control, please do not hesitate to contact our customer support team.

We are committed to resolving any problems you may encounter. Please reach out to us before leaving feedback or initiating a return, and we will assist you promptly.

Contact Method: Please refer to the seller's contact information on the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08V5K3TWS>

More documents and user manuals: <https://manuals.plus/>