

[Manuals.plus](#) /

› [Wessel-Werk](#) /

› Wessel-Werk Pro Performance ClickBrush 18-inch Vacuum Floor Brush User Manual

Wessel-Werk ClickBrush

Wessel-Werk Pro Performance ClickBrush 18-inch Vacuum Floor Brush User Manual

Model: ClickBrush

1. INTRODUCTION

This manual provides instructions for the Wessel-Werk Pro Performance ClickBrush, an 18-inch wide vacuum floor brush designed for both residential and commercial use. It is compatible with 1 1/4 inch (32mm) wet and dry vacuum cleaners. The ClickBrush features an integrated upholstery nozzle for versatile cleaning.



Figure 1: Wessel-Werk Pro Performance ClickBrush, 18-inch model.

2. PRODUCT FEATURES

- **18-inch Wide Floor Brush:** Efficiently cleans large hard floor surfaces such as wood, concrete, laminate, and tile.
- **Integrated Upholstery Nozzle:** Easily detaches by pressing a pedal, revealing a nozzle with lint pickers for cleaning upholstered furniture, pet hair, and tight spaces.
- **Compatibility:** Designed for vacuum hoses with an outer diameter of 32mm (1.25 inch).
- **Swivel Neck:** Allows for flexible maneuverability around obstacles.
- **Soft Roller Wheels:** Two integrated wheels reduce motion resistance and facilitate easy handling.

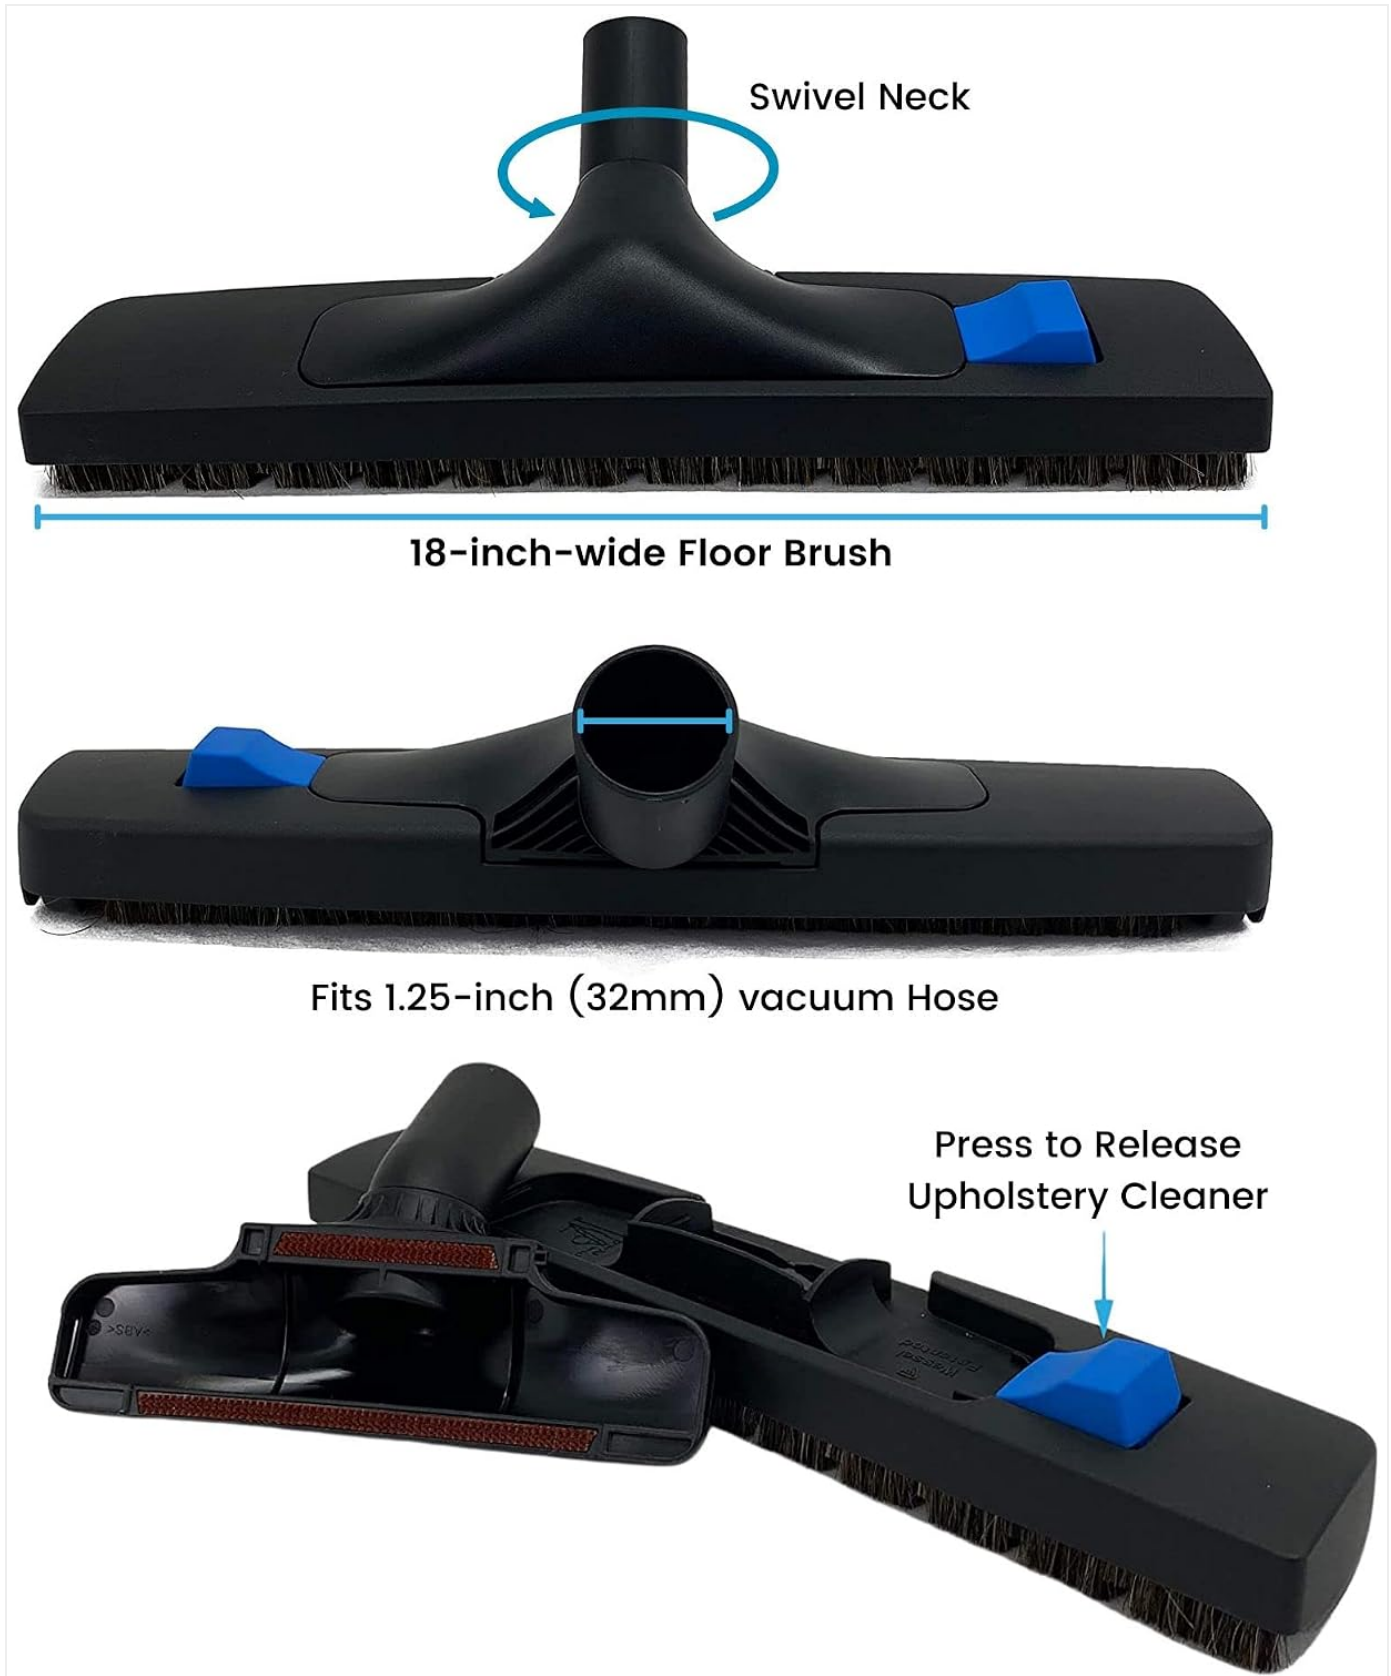


Figure 2: Key features of the ClickBrush, including swivel neck, width, hose compatibility, and upholstery nozzle release mechanism.

3. SETUP AND INSTALLATION

1. **Verify Compatibility:** Ensure your vacuum cleaner hose has an outer diameter of 1 1/4 inch (32mm).
2. **Attach to Vacuum Hose:** Insert the neck of the ClickBrush firmly into the end of your vacuum cleaner's hose or wand. Ensure a snug fit to prevent loss of suction.
3. **Initial Inspection:** Before first use, check that the brush bristles are clean and free from debris.



Figure 3: Side view illustrating the attachment point for the vacuum hose.

4. OPERATING INSTRUCTIONS

4.1. Using the Floor Brush

- Connect the ClickBrush to your vacuum cleaner.
- Turn on your vacuum cleaner.
- Guide the 18-inch wide brush head across hard floor surfaces. The soft bristles are designed for effective cleaning without scratching.
- Utilize the swivel neck to maneuver around furniture legs and other obstacles.

4.2. Using the Integrated Upholstery Nozzle

1. While the floor brush is attached, locate the blue pedal on the top of the brush head.
2. Press the blue pedal firmly. This will release the main floor brush housing, revealing the integrated upholstery nozzle.
3. Use the upholstery nozzle to clean fabrics, furniture, car interiors, and to pick up pet hair. The integrated lint pickers assist in this process.
4. To reattach the floor brush, align the housing with the upholstery nozzle and press down until it clicks securely into place.



Figure 4: The ClickBrush disassembled, showing the main floor brush and the integrated upholstery nozzle.



Figure 5: Underside of the upholstery nozzle, highlighting the lint pickers.

5. MAINTENANCE

- **Bristle Cleaning:** Regularly inspect the floor brush bristles for tangled hair, threads, or debris. Use scissors or a brush to carefully remove any obstructions.
- **Upholstery Nozzle Cleaning:** Clean the lint pickers on the upholstery nozzle as needed to maintain optimal performance.
- **General Cleaning:** Wipe the exterior of the brush with a damp cloth to remove dust and dirt. Do not immerse the entire brush in water.
- **Storage:** Store the ClickBrush in a clean, dry place when not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Reduced suction power	Loose connection to vacuum hose. Clogged bristles or nozzle. Vacuum cleaner itself has low suction.	Ensure the brush is firmly attached to the vacuum hose. Clean bristles and upholstery nozzle of any debris. Verify your vacuum cleaner's filter and bag/canister are clean and not full. Note that wider brushes may require more powerful vacuums for optimal edge-to-edge suction.
Brush not gliding smoothly	Debris caught in wheels. Excessive pressure applied.	Check and clean the soft roller wheels. Apply gentle, consistent pressure. The wheels are designed for easy movement.
Upholstery nozzle difficult to release/reattach	Misalignment. Debris in the locking mechanism.	Ensure proper alignment before pressing the pedal or reattaching. Inspect the locking mechanism for any trapped debris and remove it.

7. SPECIFICATIONS

Feature	Detail
Brand	Wessel-Werk
Model Name	ClickBrush
Style	18 in. Floor Brush
Compatibility	1 1/4 inch (32mm) vacuum hoses
Special Features	18-inch-wide Floor Brush, 2 Soft Roller Wheels, Multifunctional (integrated upholstery nozzle), Soft Natural Bristle Floor Brush, Swivel Neck
Included Components	ClickBrush Vacuum Floor Brush Nozzle, Vacuum Upholstery Nozzle
Recommended Uses	Car, Furniture, Hard Floor, Hardwood, Home, Office
Color	Black
Product Dimensions	6 x 18 x 3 inches
Item Weight	1 pound

Feature	Detail
Indoor/Outdoor Usage	Indoor
UPC	761062696791

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Wessel-Werk Pro Performance ClickBrush, please refer to the documentation provided with your original purchase or contact Wessel-Werk customer service directly. Contact details can typically be found on the manufacturer's official website.

For additional information, you may visit the [Wessel-Werk Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question