



Manuals.plus /

› OUKANING /

› OUKANING 42-inch Crystal Retractable Ceiling Fan with LED Light and Remote Control User Manual

OUKANING B08V89H5JD

OUKANING 42-inch Crystal Retractable Ceiling Fan with LED Light and Remote Control

Model: B08V89H5JD

Brand: OUKANING

[Introduction
Instructions](#)

[Safety Instructions
Maintenance](#)

[Package Contents
Troubleshooting](#)

[Setup & Installation
Specifications](#)

[Operating
Warranty & Support](#)

INTRODUCTION

Thank you for purchasing the OUKANING 42-inch Crystal Retractable Ceiling Fan. This product combines the functionality of a ceiling fan with the aesthetic appeal of a crystal chandelier, featuring retractable blades and an LED dimmable light. This manual provides essential information for safe installation, operation, and maintenance of your new ceiling fan. Please read it thoroughly before installation and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or personal injury, please follow these guidelines:

- **Read all instructions carefully** before beginning installation.
- **Consult a qualified electrician** if you are unfamiliar with electrical wiring.
- **Disconnect power** at the main circuit breaker before installation or servicing.
- **Ensure the mounting structure** can support the weight of the fan (approximately 27.4 pounds).
- **Install the fan** at a height where blades are at least 7 feet (2.1 meters) from the floor.
- **Do not bend** the blade holders during installation or cleaning.
- **Avoid placing objects** in the path of the fan blades.
- **Use only UL Listed** components and accessories provided by the manufacturer.
- **This fan is designed for indoor use only.**
- **Ceiling height must be greater than 110 inches** for proper installation.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Retractable Ceiling Fan x 1
- Screws sets x 1
- Down rods x 2 (10CM & 20CM)
- Remote control x 1
- Instruction Manual x 1 (This document)



Image: The OUKANING 42-inch Crystal Retractable Ceiling Fan, showcasing its design with the blades retracted.

SETUP AND INSTALLATION

Professional installation is recommended. Ensure power is disconnected before proceeding.

1. Pre-Installation Considerations

- **Ceiling Type:** This chandelier is suitable for flat roof concrete ceilings. For gypsum board and wood ceilings, a remodeling bracket (not included) is required.
- **Ceiling Height:** The ceiling height must be greater than 110 inches (approximately 9.17 feet) for safe and proper operation.
- **Support Weight:** The ceiling junction box and support structure must be capable of supporting at least 110 pounds (50 kg).

2. Mounting Bracket Installation

1. Turn off power at the circuit breaker.
2. Secure the mounting bracket to the ceiling junction box. Ensure all screws are tightened securely.

3. Down Rod Assembly

- Select either the 10CM or 20CM down rod based on your desired fan height.
- Feed the electrical wires from the fan motor through the chosen down rod.
- Attach the down rod to the fan motor assembly, securing it with the provided pin and screws.



Image: Detail of the downrod and canopy connection, showing how the fan attaches to the ceiling mount.

4. Wiring Connections

1. Carefully lift the fan assembly and hang it on the mounting bracket hook (if available) to free your hands for wiring.
2. Connect the electrical wires according to standard wiring codes:
 - Black wire (Live) to Black wire (Live)
 - White wire (Neutral) to White wire (Neutral)
 - Green/Bare Copper wire (Ground) to Green/Bare Copper wire (Ground)
3. Ensure all connections are secure using wire nuts.

5. Final Assembly

1. Carefully position the fan canopy over the mounting bracket, aligning the screw holes.
2. Secure the canopy to the mounting bracket with the provided screws.
3. Ensure all components are firmly attached and there is no wobbling.



Image: The OUKANING ceiling fan installed in a modern living room, demonstrating its aesthetic integration.



Image: The OUKANING ceiling fan installed in a bedroom, showing its suitability for various room types.

OPERATING INSTRUCTIONS

Your OUKANING ceiling fan is controlled by the included remote control. Ensure the remote has working batteries installed.





Image: The OUKANING ceiling fan with its blades extended, alongside the remote control for operation.

Remote Control Functions:

- **Light Control:**

- Press the light button to cycle through light temperatures: Warm Light, Neutral Light, White Light.
- Press and hold the light button to dim or brighten the light.

- **Fan Speed Control:**

- Press the fan speed buttons (e.g., "High", "Mid", "Low") to adjust the fan's rotation speed.
- The fan blades will automatically extend when the fan is turned on and retract when turned off.
- **Fan On/Off:** Use the dedicated fan power button to turn the fan on or off.
- **Light On/Off:** Use the dedicated light power button to turn the light on or off.
- **Timing Function:** Some remotes may include a timer function to automatically turn off the fan after a set period. Refer to your remote's specific markings.



Image: A detailed view of the crystal embellishments and the central LED light panel of the fan.



Image: A close-up of the LED light source, showing the individual LED components.



Image: A detailed view of one of the transparent retractable fan blades.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:**

- Before cleaning, ensure the power is turned off at the circuit breaker.
- Wipe the fan housing and blades with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For crystal components, use a soft, lint-free cloth, possibly dampened with a mild glass cleaner, then dry thoroughly.

- **Blade Inspection:** Periodically check the fan blades for any signs of damage or imbalance.

- **Tighten Fasteners:** Annually, check all screws and fasteners on the fan and mounting hardware to ensure they are secure.

TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery dead.	Check circuit breaker; Verify all wire connections are secure; Replace remote control batteries.
Fan wobbles	Loose mounting screws; Unbalanced blades; Improper down rod installation.	Tighten all mounting screws; Ensure blades are securely attached; Re-check down rod installation.
Light does not work	Loose wire connection; LED driver issue; Remote control battery dead.	Check light wiring connections; Contact customer support if LED driver is suspected; Replace remote control batteries.
Remote control not working	Dead batteries; Remote not paired (if applicable); Obstruction between remote and receiver.	Replace batteries; Refer to remote pairing instructions (if provided separately); Ensure clear line of sight.
Blades do not retract/extend	Motor obstruction; Mechanical issue.	Ensure no obstructions are present; If issue persists, contact customer support.

SPECIFICATIONS

Brand	OUKANING
Model	42-inch Crystal Retractable Ceiling Fan (ASIN: B08V89H5JD)
Material	Metal, ABS, Crystal
Fan Size (Expanded)	42 inches (107 CM)
Fan Size (Retracted)	18.1 inches (46 CM)
Vertical Height	Approximately 15.7 inches (40 CM) with 10CM rod
Voltage	110V
Light Source Type	LED (Dimmable, 3 Color Temperatures)
Control Method	Remote Control
Motor Type	Pure Copper Mute Motor
Applicable Space	Recommended 10-25 square meters (Living Room, Bedroom, Kitchen, Restaurant)
Item Weight	27.4 pounds
Certification	UL Listed



Image: Dimensional diagram of the fan, indicating a 42-inch expanded diameter and various height measurements.

WARRANTY AND SUPPORT

OUKANING products are manufactured to high-quality standards. This product is UL Listed, ensuring compliance with safety standards.

For warranty information, technical support, or replacement parts, please contact your retailer or the OUKANING customer service department. Please have your model number (B08V89H5JD) and purchase date available when contacting support.

Note: The manufacturer's warranty typically covers defects in materials and workmanship under normal use. Damage resulting from improper installation, misuse, or unauthorized repairs may not be covered.

