

[manuals.plus](#) /

› [WINFLIKE](#) /

› [WINFLIKE QXE1047 Replacement Remote Control for Pioneer CD RDS Receivers User Manual](#)

## WINFLIKE QXE1047

# WINFLIKE QXE1047 Replacement Remote Control User Manual

For Pioneer CD RDS Receivers

## INTRODUCTION

This manual provides instructions for the WINFLIKE QXE1047 Replacement Remote Control. This remote is designed to operate various Pioneer CD RDS Receiver models, offering a convenient way to control your audio system. It is compatible with models such as DEH-150MP, DEH-140UBB, DEH-6250BT, DEH-1950, DEH-141UB, DEH-142UB, DEH-4050UB, DEH-15MP, DEH-14UB, DEH-140UB, QXA3196, CXC8885, and CXE3669.



Image: Front view of the WINFLIKE QXE1047 Replacement Remote Control, showing all buttons and their labels.

## SETUP

### Battery Installation

The QXE1047 remote control requires two (2) AAA batteries for operation. No programming or setup is required; simply insert the batteries correctly, and the remote will be ready for use.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image: Side view of the WINFLIKE QXE1047 Replacement Remote Control. The battery compartment is located on the back of the remote, typically accessed by sliding a cover.

## OPERATING INSTRUCTIONS

Point the remote control directly at your Pioneer CD RDS Receiver. Ensure there are no obstructions between the remote and the receiver's infrared sensor. The remote provides direct access to common functions:

- **VOLUME +/-**: Adjusts the audio output level.
- **MUTE**: Silences the audio output. Press again to restore sound.
- **BAND/ESC**: Switches between radio bands (e.g., FM1, FM2, AM) or exits a menu/function.
- **DISC/P.CH**: Selects disc playback or changes preset radio channels.
- **LIST/ENTER (Center Button)**: Confirms selections or enters menus.
- **Directional Arrows (Up/Down/Left/Right)**: Navigates through menus, lists, or tracks.
- **TRACK/SEEK (Left/Right Arrows)**: Skips tracks forward/backward or seeks radio stations.
- **FUNCTION**: Cycles through various functions or modes of the receiver.
- **SRC (Source)**: Changes the audio input source (e.g., CD, Radio, USB, AUX).
- **AUDIO**: Accesses audio settings like bass, treble, balance, or fader.
- **DISP (Display)**: Changes the information shown on the receiver's display.
- **SCRL (Scroll)**: Scrolls through text or lists on the display.
- **Play/Pause (||)**: Plays or pauses media playback.

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

### Battery Care

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the remote. Replace batteries when the remote's response becomes sluggish or inconsistent.

## TROUBLESHOOTING

---

### Remote Not Responding

- **Check Batteries**: Ensure that two fresh AAA alkaline batteries are correctly installed with the proper polarity (+/-).
- **Line of Sight**: Verify that there are no obstructions between the remote control and the infrared sensor on your Pioneer receiver. The remote requires a clear line of sight to function.
- **Distance**: Ensure you are within the effective operating range of the remote control.
- **Receiver Power**: Confirm that your Pioneer CD RDS Receiver is powered on.

If you continue to experience issues after performing these checks, please refer to the support section for further assistance.

## SPECIFICATIONS

---

Feature	Detail
Model Number	QXE1047 (WL-QXE1047-DHF-S1)

Feature	Detail
<b>Product Dimensions</b>	8.7 x 2 x 0.6 inches
<b>Item Weight</b>	3 ounces
<b>Batteries Required</b>	2 AAA batteries
<b>Special Features</b>	Ergonomic, Lightweight, No Programming Required
<b>Max Number of Supported Devices</b>	18 (referring to the number of Pioneer models it can replace)
<b>Compatible Devices</b>	Pioneer CD RDS Stereo Systems (e.g., DEH-150MP, DEH-140UBB, DEH-6250BT)
<b>Connectivity Technology</b>	Infrared

## SUPPORT

For any questions, concerns, or issues regarding your WINFLIKE QXE1047 Replacement Remote Control, please contact the manufacturer or seller for further assistance. They are available to provide support for product-related inquiries.