



Manuals.plus /

› SUPRENT /

› SUPRENT HC596SX Professional Hair Clipper and Trimmer User Manual

SUPRENT HC596SX

SUPRENT HC596SX Professional Hair Clipper and Trimmer User Manual

Model: HC596SX | Brand: SUPRENT

INTRODUCTION

This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your SUPRENT HC596SX Professional Hair Clipper and Trimmer. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The SUPRENT HC596SX professional hair clipper and detail trimmer, showcasing their sleek design and LED displays.

SAFETY INFORMATION

- Read all instructions carefully before use and follow them.
- Do not use on persons under 18 years of age.
- Keep the appliance dry. Do not immerse in water or use near water.
- Keep out of reach of children.
- Always check the blades for damage before use. Do not use if blades are damaged.
- Only use the provided charging cable and adapter.
- Unplug the appliance before cleaning.

PACKAGE CONTENTS

Your SUPRENT HC596SX kit includes the following items:

- 1 x Cordless Hair Clipper
- 1 x Detail Trimmer (T-blade)

- 6 x Guide Combs for Clipper (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm)
- 3 x Guide Combs for Detail Trimmer (2mm, 3mm, 4mm)
- 1 x Barber Cape
- 1 x Lubricating Oil
- 1 x Cleaning Brush
- 1 x USB-C Charging Cable
- 1 x Hairdressing Comb

PRODUCT FEATURES

Blades and Cutting Performance

The SUPRENT HC596SX features sharp, durable stainless steel blades designed for smooth and close cutting. The main clipper offers an adjustable cutting length, while the detail trimmer provides precise 0.1mm cuts for intricate styling.

CARBON STEEL BLADE WITH ADJUSTABLE LENGTH

FOR SMOOTH & CLOSE CUTTING

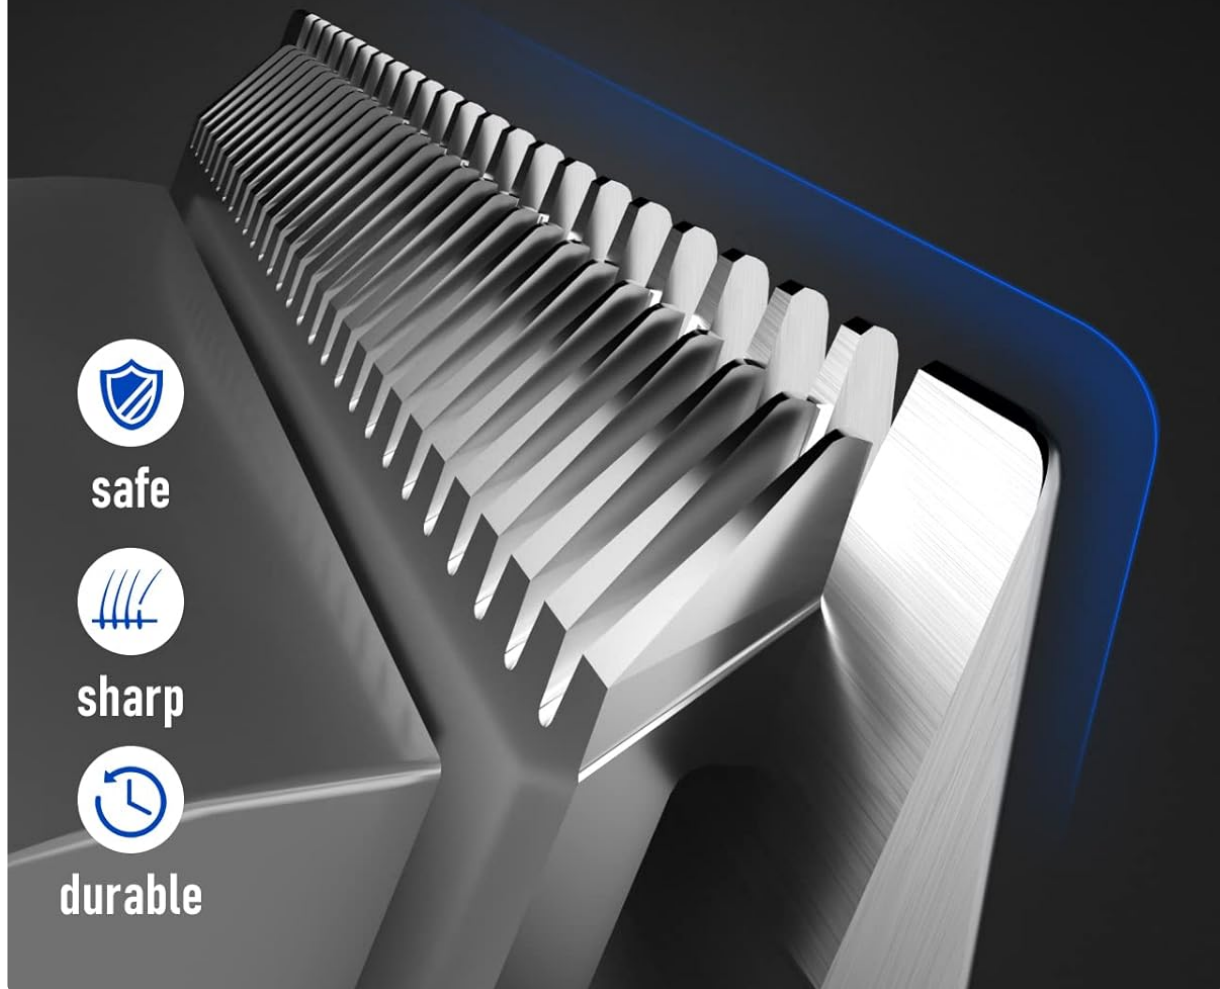


Image: A close-up view of the carbon steel blade, highlighting its sharp teeth and adjustable length mechanism for smooth and close cutting.



Image: Illustration of the self-sharpening stainless steel blades, emphasizing their effectiveness and precision for consistent performance.

Power and Battery

Equipped with a high-capacity 2500 mAh lithium-ion battery, the clipper provides up to 5 hours of continuous use after a 180-minute charge. The integrated digital LED display shows the remaining battery charge and provides lubrication reminders.



Image: An internal view of the clipper showing the LED display indicating power status and the large capacity battery, providing over 180 minutes of use.

Motor Performance

A powerful 6000 RPM motor ensures high performance, saves time, and operates with low noise (below 65dB), preventing hair pulling during use.



Image: An illustration of the clipper's internal 6000 RPM powerful motor, designed for high performance, time-saving, and quiet operation without pulling hair.

Charging

The device is conveniently rechargeable via a USB-C cable, offering flexible charging options.

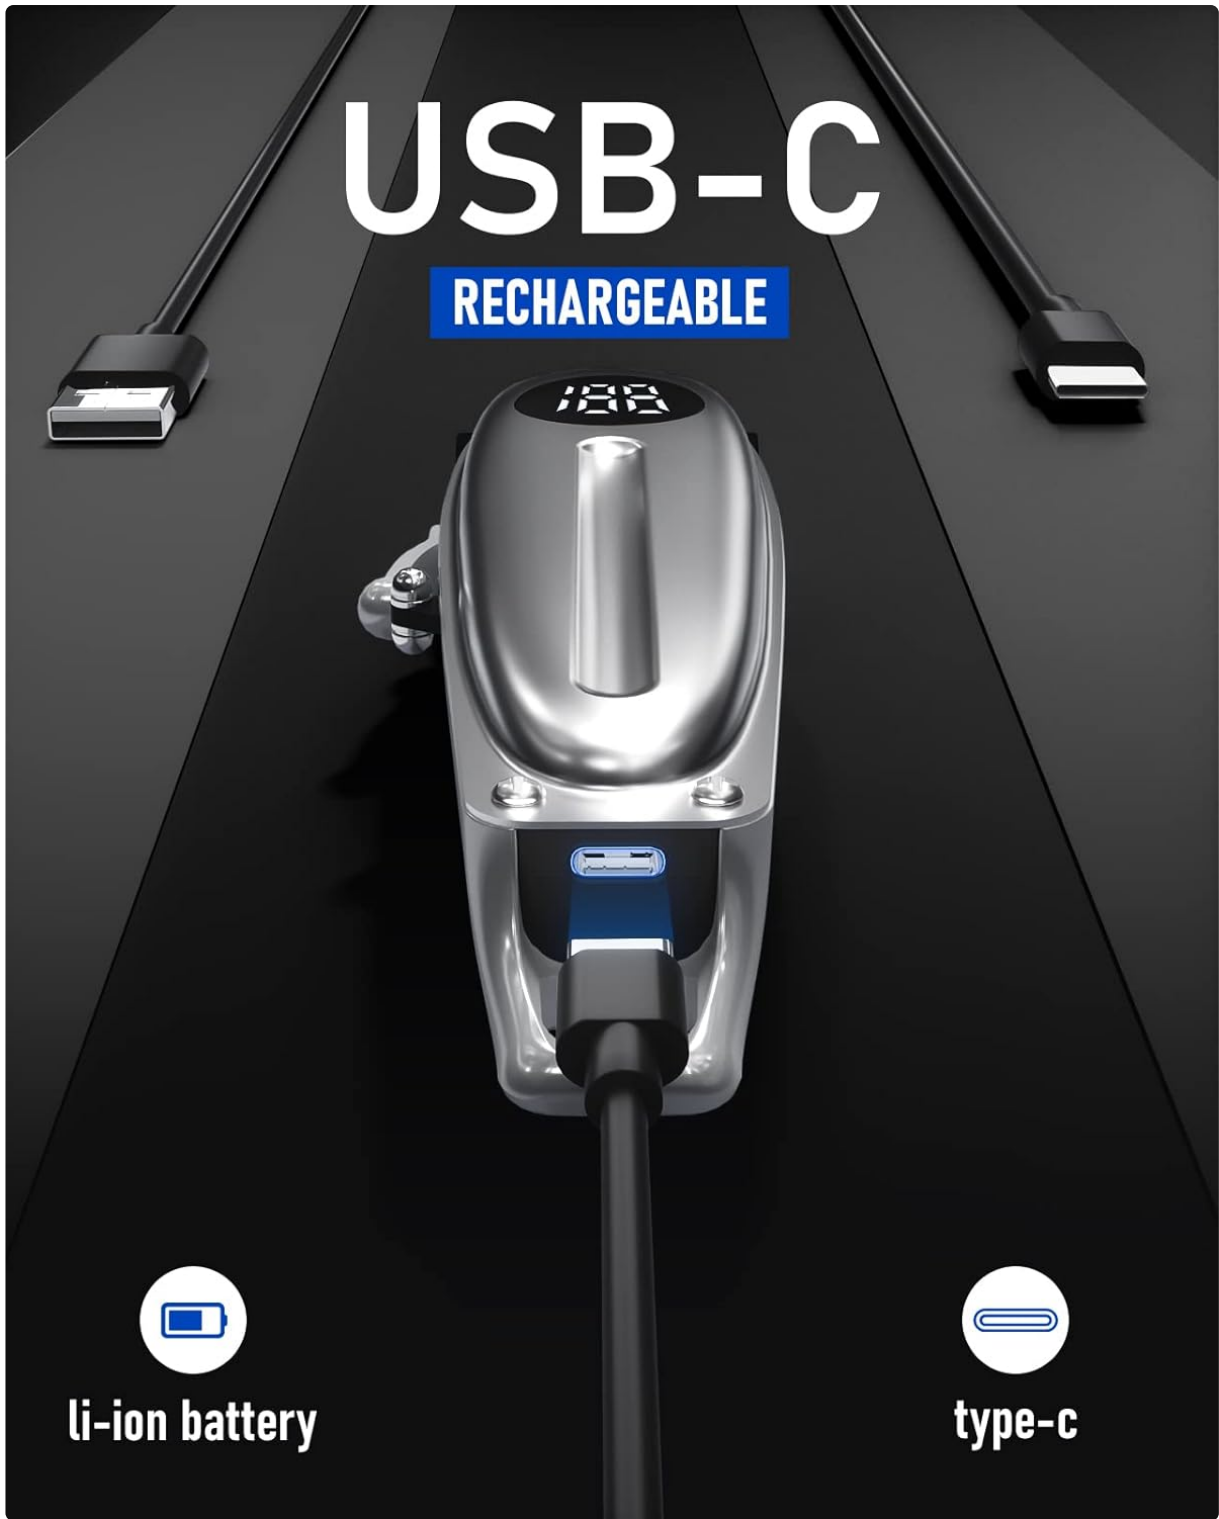


Image: The clipper connected to a USB-C charging cable, illustrating its modern and convenient charging method.

Temperature Control

Integrated thermostatic technology helps maintain a constant temperature, providing gentle care and preventing scalding during use.

BE HOT

DON'T BE HEAT

Thermostatic tech for gentle care and prevent scalding



Constant
Temperature



Skin Care



Image: A visual representation of the clipper's thermostatic technology, ensuring constant temperature for gentle care and skin protection.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the clipper and detail trimmer. Connect the USB-C cable to the device and a suitable USB power adapter (not included). The LED display will indicate charging status.
3. **Lubricate Blades:** Apply a few drops of the included lubricating oil to the blades before the first use and after each cleaning. This ensures optimal performance and longevity.
4. **Attach Guide Comb:** Select the desired guide comb and securely attach it to the clipper or detail trimmer. Ensure it clicks into place.

OPERATING INSTRUCTIONS

General Use

1. Ensure the device is fully charged.
2. Turn on the clipper/trimmer using the power button.
3. For the main clipper, adjust the blade lever to your desired cutting length if not using a guide comb.
4. Move the clipper against the direction of hair growth for an even cut.
5. For detailing, use the T-blade trimmer without a comb for precise lines and edges.



Images: Examples of using the clipper for neck trimming and the detail trimmer for precise styling.

Using Guide Combs

- Select the appropriate guide comb for your desired hair length.
- Attach the comb firmly to the blade.
- Start with a longer comb if unsure, and gradually switch to shorter combs for a closer cut.

Adjusting Blade Length (Main Clipper Only)

The main clipper features a taper lever on the side. Move the lever up or down to adjust the cutting length of the blade without changing guide combs. This allows for blending and fading.



Image: A close-up of the blade adjustment lever on the side of the clipper, used for fine-tuning cutting length.

MAINTENANCE

Cleaning the Blades

1. Turn off the clipper/trimmer and disconnect it from the power source.
2. Remove any attached guide combs.
3. Use the cleaning brush to remove loose hairs from the blades.
4. The stainless steel head can be easily detached and washed with water. **Note:** It is recommended to wipe the device dry after cleaning to prevent rust.

Lubrication

After each cleaning or if the blades feel sluggish, apply 1-2 drops of the included lubricating oil to the blades. Turn on the clipper for a few seconds to distribute the oil evenly.

Storage

Store the clipper and all accessories in a dry, cool place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery.	Charge the device fully.
Blades pull hair or cut poorly.	Blades are dull, dirty, or not lubricated.	Clean and lubricate the blades. If problem persists, blades may need replacement.
Device gets hot during use.	Extended continuous use or dirty blades.	Allow the device to cool down. Clean and lubricate blades. Ensure proper ventilation.
LED display not working.	Device malfunction.	Contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	HC596SX
Brand	SUPRENT
Power Source	Battery (Cordless)
Battery Type	1 Lithium-polymer battery (included)
Battery Capacity	2500 mAh
Charging Time	Approx. 180 minutes
Operating Time	Up to 5 hours
Charging Port	USB-C
Blade Material	9Cr18Mo Stainless Steel
Motor Speed	6000 RPM
Product Dimensions	23 x 15.2 x 8.2 cm
Product Weight	930 g

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact SUPRENT customer service directly. Keep your purchase receipt as proof of purchase.