

[manuals.plus](#) /› [Mattel](#) /› [Mattel Jurassic World Camp Cretaceous Chompin' Carnotaurus Toro Dinosaur Toy Instruction Manual](#)**Mattel HBY85**

Mattel Jurassic World Camp Cretaceous Chompin' Carnotaurus Toro Dinosaur Toy Instruction Manual

Model: HBY85

1. PRODUCT OVERVIEW

The Mattel Jurassic World Camp Cretaceous Chompin' Carnotaurus Toro Dinosaur Toy is an interactive action figure inspired by the animated series. This figure features authentic sculpting, texture, and color, along with exciting motion and sound capabilities designed for engaging play.



Figure 1: Chompin' Carnotaurus Toro Dinosaur Toy

2. SETUP

2.1 Unboxing

Carefully remove the dinosaur figure from its packaging. Ensure all components are present. The package includes one Jurassic World Chompin' Carnotaurus Toro dinosaur figure.



Figure 2: Product in original packaging

2.2 Battery Installation

The figure requires 3 LR44 button-cell batteries, which are included. If replacement is needed, locate the battery compartment on the underside of the figure, open it with a small screwdriver, and replace the batteries, ensuring correct polarity. Securely close the compartment.

3. OPERATING INSTRUCTIONS

The Chompin' Carnotaurus Toro features multiple interactive movements and sounds:

- **Tail-Activated Head Movement and Chomping:** Hold the figure by its tail and twist it to make the head move and jaws chomp. Alternatively, press the button located under the tail to activate an outstretched neck and chomping bite.



Figure 3: Tail-activated head movement

- **Head-Activated Eye Movement and Sounds:** Gently stroke or press the button on the top of the dinosaur's head to make its eyes close and produce various sounds. This feature simulates a temporarily tamed dinosaur.



Figure 4: Head-activated eye movement

- **Articulated Limbs:** The figure's legs and arms are articulated, allowing for various poses and dynamic play scenarios.



Figure 5: Detailed view of the chomping action

3.1 Product Demonstration Video

Your browser does not support the video tag.

Video 1: A detailed demonstration of the Chompin' Carnotaurus Toro's features, including its various movements and sounds.

4. MAINTENANCE

4.1 Cleaning

To clean the dinosaur figure, wipe it with a damp cloth. Do not submerge the toy in water or use harsh chemicals, as this may damage the electronic components and paint finish.

4.2 Battery Replacement

If the sounds or movements become weak or stop functioning, it may be time to replace the batteries. Refer to Section 2.2 for battery installation instructions. Always use 3 new LR44 button-cell batteries for optimal performance.

5. TROUBLESHOOTING

5.1 No Sound or Movement

- Ensure the batteries are correctly installed with the proper polarity.
- Replace old batteries with new LR44 button-cell batteries.
- Check for any obstructions in the moving parts of the figure.

6. SPECIFICATIONS

- **Product Dimensions:** 5 x 5 x 5 inches
- **Item Weight:** 3.52 ounces
- **Item Model Number:** HBY85
- **Manufacturer Recommended Age:** 4 years and up
- **Batteries:** 3 LR44 batteries required (included)
- **Manufacturer:** Mattel
- **Release Date:** June 19, 2021

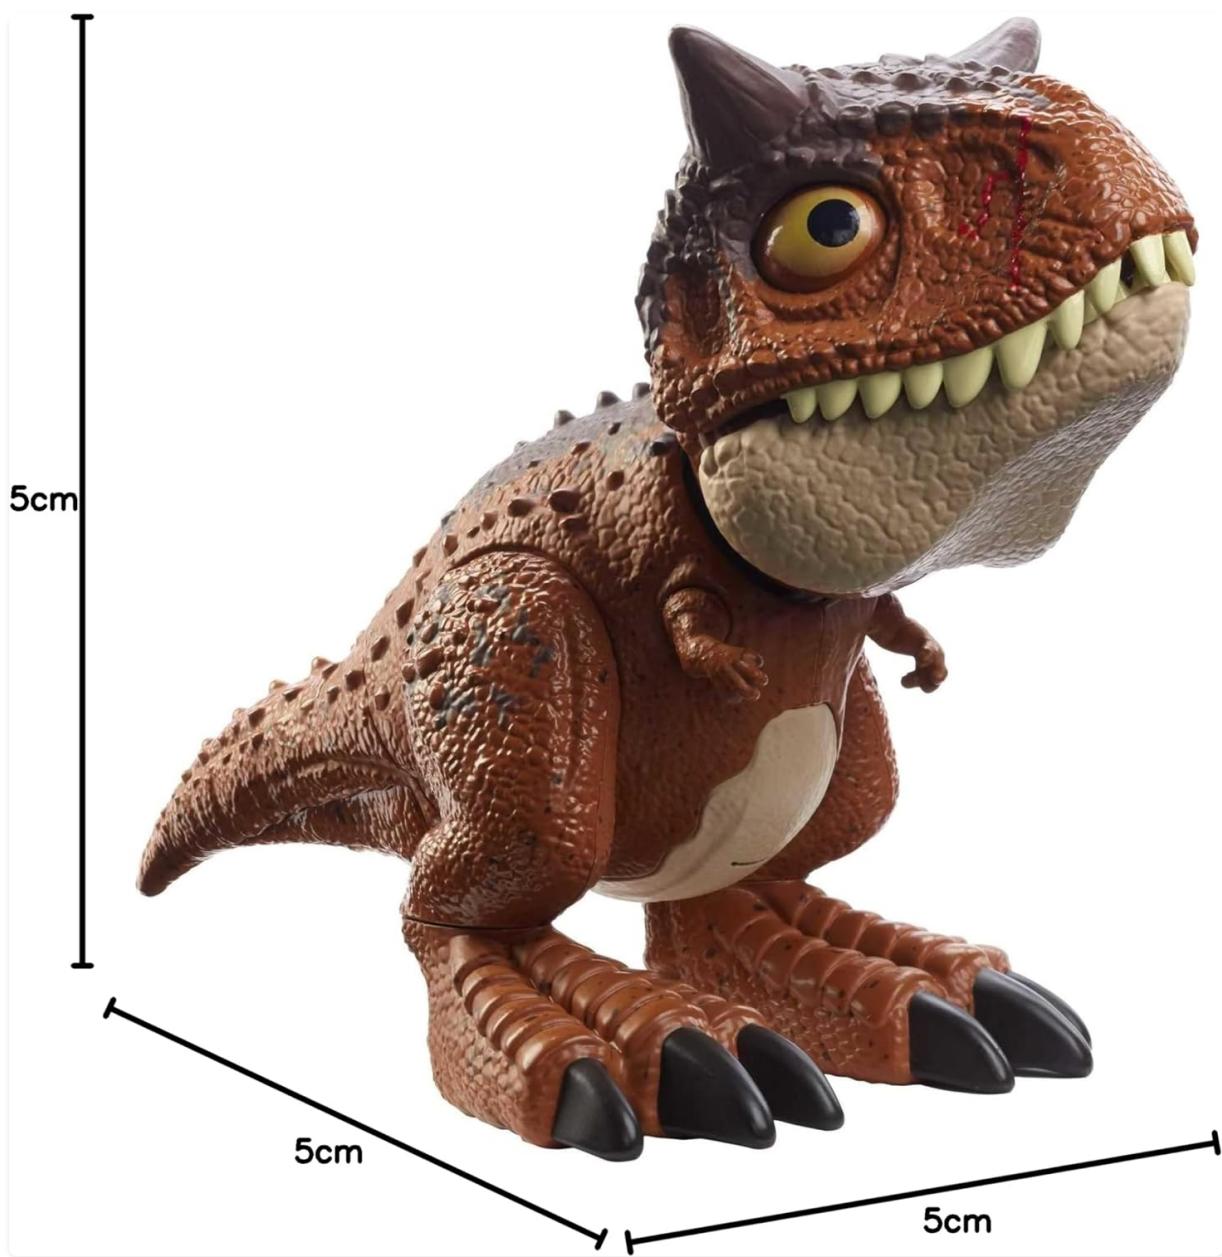


Figure 6: Product dimensions

7. WHAT'S IN THE Box

- One (1) Jurassic World Chompin' Carnotaurus Toro dinosaur figure.


8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the official Mattel website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Visit the [Mattel Store](#) for more products and information.

Related Documents - HBY85

	<p>Jurassic World Super Colossal Tyrannosaurus Rex Assembly and Play Instructions</p> <p>Comprehensive assembly and play guide for the Jurassic World Super Colossal Tyrannosaurus Rex toy. Learn how to attach parts, operate the mouth for storing mini dinosaurs, and release them. Includes official Mattel contact information for various regions.</p>
	<p>Jurassic World Rebirth Dinosaur Toy: Instructions and Features</p> <p>Official instructions and features for the Jurassic World Rebirth dinosaur toy by Mattel. Learn how to play, replace batteries, and access the companion app.</p>
	<p>Jurassic World Dominion Strike 'n Roar Giganotosaurus Toy Instructions</p> <p>Instruction manual for the Jurassic World Dominion Strike 'n Roar Giganotosaurus action figure by Mattel. Learn how to play, activate sounds and actions, and replace batteries.</p>
	<p>Jurassic World Rebirth Mask: Instructions and Battery Replacement Guide</p> <p>Official instructions for the Jurassic World Rebirth mask by Mattel. Learn how to wear the mask, activate roaring sounds, and replace the AG13/LR44 batteries. Includes important safety and care information.</p>

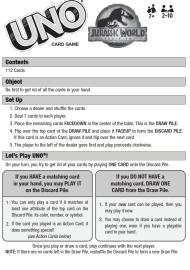	<p>Cruncher™ Owner's Guide: Interactive Toy Dinosaur Instructions</p> <p>Comprehensive owner's guide for the Mattel Cruncher™ toy (Model R2011-0920). Learn how to install batteries, operate controls, explore play modes, and troubleshoot issues for this interactive prehistoric pet.</p>
	<p>UNO Jurassic World Dominion Card Game: Rules and How to Play</p> <p>Complete guide to the UNO Jurassic World Dominion card game by Mattel. Learn setup, gameplay, action cards, scoring, and winning conditions.</p>