

[Manuals.plus](#) /

> [Vaydeer](#) /

> VAYDEER Volume Control Knob Instruction Manual for Model AUB08V95ZZLM

Vaydeer AUB08V95ZZLM

VAYDEER Volume Control Knob Instruction Manual

Model: AUB08V95ZZLM

Brand: VAYDEER

1. SETUP

The VAYDEER Volume Control Knob is designed for easy plug-and-play functionality, requiring no additional drivers for most operating systems. Simply connect the device to your computer using the provided USB cable.

1.1 Package Contents

- VAYDEER Volume Control Knob
- USB Cable (USB-C to USB-A)

1.2 Connecting the Device

1. Connect the USB-C end of the provided cable to the port on the VAYDEER Volume Control Knob.
2. Connect the USB-A end of the cable to an available USB port on your computer (Windows 7/8/10 or Mac).
3. The device is driver-free and should be recognized automatically by your operating system.



Image 1.1: The VAYDEER Volume Control Knob connected to a laptop via its USB cable. The device features a central rotary knob and several control buttons.

1.3 Setup Overview Video

Your browser does not support the video tag.

Video 1.1: An official VAYDEER video demonstrating the unboxing and initial connection of the Multimedia Controller Knob to a computer, highlighting its plug-and-play nature.

2. OPERATING INSTRUCTIONS

The VAYDEER Volume Control Knob provides intuitive controls for managing your computer's audio and media playback.

2.1 Volume Adjustment and Mute Function

- **Rotate the Knob:** Turn the large central knob clockwise to increase volume and counter-clockwise to decrease volume.
- **One-Click Mute:** Press the central knob once to mute the audio. Press it again to unmute and resume playback.

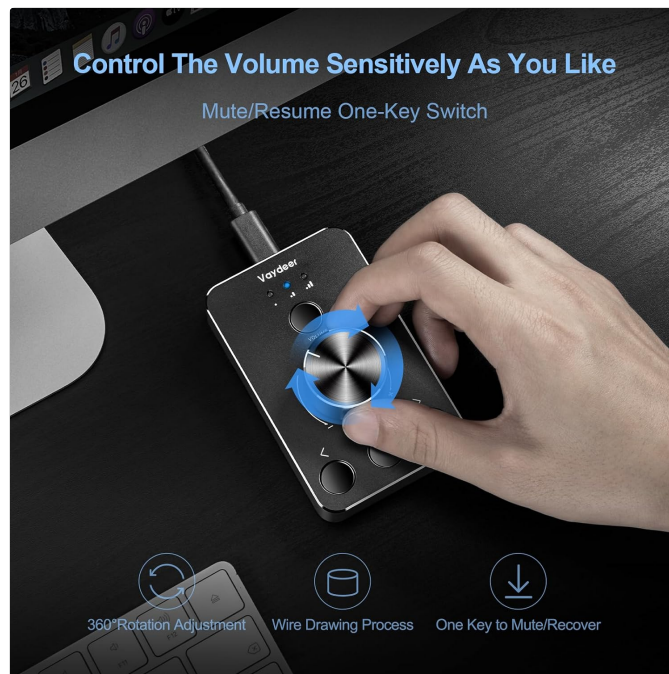


Image 2.1: A hand demonstrating the rotation of the main knob for volume control and pressing it for the one-key mute/unmute function.

2.2 Volume Control Modes

The device features three distinct volume control modes, allowing for fine-tuned or rapid adjustments. These modes are indicated by three LED lights at the top of the device.

- **Mode 1 (Smallest Light):** Increases/decreases volume by 2 points per step.
- **Mode 2 (Middle Light):** Increases/decreases volume by 4 points per step.
- **Mode 3 (Largest Light):** Increases/decreases volume by 10 points per step.



Image 2.2: A detailed diagram illustrating the three volume control modes (2, 4, or 10 points per step) and the functions of the play/pause and track skip buttons.

2.3 Media Playback Controls

Below the main volume knob, there are three additional buttons for media playback control:

- **Left Button (<):** Skips to the previous track.
- **Middle Button (Play/Pause):** Toggles play and pause for media.
- **Right Button (>):** Skips to the next track.

Your browser does not support the video tag.

Video 2.3: An official VAYDEER video demonstrating the one-click mute function and the media playback controls (play/pause, next/previous track) of the Multimedia Knob.

3. MAINTENANCE

To ensure the longevity and optimal performance of your VAYDEER Volume Control Knob, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the device. Avoid abrasive cleaners or solvents that could damage the metal finish or rubberized base.
- **Cable Care:** The USB cable is removable. Handle it gently to prevent bending or fraying. If the cable becomes damaged, it can be replaced with a compatible USB-C to USB-A cable.
- **Storage:** Store the device in a cool, dry place when not in use.

4. TROUBLESHOOTING

If you encounter any issues with your VAYDEER Volume Control Knob, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device not recognized / Not functioning	Loose USB connection, faulty USB port, or temporary software glitch.	Ensure the USB cable is securely connected to both the knob and the computer. Try a different USB port or restart your computer. Reconnecting the USB cable often resolves temporary disconnections.
Volume adjustment is too sensitive or not sensitive enough	Incorrect volume control mode selected.	Press the top button on the device to cycle through the three volume control modes (2, 4, or 10 points per step) until you find your preferred sensitivity.
LED lights are too bright	This is a characteristic of the device's design.	While not a malfunction, some users find the LEDs bright. Consider repositioning the device or using a dimmer sticker if desired.

5. SPECIFICATIONS

Below are the technical specifications for the VAYDEER Volume Control Knob:

Feature	Detail
Brand	Vaydeer

Feature	Detail
Model Name	one key mute function
Model Number	AUB08V95ZZLM
Connectivity Technology	USB
Compatible Devices	Windows (7/8/10), Mac
Control Type	Push Button, Dial
Control Method	Touch
Material Type	Aluminum
Color	Black
Product Dimensions (D x W x H)	1.38" x 2.4" x 3.82"
Included Components	USB Cable
UPC	769044131315

6. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your VAYDEER Volume Control Knob, please refer to the product packaging or contact VAYDEER customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.

© 2026 VAYDEER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question