

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Oster](#) /

› [Oster PrimaLatte BVSTEM6603R Automatic Espresso Maker User Manual](#)

Oster BVSTEM6603R

Oster PrimaLatte BVSTEM6603R Automatic Espresso Maker User Manual

Model: BVSTEM6603R

1. INTRODUCTION

Thank you for choosing the Oster PrimaLatte BVSTEM6603R Automatic Espresso Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new espresso machine. Please read all instructions carefully before first use and retain this manual for future reference.

CAFETERA AUTOMÁTICA - de - ESPRESSO

PrimaLATTE™



The Oster PrimaLatte BVSTEM6603R Red Automatic Espresso Maker, compatible with Dolce Gusto capsules, shown with a prepared latte.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Oster PrimaLatte BVSTEM6603R espresso maker for optimal use.



Diagram illustrating key components of the Oster PrimaLatte BVSTEM6603R: 15-bar Italian pump, water tank, removable milk tank, portafilter, adjustable tray, and power button.

Included Accessories


ACCESORIOS INCLUIDOS



Portafiltro para cápsulas Dolce Gusto*



Portafiltro para café molido

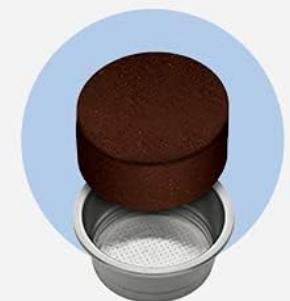

Filtro para café molido doble



Filtro para café molido simple



Included accessories for the Oster PrimaLatte BVSTEM6603R: a portafilter for Dolce Gusto capsules, a portafilter for ground coffee, a double shot filter, and a single shot filter.

- **Portafilter for Ground Coffee:** For use with loose ground coffee.
- **Single Shot Filter:** For preparing a single serving of espresso with ground coffee.
- **Double Shot Filter:** For preparing a double serving of espresso with ground coffee.
- **Portafilter for Dolce Gusto Capsules:** For use with compatible Dolce Gusto capsules.
- **Measuring Spoon with Tamper:** For accurate coffee measurement and tamping.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components and accessories are present.
2. **Initial Cleaning:** Wash the water tank, milk tank, portafilters, and filters with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Positioning:** Place the espresso maker on a stable, flat, heat-resistant surface near a power outlet. Ensure adequate ventilation around the machine.

4. **Fill Water Tank:** Remove the water tank from the back of the machine. Fill it with fresh, cold water up to the MAX line. Replace the tank securely.

5. **First Use Cycle (Priming):**

- Ensure the water tank is filled.
- Place a large cup or container under the coffee spout.
- Plug the machine into a grounded electrical outlet.
- Press the power button to turn on the machine. The indicator lights will flash as the machine heats up.
- Once the lights are solid, press the Espresso button. Allow water to flow through until the tank is nearly empty. This primes the pump and cleans the internal system.
- Repeat this process for the milk frothing system: fill the milk tank with water, attach it, place a cup under the frothing nozzle, and press the Latte or Cappuccino button to run water through.

5. OPERATING INSTRUCTIONS

Preparing Espresso

1. Ensure the water tank is filled with fresh water.
2. Select the appropriate filter (single or double shot) and place it into the ground coffee portafilter.
3. Add desired amount of finely ground espresso coffee to the filter. Use the measuring spoon and tamper to level and lightly tamp the coffee.
4. Attach the portafilter to the brewing head by aligning it and twisting firmly to the right until secure.
5. Place your espresso cup(s) on the adjustable drip tray. The tray can be adjusted for different cup sizes.



The adjustable tray feature accommodates different cup heights for various coffee beverages.

6. Press the **Espresso** button on the control panel. The machine will automatically brew and dispense the espresso.

LA BEBIDA PERFECTA



Control panel with one-touch buttons for Espresso, Cappuccino, and Latte.

7. Once brewing is complete, carefully remove the portafilter and discard the used coffee grounds.

Preparing Cappuccino or Latte

1. Follow steps 1-5 for preparing espresso.
2. Fill the removable milk tank with fresh, cold milk (dairy or non-dairy) up to the MAX line.
3. Attach the milk tank to the machine. Ensure the frothing nozzle is positioned over your cup.
4. Adjust the milk foam control dial to your desired foam level.



Adjust the milk foam control dial for desired foam consistency.

5. Press the **Cappuccino** or **Latte** button. The machine will automatically brew the espresso and then froth and dispense the milk into your cup.
6. After use, remove the milk tank and store any remaining milk in the refrigerator. Clean the milk frothing system immediately.

Using Dolce Gusto Capsules

1. Ensure the water tank is filled.
2. Insert a compatible Dolce Gusto capsule into the capsule portafilter.
3. Attach the capsule portafilter to the brewing head.
4. Place your cup on the adjustable drip tray.
5. Press the desired beverage button (Espresso, Cappuccino, or Latte). The machine will automatically adjust for capsule brewing.
6. After brewing, carefully remove and discard the used capsule.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your espresso maker.

Daily Cleaning

- Portafilter and Filters:** After each use, remove the portafilter and discard coffee grounds. Rinse the portafilter and filter under running water. Use a brush to remove any residue.
- Milk Tank and Frothing Nozzle:** Immediately after preparing milk-based drinks, remove the milk tank. Disassemble the frothing nozzle components and wash all parts with warm, soapy water. Rinse thoroughly. Run a quick cleaning cycle by pressing the 'Clean' button (if available) or by running hot water through the frothing system without milk.
- Drip Tray:** Empty and clean the drip tray regularly.
- Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling

Over time, mineral deposits (limescale) can build up in the machine, affecting performance. Descale your machine every 2-3 months, or more frequently if you have hard water.

1. Prepare a descaling solution according to the descaler manufacturer's instructions, or use a mixture of white vinegar and water (1 part vinegar to 2 parts water).
2. Fill the water tank with the descaling solution.
3. Place a large container under the coffee spout and another under the milk frothing nozzle.
4. Run several brewing cycles (Espresso button) until half of the solution has passed through.
5. Run several milk frothing cycles (Cappuccino/Latte button) until the remaining solution has passed through.
6. Turn off the machine and let it sit for 15-20 minutes.
7. Empty and rinse the water tank. Fill it with fresh water.
8. Run several full water tanks through the machine (both brewing and frothing cycles) to thoroughly rinse out any descaling solution.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee dispenses	Water tank empty; machine not primed; clogged filter/portafilter.	Fill water tank; perform priming cycle; clean portafilter and filter.
Coffee is too weak/strong	Incorrect coffee grind; incorrect coffee amount; water temperature issue.	Adjust grind size (finer for stronger, coarser for weaker); adjust coffee amount; ensure machine is fully heated.
Milk not frothing properly	Milk tank empty; milk too warm; frothing nozzle clogged; milk type.	Fill milk tank with cold milk; clean frothing nozzle thoroughly; try different milk types (e.g., whole milk for best froth).
Machine leaks water	Water tank not seated correctly; drip tray full; seal issues.	Ensure water tank is firmly in place; empty drip tray; contact customer support if seals appear damaged.
Machine not turning on	No power; faulty power button.	Check power outlet and cord connection; contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Oster
Model Number	BVSTEM6603R
Color	Red
Product Dimensions	22 x 27 x 32 cm
Capacity (Water Tank)	1.7 Liters
Power/Wattage	1170 watts
Voltage	127 Volts
Material	Plastic
Special Features	Removable Milk Tank, 15-bar Italian Pump
Item Weight	10 kg
Coffee Maker Type	Espresso Machine
Compatible Capsules	Dolce Gusto*

**Dolce Gusto is a registered trademark of Société des Produits Nestlé S.A. Products bearing this mark have no relationship with Newell Brands. Dolce Gusto and the brand owner of the capsules have not endorsed this Oster brand machine, or its accessories, for use with their coffee capsules.*

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your product or visit the official Oster website. Keep your proof of purchase for warranty claims.