

Oster BVSTEM6603SS

Oster PrimaLatte Automatic Espresso, Cappuccino, and Latte Maker BVSTEM6603SS User Manual

Model: BVSTEM6603SS

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Oster PrimaLatte Automatic Espresso, Cappuccino, and Latte Maker, Model BVSTEM6603SS. Please read all instructions carefully before first use and retain this manual for future reference. This appliance is designed to prepare espresso, cappuccino, and latte beverages using ground coffee or Dolce Gusto* capsules.

**Dolce Gusto is a registered trademark of Société des Produits Nestlé S.A. Products bearing this trademark have no relation to Newell Brands. Dolce Gusto and the brand owner of the capsules have not endorsed this Oster brand machine, or its accessories, for use with their coffee capsules.*

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the water reservoir lid is removed during the brewing cycle.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Oster PrimaLatte machine for optimal use.



Image 3.1: Labeled diagram of the Oster PrimaLatte coffee maker, highlighting the water tank, removable milk reservoir, portafilter, control panel, and power button.

The machine features a 15-bar Italian pump for optimal coffee extraction and a removable milk reservoir for easy storage and cleaning. The adjustable tray accommodates various cup sizes.



Image 3.2: The 15-bar Italian pump ensures optimal pressure for rich espresso extraction.



Image 3.3: The adjustable cup tray allows for use with various cup sizes, from small espresso cups to tall latte glasses.

4. PACKAGE CONTENTS

Your Oster PrimaLatte machine comes with the following components:

- Espresso Machine
- User Manual with Beverage Recipe Book
- Portafilter for Ground Coffee
- 2 Filters for Ground Coffee (Single and Double Shot)
- Portafilter for Dolce Gusto* Capsules
- Measuring Spoon with Coffee Tamper

ACCESORIOS INCLUIDOS



Portafiltro
para cápsulas
Dolce Gusto*



Portafiltro
para café
molido



Filtro para
café molido
doble



Filtro para
café molido
simple



Image 4.1: Included accessories: portafilter for capsules, portafilter for ground coffee, double shot filter, and single shot filter.



Image 4.2: Complete set of the Oster PrimaLatte machine and its accessories.

5. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the water tank, milk reservoir, portafilters, and filters with warm, soapy water. Rinse thoroughly and dry.
3. **Fill Water Tank:** Fill the water tank with fresh, cold water up to the MAX line. Ensure the tank is properly seated.
4. **Power On:** Plug the machine into a grounded electrical outlet. Press the power button located on the side of the machine. The indicator lights on the control panel will illuminate.
5. **Prime the System (First Use Only):** Before making coffee, it is essential to prime the pump. Place a large cup under the brewing head. Press the Espresso button once. Allow water to flow through until the pump stops. Repeat this process for the milk frother by filling the milk reservoir with water and pressing the Latte button. This purges air from the system.

6. OPERATING INSTRUCTIONS

The Oster PrimaLatte offers automated preparation for various coffee beverages. Refer to the video below for a visual guide on preparing espresso.

Video 6.1: This video demonstrates the basic steps for preparing an espresso using the Oster PrimaLatte machine, including powering on, filling the water tank, selecting and filling the filter, tamping coffee, attaching the portafilter, and initiating the brewing process. It also shows how to customize the brew volume.

6.1. Preparing Espresso (Ground Coffee)

1. Ensure the water tank is filled.
2. Select the appropriate filter (single or double shot) and place it into the ground coffee portafilter.
3. Fill the filter with finely ground espresso coffee. Use the measuring spoon and tamper to compact the coffee evenly.
4. Attach the portafilter to the brewing head by inserting it and rotating it gently to the right until it locks securely.
5. Place your cup(s) on the adjustable tray. For smaller cups, remove the lower drip tray.
6. Press the **Espresso** button once for a single shot or twice for a double shot. The machine will automatically brew the espresso.
7. To customize the espresso volume, press and hold the **Espresso** button for 3 seconds. Release the button when the desired volume is reached. Press the button again to save the setting.

6.2. Preparing Cappuccino or Latte

1. Follow steps 1-5 for preparing espresso.
2. Fill the removable milk reservoir with cold milk (dairy or non-dairy) up to the desired level. Ensure the milk frothing tube is properly inserted into the reservoir.
3. Adjust the milk froth intensity knob on the milk reservoir lid to your preference.
4. Place your cup under both the brewing head and the milk frothing nozzle.
5. Press the **Cappuccino** button for a cappuccino or the **Latte** button for a latte. The machine will automatically brew the espresso and froth/dispense milk into your cup.
6. To customize the milk volume, press and hold the respective beverage button (Cappuccino or Latte) for 3 seconds. Release the button when the desired milk volume is reached. Press the button again to save the setting.

LA BEBIDA PERFECTA



Image 6.2: The control panel allows for one-touch preparation of Espresso, Cappuccino, and Latte.

TIPOS DE CAFÉ GOURMET

para preparar en casa



Image 6.3: Examples of Espresso, Cappuccino, and Latte beverages prepared with the machine.

6.3. Using Dolce Gusto* Capsules

1. Ensure the water tank is filled.
2. Insert a Dolce Gusto* capsule into the dedicated capsule portafilter.
3. Attach the capsule portafilter to the brewing head.
4. Place your cup on the adjustable tray.
5. Press the **Espresso** button to brew. Note that milk-based capsule drinks will require manual milk frothing if desired, as the machine's milk system is designed for fresh milk.



Image 6.4: The machine is compatible with Dolce Gusto® capsules using the dedicated portafilter.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your coffee maker.

7.1. Daily Cleaning

- **Milk Reservoir:** After each use, remove the milk reservoir and empty any remaining milk. Wash with warm, soapy water and rinse thoroughly. The milk frothing tube should also be cleaned.
- **Portafilter and Filters:** Remove the portafilter and discard used coffee grounds. Wash the portafilter and filter baskets with warm, soapy water.
- **Drip Tray:** Empty and clean the drip tray and grid.
- **Exterior:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners.

7.2. Descaling

Descaling is necessary to remove mineral deposits that can build up over time and affect machine performance. The frequency depends on water hardness and usage. Follow the descaling instructions provided in the full manual or use the machine's dedicated cleaning function (if available, often indicated by a 'Clean' or 'Limpiar' button).

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No coffee dispenses	Water tank empty; clogged filter; machine not primed.	Fill water tank; clean filter; prime the system.
Weak espresso	Coffee too coarse; not enough coffee; insufficient tamping.	Use finer grind; add more coffee; tamp firmly.
No milk froth	Milk reservoir empty; frothing tube clogged; milk too warm.	Fill milk reservoir; clean frothing tube; use cold milk.
Machine leaks	Water tank not seated correctly; portafilter not secured.	Ensure water tank is firm; secure portafilter tightly.

9. SPECIFICATIONS

- **Brand:** Oster
- **Model Name:** PrimaLatte
- **Model Number:** BVSTEM6603SS-013
- **Capacity:** 1.7 Liters (Water Tank)
- **Color:** Silver
- **Product Dimensions:** 22.5 cm (Depth) x 28 cm (Width) x 31.2 cm (Height)
- **Special Feature:** Manual (referring to some manual controls, despite automatic functions)
- **Coffee Maker Type:** Espresso Machine
- **Material:** Plastic
- **Operation:** Fully Automatic
- **Electrical Power:** 1170W (for 127V) / 1050W (for 220V)
- **Voltage:** 220 Volts (Note: Check local voltage requirements)
- **Input Type:** Capsule, Ground Coffee
- **Filter Type:** Reusable
- **Item Weight:** 4.79 Kilograms
- **Dishwasher Safe:** No

10. WARRANTY AND SUPPORT

Your Oster PrimaLatte Automatic Espresso, Cappuccino, and Latte Maker is covered by a 12-month product warranty. For warranty claims, technical support, or service inquiries, please refer to the contact information provided in the warranty card included with your product or visit the official Oster website for your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question