

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Imaginext Shark Bite Pirate Ship Playset (Model HGN68) Instruction Manual

Fisher-Price HGN68

Fisher-Price Imaginext Shark Bite Pirate Ship Playset (Model HGN68) Instruction Manual

Model: HGN68 | Brand: Fisher-Price

PRODUCT OVERVIEW

The Fisher-Price Imaginext Shark Bite Pirate Ship Playset offers an interactive experience for children aged 3 to 8 years. This playset encourages imaginative play with various features designed for pirate adventures.



Image: The complete Fisher-Price Imaginext Shark Bite Pirate Ship Playset, showcasing its various features and accessories.

WHAT'S IN THE BOX

- 1 playset (Shark Bite Pirate Ship)
- 2 figures (Pirate figures)
- 2 swords
- 1 treasure piece
- 1 cage
- 4 projectiles
- 2 cannon balls
- 1 removable pirate flag



Image: A visual representation of all included components and their approximate dimensions.

SETUP

Assembly

1. Carefully remove all components from the packaging.
2. Attach the red sails to the mast as indicated by the connection points.
3. Place the lookout nests on top of the masts.
4. Ensure the cannon is securely positioned on the ship's deck.
5. Attach the removable pirate flag to its designated spot.

Initial Inspection

Before play, inspect all parts for any damage or loose components. Ensure all figures and accessories are present as listed in the "What's in the Box" section.

OPERATING INSTRUCTIONS

Shark Bite Action

To activate the shark-biting action, locate the Power Pad on the ship. Push the Power Pad to open and close the shark's mouth, designed to capture figures in the ship's hull.



Push the Power Pad for shark-chomping action

Image: A hand demonstrating the Power Pad activation for the shark's chomping action.

Cannon Launch

Place a cannon ball into the cannon. Turn the Power Pad located near the cannon to launch the cannon ball. This feature allows for interactive defense scenarios.



Launch the cannons to defend the treasure

Image: A pirate figure positioned to launch a cannon from the ship's deck.

Secret Treasure Hiding Spot

Turn a Power Pad to the left to reveal a secret compartment for hiding the treasure piece. Turn it to the right to close the compartment.

Walking the Plank

The ship features a retractable plank. Extend the plank for figures to "walk" off the ship, adding to the imaginative play scenarios.

Prison Cage

Utilize the included cage to imprison captured figures. The cage can be attached to various points on the ship for versatile play.

Movement

The pirate ship is equipped with wheels on the bottom, allowing it to be rolled across flat surfaces for dynamic play.

MAINTENANCE

Cleaning

Wipe the playset with a damp cloth and mild soap as needed. Avoid harsh chemicals or abrasive cleaners. Ensure all parts are dry before storing.

Storage

Store the playset and its accessories in a cool, dry place away from direct sunlight to prevent material degradation.

TROUBLESHOOTING

- **Cannon not firing:** Ensure the cannon ball is properly seated in the cannon and the Power Pad is fully turned.
- **Figures not standing:** Place figures on the designated pegs on the ship's deck or lookout nests for stability.
- **Shark mouth not closing/opening:** Check for any obstructions in the shark's mouth mechanism and ensure the Power Pad is fully engaged.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8.5 x 4 x 7.5 inches
Item Weight	1.8 pounds
Item Model Number	HGN68
Manufacturer Recommended Age	36 months - 8 years
Manufacturer	Fisher-Price
Release Date	January 1, 2022

OFFICIAL PRODUCT VIDEOS

The following videos provide additional information and demonstrations of the playset's features:

Your browser does not support the video tag.

Video: "HGN68 - Fisher-Price Imaginext Shark Bite Pirate Ship" by Fisher Price - Domestic. This video demonstrates the key interactive features of the playset.

Your browser does not support the video tag.

Video: "A Closer Look" by Amazon Product Imaging. This video provides a detailed view of the playset's design and components.

WARRANTY & SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Fisher-Price website. Keep your purchase receipt for any warranty claims.