

HOCO W30 Black

Hoco W30 Fun Move Wireless Bluetooth Headphones User Manual

Model: W30 Black

INTRODUCTION

Thank you for choosing the Hoco W30 Fun Move Wireless Bluetooth Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

The Hoco W30 headphones offer a superior audio experience with Bluetooth 5.0 connectivity, long battery life, and versatile playback options including TF card and AUX modes. Designed for comfort and portability, these over-ear headphones are compatible with a wide range of mobile phones and tablets.

PRODUCT OVERVIEW



Figure 1: Hoco W30 Headphones (folded for portability)



Figure 2: Hoco W30 Headphones (unfolded, front view)

Key Features:

- Advanced Bluetooth V5.0 connectivity for stable and efficient wireless connection.
- Integrated JL AC6925F Bluetooth chip for reliable performance.
- Long-lasting 300mAh battery providing up to 8 hours of talk/music time.
- Extended standby time of up to 200 hours.
- Equipped with 40mm speaker units for clear and powerful audio.
- Supports multiple playback modes: Bluetooth, TF (MicroSD) card, and AUX (wired) mode.
- Voice prompt switch for connection status (double-click M button when not connected).
- Over-ear design with soft protein earpads for comfortable extended wear.
- Foldable and adjustable headband for easy storage and a customized fit.
- Compatible with a wide range of mobile phones and tablets.

PACKAGE CONTENTS



Figure 3: Hoco W30 Headphones Retail Packaging

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- Hoco W30 Fun Move Wireless Bluetooth Headphones
- USB Charging Cable
- AUX Audio Cable (if included, typically for AUX mode)
- User Manual (this document)

CONTROLS AND INDICATORS



Figure 4: Location of controls on the Hoco W30 Headphones

Familiarize yourself with the buttons and ports on your Hoco W30 headphones:

Control/Indicator	Function
Power Button / Multi-function Button (MFB)	Press and hold to power ON/OFF. Press once to Play/Pause music, Answer/End calls. Double-click to activate voice assistant (if supported by device).
Volume Up / Next Track Button (+)	Press once to increase volume. Press and hold to skip to the next track.
Volume Down / Previous Track Button (-)	Press once to decrease volume. Press and hold to go to the previous track.
Mode Button (M)	Press to switch between Bluetooth, TF Card, and AUX modes. Double-click when not connected for voice prompt switch.
TF Card Slot	Insert a MicroSD (TF) card with music files for direct playback.
AUX Port (3.5mm)	Connect an audio cable for wired playback.
Micro USB Charging Port	Connect the USB charging cable to charge the headphones.
LED Indicator Light	Indicates power status, pairing mode, and charging status.
Microphone	For hands-free calling.

SETUP AND PAIRING

Initial Charging:

Before first use, fully charge your headphones. Connect the Micro USB charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will typically show red during charging and turn off or blue when fully charged. Charging takes approximately 2 hours.

Bluetooth Pairing:

1. Ensure the headphones are turned OFF.
2. Press and hold the Power Button (MFB) for approximately 3-5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your mobile phone or tablet, enable Bluetooth and search for available devices.
4. Select "Hoco W30" from the list of found devices.
5. Once connected, the LED indicator will typically flash blue slowly or remain solid blue, and you may hear a confirmation tone.
6. If prompted for a password, enter "0000".

The headphones will automatically attempt to reconnect to the last paired device when powered on.

OPERATING INSTRUCTIONS

Power ON/OFF:

- **Power ON:** Press and hold the Power Button (MFB) for 3 seconds.
- **Power OFF:** Press and hold the Power Button (MFB) for 3 seconds.

Music Playback (Bluetooth Mode):

- **Play/Pause:** Press the Power Button (MFB) once.
- **Volume Up:** Press the "+" button once.
- **Volume Down:** Press the "-" button once.
- **Next Track:** Press and hold the "+" button.
- **Previous Track:** Press and hold the "-" button.

Calling Functions:

- **Answer Call:** Press the Power Button (MFB) once.
- **End Call:** Press the Power Button (MFB) once during a call.
- **Reject Call:** Press and hold the Power Button (MFB) for 2 seconds during an incoming call.
- **Redial Last Number:** Double-press the Power Button (MFB).

TF Card Mode:

Insert a MicroSD (TF) card with MP3/WAV/WMA audio files into the TF card slot. The headphones will automatically switch to TF card mode and begin playback. If not, press the Mode (M) button to switch.

AUX Mode (Wired Connection):

Connect one end of the 3.5mm audio cable to the AUX port on the headphones and the other end to the audio output of your device.

The headphones will automatically switch to AUX mode. In this mode, controls on the headphones (volume, track skip) may not function, and you will need to control playback from your connected device.

Voice Prompt Switch:

When the headphones are not connected to any Bluetooth device, double-click the Mode (M) button to hear a voice prompt, which can be useful for confirming the current status or switching voice languages if available.

CHARGING THE BATTERY

The Hoco W30 headphones are equipped with a 300mAh rechargeable battery. To charge:

1. Connect the provided USB charging cable to the Micro USB port on the headphones.
2. Connect the other end of the USB cable to a standard USB power adapter (5V/1A recommended) or a computer's USB port.
3. The LED indicator will illuminate (typically red) to show that charging is in progress.
4. Once fully charged (approximately 2 hours), the LED indicator will change color (e.g., turn blue) or turn off.

A full charge provides up to 8 hours of music playback/talk time and up to 200 hours of standby time.

MAINTENANCE AND CARE

- Clean the headphones regularly with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Do not immerse the headphones in water or any other liquids.
- Store the headphones in a cool, dry place when not in use, preferably in a protective case.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not attempt to disassemble or modify the headphones, as this will void the warranty and may cause damage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Headphones do not power on.	Battery is low. Charge the headphones fully.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none">◦ Ensure headphones are in pairing mode (LED flashing blue/red).◦ Make sure Bluetooth is enabled on your device.◦ Move headphones closer to your device.◦ Clear previous Bluetooth connections on your device and try again.◦ Restart both the headphones and your device.

Problem	Possible Cause / Solution
No sound or low volume.	<ul style="list-style-type: none"> Adjust volume on both headphones and connected device. Ensure headphones are properly paired. Check if AUX cable is fully inserted if in wired mode. Verify TF card is inserted correctly and contains supported audio files.
Sound is distorted or intermittent.	<ul style="list-style-type: none"> Move closer to the Bluetooth device to reduce interference. Avoid obstacles between headphones and device. Check for other strong wireless signals nearby. Ensure battery is not critically low.
Microphone not working.	<ul style="list-style-type: none"> Ensure headphones are connected via Bluetooth (microphone does not work in AUX mode). Check microphone settings on your connected device.

SPECIFICATIONS

Feature	Detail
Bluetooth Version	V5.0
Bluetooth Chip	JL AC6925F
Battery Capacity	300mAh
Charging Time	Approximately 2 hours
Talk/Music Time	Up to 8 hours
Standby Time	Up to 200 hours
Speaker Unit	40mm
Dimensions (L*W*H)	190 x 165 x 80 mm (7.48 x 6.5 x 3.15 inches)
Net Weight	184g (0.41 lbs)
Supported Modes	Bluetooth, TF Card, AUX
Compatibility	Mobile phones, Tablets, and other Bluetooth-enabled devices

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: Hoco W30 Bluetooth 5.0 Headphones Overview. This video provides a visual summary of the Hoco W30 headphones' key features, including

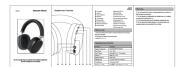 
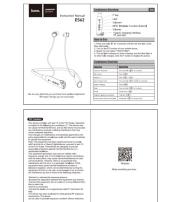
WARRANTY AND SUPPORT

Hoco products are manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact your local retailer or Hoco customer service directly.

Please retain your proof of purchase for warranty claims.

© 2023 HOCO. All rights reserved.
Product specifications are subject to change without notice.

Related Documents

	<p><u>Hoco W40 Wireless Headphones - User Manual and Specifications</u> Comprehensive user manual and technical specifications for the Hoco W40 wireless headphones, covering features, usage, and regulatory information.</p>
	<p><u>hoco Wireless Headphones BT2212 Instruction Manual</u> Instruction manual for hoco wireless headphones BT2212, covering overview, features, controls, and FCC statement.</p>
	<p><u>Hoco BS31 Portable Bluetooth Speaker User Manual and Specifications</u> User manual and technical specifications for the Hoco BS31 portable Bluetooth speaker, including FCC compliance information, device features, and performance details.</p>
	<p><u>Hoco ES62 Wireless Earphones Instruction Manual</u> Instruction manual for the Hoco ES62 wireless earphones, detailing features, usage, controls, and FCC compliance information.</p>