

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hoco](#) /

› [User Manual for Hoco HC4 Wireless Bluetooth Sports Speaker](#)

## Hoco HC4

# User Manual for Hoco HC4 Wireless Bluetooth Sports Speaker

Model: HC4 | Brand: Hoco

## INTRODUCTION

Thank you for choosing the Hoco HC4 Wireless Bluetooth Sports Speaker. This manual provides comprehensive instructions to help you understand, set up, operate, and maintain your speaker. Please read this manual carefully before use and keep it for future reference.

## SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for assistance.
- Keep the speaker away from water and other liquids, especially during charging.
- Use only the specified charging cable and adapter.

## PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Hoco HC4 Wireless Bluetooth Sports Speaker
- USB Charging Cable
- User Manual



Image: The retail packaging of the Hoco HC4 speaker, showing the speaker and its box.

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Hoco HC4 speaker.



Image: Front view of the Hoco HC4 wireless Bluetooth speaker, showcasing its cylindrical design and mesh grille with the 'hoco.' logo.



Image: Side view of the Hoco HC4 speaker, showing the control buttons (power, mode, volume/track skip) and the speaker grille.



Image: Close-up view of the Hoco HC4 speaker's input ports, including AUX, DC-5V charging, USB, and TF card slot, protected by a rubber flap.

## SETUP

---

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the DC-5V port on the speaker and the other end to a USB power adapter (not included) or a computer USB port.

- The charging indicator light will illuminate during charging.
- The light will turn off or change color when charging is complete.
- Charging time is approximately 2-3 hours.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button () for 2-3 seconds until you hear a power-on prompt.
- **To Power Off:** Press and hold the Power button () for 2-3 seconds until you hear a power-off prompt.

### 3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing blue LED).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. You should see "HC4" in the list.
4. Select "HC4" to connect. Once paired, the LED indicator will stop flashing and remain solid blue, and you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

### 4. Connecting via AUX/USB/TF Card

- **AUX Mode:** Insert a 3.5mm audio cable into the AUX port on the speaker and the other end into your audio source. The speaker will automatically switch to AUX mode.
- **USB Drive Mode:** Insert a USB flash drive into the USB port. The speaker will automatically detect and play audio files from the drive.
- **TF Card Mode:** Insert a TF (microSD) card into the TF card slot. The speaker will automatically detect and play audio files from the card.
- Use the Mode button (M) to switch between Bluetooth, AUX, USB, TF Card, and FM Radio modes.

### 5. TWS (True Wireless Stereo) Pairing (Optional)

If you have two Hoco HC4 speakers, you can pair them together for a true wireless stereo experience.

1. Ensure both HC4 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Mode button (M). You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in step 3. Audio will play through both speakers in stereo.

## OPERATING INSTRUCTIONS

---

### 1. Music Playback

- **Play/Pause:** Short press the Play/Pause button (▶||).
- **Next Track:** Long press the Volume Up button (+).
- **Previous Track:** Long press the Volume Down button (-).

### 2. Volume Control

- **Volume Up:** Short press the Volume Up button (+).
- **Volume Down:** Short press the Volume Down button (-).

### 3. Call Functions (Bluetooth Mode)

- **Answer Call:** Short press the Play/Pause button (▶||) when an incoming call rings.
- **End Call:** Short press the Play/Pause button (▶||) during a call.
- **Reject Call:** Long press the Play/Pause button (▶||) when an incoming call rings.

- **Redial Last Number:** Double-press the Play/Pause button (▶||).

## 4. FM Radio Mode

1. Press the Mode button (M) to switch to FM Radio mode.
2. Short press the Play/Pause button (▶||) to automatically scan and save available FM stations.
3. Short press the Volume Up (+) or Volume Down (-) buttons to switch between saved stations.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker at least once every three months if not in regular use. Avoid fully discharging the battery frequently.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is in pairing mode (flashing blue LED). Turn on Bluetooth on your device. Move speaker closer to device (within 10 meters).
No sound.	Volume too low; incorrect mode; device not connected.	Increase speaker and device volume. Ensure correct mode (Bluetooth, AUX, etc.). Reconnect device.
Poor FM radio reception.	Weak signal.	Move to an open area or adjust speaker position.

## SPECIFICATIONS

Feature	Detail
Brand	Hoco
Model Name	HC4
Connectivity Technology	Bluetooth, FM, TF card, U disk, AUX, TWS
Bluetooth Version	5.0
Maximum Speaker Output Power	10 Watt
Battery Capacity	1500 mAh
Operating Time	3 hours

Feature	Detail
Product Dimensions	20 x 8.1 x 8.8 cm
Item Weight	540 grams
Audio Output Mode	Surround
Mounting Type	Tabletop
Speaker Type	Outdoor
Special Features	Support Bluetooth, FM, TF card, U disk, AUX, TWS
Recommended Uses	For Surround Sound Systems, For Smartphones or Tablets, For Music Players
Compatible Devices	Multiple
Manufacturer	Hoco
First Available Date	March 22, 2021



Image: Diagram showing the dimensions of the Hoco HC4 speaker: 20cm length, 8.1cm width, and 8.8cm height.

**hoco.**

HC4



# OUTDOOR RIDING

## LONG-LASTING BATTERY LIFE



1500 mAh



Bluetooth® 5.0

Powerful battery to accompany you on the journey, with beautiful scenery and music on the journey.



Music 3h



Calls 3h



Image: Lifestyle image of the Hoco HC4 speaker attached to a bicycle handlebar, illustrating its use for outdoor activities with text highlighting "Outdoor Riding" and "Long-lasting Battery Life (1500mAh)".

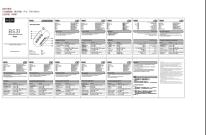
## WARRANTY AND SUPPORT

Hoco products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included in your package or visit the official Hoco website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact Hoco customer service.

© 2024 Hoco. All rights reserved.

## Related Documents - HC4

 <p><b>Hoco ES62 Сымсыз Құлакқап Пайдалану Нұсқаулығы</b> HOCO ES62 сымсыз құлакқаптарына арналған техникалық сипаттамалар, пайдалану, сақтау және кәдеге жарату ережелері.</p>
 <p><b>Hoco EW24 Wireless Earphones User Manual</b> User manual for Hoco EW24 Wireless Earphones, providing setup, usage, and troubleshooting information.</p>
 <p><b>Hoco BS31 Portable Bluetooth Speaker User Manual and Specifications</b> User manual and technical specifications for the Hoco BS31 portable Bluetooth speaker, including FCC compliance information, device features, and performance details.</p>
 <p><b>Hoco EQ10 Plus True Wireless ANC+ENC Earphones User Manual</b> Comprehensive user manual for the Hoco EQ10 Plus true wireless ANC+ENC noise-cancelling Bluetooth earphones, covering operation, features, and warranty information.</p>
 <p><b>Hoco HC29 Halo Sports BT Speaker User Manual</b> Comprehensive user manual for the Hoco HC29 Halo Sports BT Speaker (Model HC29), providing details on overview, operation, specifications, warnings, FCC compliance, and packing list. Includes instructions for Bluetooth pairing and controls.</p>

