

Indesit IS55Q60NE

Indesit IS55Q60NE Induction Hob User Manual

Model: IS55Q60NE

1. INTRODUCTION

Thank you for choosing the Indesit IS55Q60NE Induction Hob. This user manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before installation and use, and keep them for future reference.

2. SAFETY INFORMATION

General Safety:

- This appliance is intended for domestic use only.
- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not allow children to play with the appliance.
- Keep packaging materials away from children.
- Do not operate the hob with wet hands.
- Always switch off the appliance after use.
- Do not place metallic objects such as knives, forks, spoons, and lids on the hob surface as they can get hot.

Electrical Safety:

- The hob must be connected to the mains supply by a qualified electrician.
- Ensure the voltage and frequency match the ratings on the appliance's data plate.
- Do not use adapter plugs or extension cords.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT OVERVIEW

The Indesit IS55Q60NE is an induction hob designed for efficient and precise cooking. It features a sleek tempered glass surface with multiple cooking zones and intuitive touch controls.

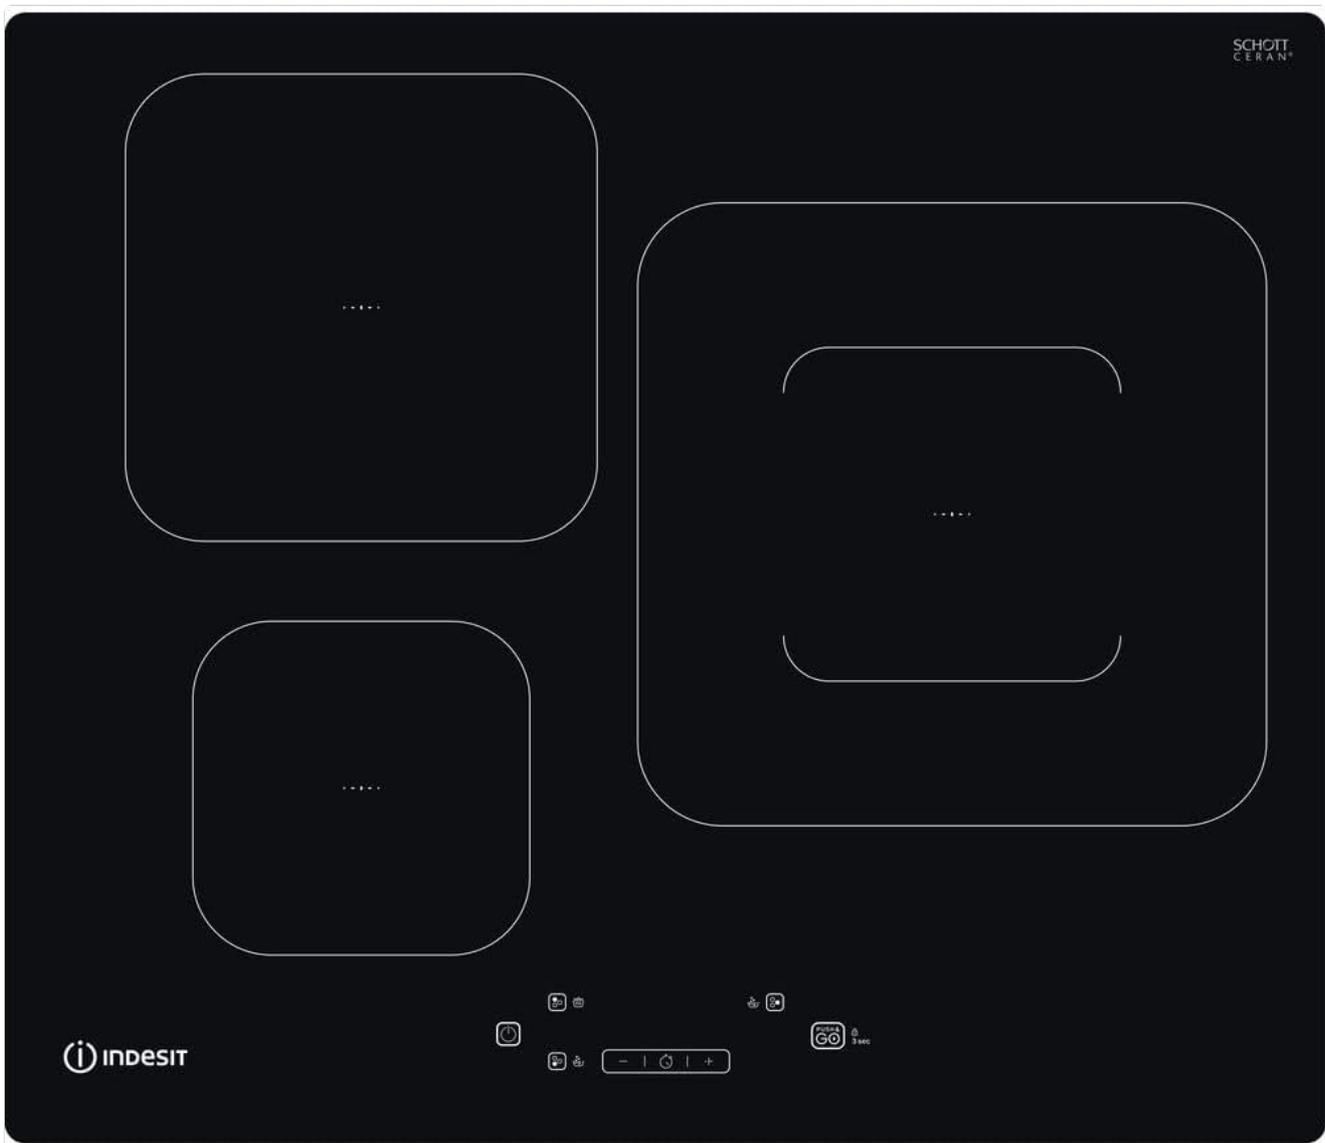


Figure 1: Top-down view of the Indesit IS55Q60NE Induction Hob. This image shows the black tempered glass surface with three distinct induction cooking zones and the central touch control panel at the bottom.

The hob is equipped with 4 heating elements (induction zones) for versatile cooking. The control panel allows for easy selection of cooking zones and power levels.

4. SETUP AND INSTALLATION

Unpacking: Carefully remove the hob from its packaging. Inspect for any damage during transit. Report any damage immediately to your retailer.

Placement: The hob is designed for built-in installation into a kitchen countertop. Ensure adequate ventilation space around the appliance as specified in the detailed installation guide (not included in this general manual, refer to the separate installation instructions provided with the product).

Dimensions: The product dimensions are approximately 51 cm (depth) x 59 cm (width) x 5 cm (height). The overall dimensions are 60 x 60 x 85 cm. Ensure your countertop cutout matches the required dimensions for a secure fit.

Electrical Connection: This appliance requires a direct electrical connection and does not come with a pre-attached plug. Installation must be performed by a qualified electrician. Ensure the electrical supply is disconnected before any installation work begins. The hob operates at 220 Volts and has a power rating of 3600 Watts.

Securing the Hob: The hob is typically secured into the countertop opening using mounting brackets or clips provided. Attach the supplied plates to the sides of the hob and gently lower it into the prepared opening until it sits flush with the countertop surface.

5. OPERATING INSTRUCTIONS

Power On/Off: To switch on the hob, press the main power button on the touch control panel. The indicator lights will illuminate. To switch off, press the power button again.

Selecting a Cooking Zone: Once the hob is powered on, select the desired cooking zone by touching its corresponding sensor on the control panel. An indicator light will show the selected zone.

Adjusting Power Level: Use the '+' and '-' touch controls to increase or decrease the power level for the selected cooking zone. The hob typically offers multiple power settings, from low heat for simmering to high heat for boiling.

Induction Cookware: For optimal performance, use cookware specifically designed for induction hobs. These typically have a magnetic base. Non-magnetic cookware will not heat up on an induction hob.

Residual Heat Indicator: After cooking, the hob surface may remain hot. An 'H' symbol or similar indicator will appear on the display for zones that are still hot, even after the hob is switched off. Do not touch these zones until the indicator disappears.

6. MAINTENANCE AND CLEANING

Daily Cleaning: After each use, allow the hob to cool down completely. Wipe the tempered glass surface with a soft cloth and a mild detergent or a specialized ceramic hob cleaner. Rinse with a damp cloth and dry thoroughly to prevent water marks.

Stubborn Stains: For burnt-on food or stubborn stains, use a ceramic hob scraper (plastic or metal, specifically designed for glass hobs) at an angle to gently remove residue. Follow with a hob cleaner.

Avoid: Do not use abrasive sponges, scouring pads, or harsh chemical cleaners as these can scratch or damage the glass surface. Avoid spilling sugary substances on the hot hob, as they can cause permanent damage if not cleaned immediately.

Control Panel: Clean the touch control panel with a soft, damp cloth. Ensure it is dry before operating the hob.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

- **Hob not turning on:**

- Check if the appliance is properly connected to the electrical supply.
- Ensure the main power switch for the hob is on at your fuse box.
- Verify that the power button on the hob's control panel has been pressed.

- **Cooking zone not heating:**

- Ensure you are using induction-compatible cookware.
- Check if the cookware is correctly centered on the cooking zone.
- Verify that a power level has been selected for the zone.

- **Display shows an error code:**

- Refer to the specific error code in the full technical manual (if available) or contact customer support.
- Try switching off the hob at the mains for a few minutes, then switching it back on.

- **Unusual noises during operation:**

- Induction hobs can produce a slight humming or buzzing sound, especially at higher power settings, which is normal.
- A clicking sound may indicate the hob is detecting cookware or adjusting power.

8. SPECIFICATIONS

Feature	Specification
Brand	Indesit
Model	IS 55Q60 NE
Product Dimensions (D x W x H)	51cm x 59cm x 5cm
Overall Dimensions	60 x 60 x 85 cm
Weight	2 kg
Type of Burner	Induction
Number of Heating Elements	4
Surface Material	Tempered Glass
Power Source	Corded Electric
Voltage	220 Volts
Electrical Power	3600 Watts
Noise Level	44 Decibels
Components Included	Indesit IS55Q60NE Hob
Year Model	2021

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your retailer. Indesit appliances typically come with a manufacturer's warranty covering defects in materials and workmanship. If you encounter any issues that cannot be resolved using the troubleshooting guide, or for technical assistance, please contact Indesit customer support. You can often find contact details on the official Indesit website or through your product retailer.

You can also visit the official [Indesit Brand Store](#) for more information and product support.