

[Manuals.plus](#) /

› [YUSWKO](#) /

› YUSWKO Red Milk Frother Handheld with 3 Heads, Coffee Whisk Foam Mixer with USB Rechargeable 3 Speeds, Electric Mini Hand Frother for Latte, Cappuccino, Hot Chocolate, Egg Christmas Red Without Stand

YUSWKO MFWHI1

YUSWKO Handheld Milk Frother Instruction Manual

Model: MFWHI1
Brand: YUSWKO

INTRODUCTION

Thank you for choosing the YUSWKO Handheld Milk Frother. This versatile and efficient device is designed to enhance your beverage preparation, allowing you to create creamy milk foam for lattes, cappuccinos, hot chocolate, and to mix various powdered ingredients. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.

PRODUCT FEATURES

- **USB Rechargeable Design:** Equipped with a 1500mAh built-in battery, offering an environmentally friendly and convenient charging solution. No disposable batteries required.
- **Three Detachable Whisking Heads:** Includes a hook stirrer for powders, a spring stirrer for milk froth, and a balloon mixer for eggs, cream, or baking.
- **3-Speed Settings:** Adjustable low, medium, and high speeds for optimal frothing and mixing results, operating quietly.
- **Battery Level Indicator:** Features an indicator light (low, medium, full) to clearly show remaining power.
- **High-Quality Construction:** Made with durable ABS material for the handle and stainless steel for the whisks, ensuring an ergonomic and comfortable grip.

PACKAGE CONTENTS

Upon unboxing, please verify that all components are present:

- 1 x YUSWKO Milk Frother Body
- 1 x USB Charging Cable
- 1 x Hook Whisk
- 1 x Spring Whisk
- 1 x Balloon Whisk
- 1 x User Manual (this document)



Image: The YUSWKO Milk Frother main unit, along with the three interchangeable whisk heads (spring, hook, and balloon) and the USB charging cable.

SETUP

1. Charging the Frother

Before first use, fully charge the milk frother. The device features a USB-C charging port located at the bottom. Connect the provided USB charging cable to the frother and a compatible USB power source (e.g., wall adapter, computer, power bank). The indicator light will show the charging status (red for charging, green for fully charged).



Image: Illustrates the USB-C charging port at the base of the frother and the charging indicator light changing from red (charging) to green (fully charged).

2. Attaching Whisk Heads

Select the appropriate whisk head for your desired task. Align the whisk head with the motor shaft on the frother body and gently push it in until it clicks securely into place. To remove, pull the whisk head straight out.

3 REPLACEABLE VERSATILE WHISKS



Special note: The size of this whisk allows an error range of $\pm 2''$, and dimensional deviations within this range are normal.

Image: Displays the three different whisk attachments: Spring Whisk (6 inches), Hook Whisk (6.3 inches), and Balloon Whisk (6.5 inches), highlighting their distinct shapes.

OPERATING INSTRUCTIONS

1. Selecting Speed Settings

The frother offers three speed settings: Low, Medium, and High. Press the corresponding button on the handle to select your desired speed. The device is designed to create creamy foam in 15-20 seconds.

UPDATED 3-GEAR

whisking speeds



Image: The frother's body with clearly labeled Low, Mid, and High speed buttons, demonstrating its use for various frothed drinks.

2. Usage Tips for Optimal Results

- For best results, use a cylindrical container with a diameter of approximately 90-100mm and a height of no less than 110mm.
- Do not fill the container more than 1/3 full of milk or liquid to prevent overflow.
- Insert the whisking head into the liquid, ensuring it is at least 10mm from the container wall and 5mm from the bottom.
- Press the power switch to start. Once foam forms, slowly move the frother horizontally and vertically, keeping the whisking head immersed in the liquid to increase whisking area and create rich foam.
- Press the power switch again to stop the frother once desired consistency is achieved.
- Always ensure the frother is turned off before inserting or removing the whisking rod from liquid to prevent splashing.



Image: A visual guide demonstrating the recommended container dimensions and whisk immersion depth for effective frothing, alongside illustrations of various coffee beverages like Espresso, Americano, Cappuccino, Latte, Macchiato, and Mocha.

3. Whisk Head Applications

- **Spring Whisk:** Ideal for creating fine milk froth for lattes, cappuccinos, and other foamy beverages.
- **Hook Whisk:** Best suited for mixing powdered ingredients such as milk powder, protein powder, nutritional powder, or oatmeal.
- **Balloon Whisk:** Excellent for beating eggs, whipping cream, or mixing ingredients for baking.

MAINTENANCE AND CLEANING

- **Hand Wash Only:** The whisk heads should be hand washed with warm, soapy water immediately after use. Rinse thoroughly and air dry.
- **Do Not Immerse:** The main body of the frother (containing the motor and battery) must NOT be immersed in water or any other liquid. Wipe the body clean with a damp cloth.
- Store the frother and its attachments in a clean, dry place.



CLEAN AND STORE EASILY



! NOTE

Do not immerse the milk frother body in water

Image: A hand cleaning the whisk attachment under running water, with a clear warning not to submerge the main frother unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery or not charged.	Charge the frother fully using the provided USB cable. Check the battery indicator light.
Whisk head not spinning or spinning slowly.	Whisk head not properly attached or low battery.	Ensure the whisk head is securely attached. Recharge the frother.

Problem	Possible Cause	Solution
Liquid overflows during frothing.	Container is too full or too small.	Reduce the amount of liquid (do not exceed 1/3 full). Use a taller, cylindrical container.
Poor frothing results.	Incorrect whisk head, insufficient liquid, or wrong speed setting.	Use the spring whisk for frothing. Ensure liquid is at least 1/3 full. Try a higher speed setting.

SPECIFICATIONS

Brand: YUSWKO

Model Name: MFWHI1

Color: Christmas Red

Material: Stainless Steel, Acrylonitrile Butadiene Styrene (ABS)

Product Dimensions: 1.2"W x 6.69"H

Item Weight: 0.23 Kilograms (8.1 ounces)

Power Source: Battery Powered (1 Lithium Metal battery included)

Wattage: 200 watts

Special Features: Indicator Light, Easy to Clean, Easy to Carry, Easy to Store, Lightweight, Rechargeable, Ergonomic Handle

Product Care Instructions: Hand Wash Only (whisk heads), Do not immerse the body of the machine in water

WARRANTY AND SUPPORT

YUSWKO offers a **1-year replacement warranty** for this product. If you receive a wrong or defective item, or are unsatisfied with its performance, please contact our customer service team. We are committed to providing intimate service and satisfactory solutions.

For support, please refer to the contact information provided with your purchase or visit the official YUSWKO brand store on Amazon: [YUSWKO Store](#).



Image: Icons representing YUSWKO's service guarantee: 24-hour quick after-sales service, 12-month free replacement, 30-day return policy, and lifetime support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question