

Hatteker 7569ST

Hatteker Electric Rotary Shaver Model 7569ST User Manual

Cordless Beard Trimmer with Pop-up Trimmer Rechargeable

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- **DANGER** – To reduce the risk of electric shock:
 - Do not reach for an appliance that has fallen into water. Unplug immediately.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
 - Always unplug this appliance from the electrical outlet immediately after using, except when charging.
 - Unplug this appliance before cleaning.
- **WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:
 - Close supervision is necessary when this appliance is used by, on, or near children or invalids.
 - Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
 - Keep the cord away from heated surfaces.
 - Never drop or insert any object into any opening.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 - Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off" then remove plug from outlet.

- Do not use an extension cord with this appliance.
- Do not store your appliance at temperatures above 140°F (60°C).
- Ensure the cord is detached from the shaver when cleaning the shaver under water.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Hatteker Electric Rotary Shaver.



This image displays the key components of the Hatteker Electric Rotary Shaver, highlighting the 3D razor head, precision blades, ON/OFF switch, LED display, pop-up trimmer, and charging port for easy identification.

- **3D Rotary Shaving Head:** Features three flexible rotary blades designed to adapt to facial contours.
- **Precision Blades:** Self-sharpening blades for an efficient shave.
- **ON/OFF Switch:** Power button to turn the shaver on or off.
- **LED Display:** Digital screen showing battery percentage, charging reminder, cleaning reminder, and travel lock status.

- **Pop-up Trimmer:** Integrated trimmer for sideburns, mustache, and beard styling.
- **Charging Port:** Input for the charging cable.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge the shaver. This typically takes approximately 1.5 hours for a full charge, providing up to 100 minutes of cordless shaving time.

- Ensure the shaver is turned off.
- Insert the charging cable into the shaver's charging port.
- Connect the USB end of the cable to a compatible USB power adapter (not included) or a USB port.
- The LED display will show the charging progress. When fully charged, it will indicate 100%.

LED Display Indicators



Intelligent LCD Display

- 88
Remaining power
- 
Charging reminder
- 
Cleaning reminder
- 
Travel lock

Hatteker

This image illustrates the intelligent LCD display of the shaver, detailing icons for remaining power, charging reminder, cleaning reminder, and travel lock status.

- **Remaining Power:** Displays the battery percentage from 0-100.
- **Charging Reminder:** An icon will illuminate when the battery is low, indicating it's time to recharge.
- **Cleaning Reminder:** An icon will appear to suggest cleaning the shaver head for optimal performance.
- **Travel Lock:** An icon indicates when the travel lock is activated, preventing accidental power-on.

OPERATING INSTRUCTIONS

Shaving

The Hatteker Rotary Shaver can be used for both dry and wet shaving.



This collage demonstrates the versatility of the shaver, showing it in use for dry shaving, wet shaving with foam, and being cleaned under running water.

- **Dry Shaving:** For a quick shave, ensure your face is clean and dry. Press the ON/OFF button to start the shaver.

Move the shaver in small, circular motions over your face and neck.

- **Wet Shaving:** For a more comfortable shave, apply shaving foam or gel to your face. Press the ON/OFF button. Move the shaver in small, circular motions. The shaver is waterproof and can be used in the shower.
- For best results, stretch your skin with your free hand to make the hairs stand upright.
- The shaver's 4-direction contour following technology allows the heads to adapt to the curves of your face for a close shave.



This image highlights the shaver's automatic contour detection technology, showing how its flexible heads adapt to facial contours for an effective shave.

Using the Pop-up Trimmer

The integrated pop-up trimmer is ideal for detailing and shaping.



Pop-up precision trimmer

Easily create beautiful beard types



This image demonstrates how to activate the pop-up precision trimmer and its use for shaping beard lines and sideburns.

- To activate, slide the trimmer release button upwards.
- Use the trimmer to define beard lines, trim sideburns, or tidy up necklines.
- After use, push the trimmer back down until it clicks into place.

Travel Lock Function

To prevent accidental activation during travel, the shaver features a travel lock.

- **To activate:** Press and hold the ON/OFF button for 3 seconds. The travel lock icon will appear on the LED display.
- **To deactivate:** Press and hold the ON/OFF button for 3 seconds again. The travel lock icon will disappear, and the shaver will be ready for use.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your shaver.



This image shows the Hatteker Electric Rotary Shaver being splashed with water, illustrating its waterproof capability for easy cleaning.

- **Daily Cleaning (Rinsing):** After each use, turn off the shaver. Open the shaving head unit by pressing the release button (if applicable, or gently pull open). Rinse the shaving heads and the hair chamber under warm running water. Shake off excess water and allow to air dry.
- **Thorough Cleaning:** Periodically, for a more thorough clean, detach the shaving head unit completely. Use the provided cleaning brush to remove any trapped hairs from the blades and the inner chamber. Rinse all parts under warm running water. Ensure all parts are completely dry before reassembling.
- **Lubrication:** For optimal performance, apply a drop of light machine oil (not included) to each shaving head once a month.
- **Storage:** Store the shaver in a dry, cool place, away from direct sunlight. Use the protective cap to cover the shaving heads when not in use or during travel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted. Travel lock is activated.	Charge the shaver. Deactivate the travel lock by pressing and holding the ON/OFF button for 3 seconds.
Poor shaving performance / pulling hairs.	Shaver heads are dirty or clogged. Blades are dull.	Clean the shaving heads thoroughly. If performance does not improve after cleaning, the blades may need replacement (contact customer support for availability).
Shaver not charging.	Charging cable or adapter is faulty. Charging port is obstructed.	Ensure the charging cable is securely connected. Try a different USB power adapter. Check the charging port for debris.
LED display not working.	Shaver is off or battery is completely dead.	Turn on the shaver. Charge the shaver. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model Number:** 7569ST
- **Power Source:** Battery Powered (Rechargeable)
- **Battery Type:** Integrated Rechargeable Lithium-ion Battery
- **Battery Average Life:** Up to 100 minutes of cordless use
- **Head Type:** Rotary, 3D flexible heads

- **Number of Blades:** 4
- **Blade Material:** Stainless Steel
- **Additional Features:** Cordless, Waterproof, Pop-up Trimmer, LED Display
- **Product Dimensions:** 3.15 x 5.67 x 8.66 inches
- **Item Weight:** 320 Grams (11.29 ounces)
- **Color:** Black, Blue
- **Included Components:** Shaver, Cleaning Brush, Protective Cap

WARRANTY AND SUPPORT

Hatteker products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please refer to the contact information provided with your purchase or visit the official Hatteker website.

Please retain your proof of purchase for any warranty claims.