Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Taurus /
- > Taurus HS-2900 Cordless Stick Vacuum Cleaner User Manual

Taurus HS-2900

Taurus HS-2900 Cordless Stick Vacuum Cleaner User Manual

Model: HS-2900 | Brand: Taurus

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, accessories, or charging.
- Use only the charger supplied by the manufacturer to recharge the appliance.
- Store the vacuum cleaner indoors in a dry place.

2. PRODUCT OVERVIEW AND COMPONENTS

The Taurus HS-2900 is a versatile 3-in-1 cordless vacuum cleaner designed for various cleaning tasks. It can be used as a stick vacuum, a handheld vacuum, or with an extended lance for high-reach areas.

Main Components:

- Main Motor Unit (Handheld)
- Extension Tube
- · Motorized Floor Brush with LED lights

- Dust Tank (650 ml capacity)
- EPA Filter System
- Li-ion Battery (29.6V)
- Wall Mount Charger

Included Accessories:

- Fuzzy Brush (for hard floors like parquet)
- Multi-purpose Brush (for carpets and general use)
- 2-in-1 Accessory: Furniture Brush and Upholstery Nozzle
- Crevice Tool (for tight spaces)
- Wall Mount Bracket



Image 2.1: The Taurus HS-2900 vacuum cleaner shown with its various components and accessories, illustrating its 3-in-1 versatility.

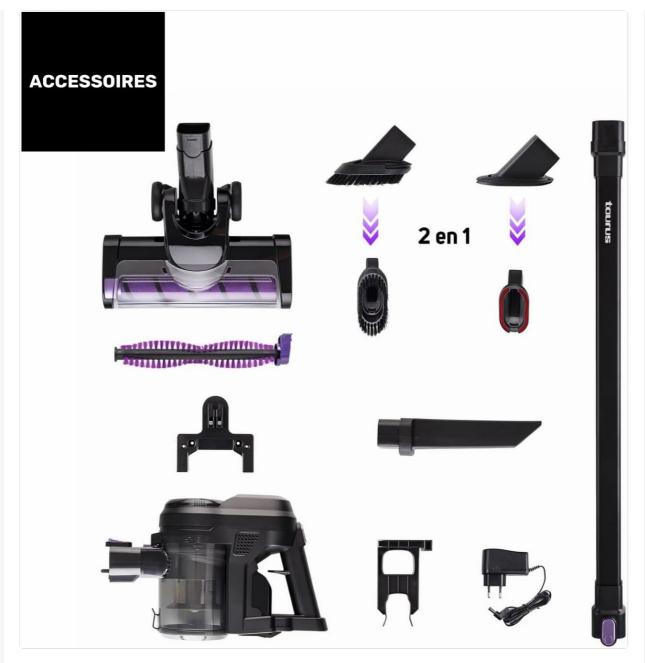


Image 2.2: A comprehensive display of all included accessories, including the main unit, extension tube, floor brush, two brush rolls, 2-in-1 tool, crevice tool, and wall mount.

3. ASSEMBLY

The Taurus HS-2900 can be assembled in different configurations to suit your cleaning needs.

3.1. Stick Vacuum Assembly:

- 1. Insert the extension tube into the main motor unit until it clicks securely.
- 2. Attach the motorized floor brush to the other end of the extension tube, ensuring it clicks into place.
- 3. Select and insert the desired brush roll (Fuzzy or Multi-purpose) into the motorized floor brush.

3.2. Handheld Vacuum Assembly:

1. Directly attach the 2-in-1 accessory or crevice tool to the main motor unit.

3.3. Long Lance Assembly:

1. Insert the extension tube into the main motor unit.

2. Attach the crevice tool or 2-in-1 accessory to the end of the extension tube.

4. CHARGING THE BATTERY

The Taurus HS-2900 features a convenient 'Simple Charge' system for easy recharging.

4.1. Initial Charge:

Before first use, fully charge the battery for approximately 4 hours. The battery status indicator lights will show the charging progress.

4.2. Simple Charge System:

- 1. Install the wall mount bracket in a suitable location near a power outlet.
- 2. Connect the charger to the wall mount bracket and plug it into a power outlet.
- 3. After use, simply place the vacuum cleaner onto the wall mount. The charging process will begin automatically without needing to manually plug in a cable to the vacuum.

A full charge provides up to 50 minutes of autonomy in ECO mode.



Image 4.1: The vacuum in operation, highlighting its 29.6V Li-ion battery, fast charge capability, and 50 minutes of autonomy.

5. OPERATION

The Taurus HS-2900 offers flexible cleaning with adjustable power settings and specialized brushes.

5.1. Power On/Off and Mode Selection:

- 1. Press the power button on the main motor unit to turn the vacuum cleaner on.
- 2. Toggle between ECO and TURBO modes using the mode selection button. ECO mode provides longer battery life for general cleaning, while TURBO mode offers maximum suction for stubborn dirt.
- 3. Press the power button again to turn the vacuum cleaner off.



Image 5.1: Close-up of the main unit, indicating the two available speed settings: ECO for extended use and TURBO for maximum power.

5.2. Using the Motorized Floor Brush:

- The motorized floor brush is equipped with LED lights to illuminate dark areas, making hidden dust visible.
- The 180° articulated head allows for easy maneuverability around furniture and into tight corners.
- Use the Fuzzy Brush for delicate hard floors like parquet and tiles.
- Use the **Multi-purpose Brush** for carpets, rugs, and general floor cleaning.



Image 5.2: The motorized floor brush featuring Optic LED illumination and a comparison of the Helix (Multi-purpose) and Fuzzy brush rolls.

5.3. Cyclonic System:

The vacuum utilizes a Cyclone System for efficient separation of dust and debris from the airflow, maintaining strong suction power.



Image 5.3: Visual representation of the cyclonic system within the dust tank, illustrating how air and dust are separated.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Emptying the Dust Tank:

The 650 ml dust tank features a 'Touch & Clean' system for hygienic emptying.

- 1. Ensure the vacuum cleaner is turned off.
- 2. Hold the main motor unit over a waste bin.
- 3. Press the 'Touch & Clean' release button to open the bottom flap of the dust tank and empty its contents.
- 4. Close the flap securely until it clicks.



Image 6.1: A user demonstrating the 'Touch & Clean' system for easily emptying the 650 ml dust tank.

6.2. Cleaning the EPA Filter:

The EPA filter retains up to 99.9% of dust particles and is washable for easy maintenance.

- 1. Ensure the vacuum cleaner is turned off and the dust tank is empty.
- 2. Remove the dust tank from the main motor unit.
- 3. Carefully remove the EPA filter and its components from the dust tank.
- 4. Rinse the filter components under running water until clean. Do not use detergents.
- 5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.
- 6. Reassemble the filter components and place them back into the dust tank, then reattach the dust tank to the main unit.



Image 6.2: An exploded view showing the washable filter components being cleaned with water, emphasizing their easy maintenance.

6.3. Cleaning the Brush Rolls:

- 1. Turn off the vacuum cleaner and detach the motorized floor brush.
- 2. Locate the brush roll release mechanism on the side of the floor brush and open it.
- 3. Remove the brush roll.
- 4. Use scissors or a brush to remove any tangled hair, threads, or debris from the brush roll.
- 5. Reinsert the clean brush roll and secure the release mechanism.

7. TROUBLESHOOTING

If you encounter any issues with your Taurus HS-2900, refer to the following table for common problems and solutions.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
| | | |

| Problem | Possible Cause | Solution |
|-------------------------------|---|--|
| Vacuum does not turn on. | Battery is depleted. | Charge the battery fully. |
| Reduced suction power. | Dust tank is full. | Empty the dust tank. |
| | Filters are clogged. | Clean or replace the EPA filter. Ensure it is completely dry before reinserting. |
| | Brush roll is tangled or blocked. | Remove and clean the brush roll. |
| Motorized brush not spinning. | Brush roll is jammed. | Remove any obstructions from the brush roll. |
| | Connection to the main unit or extension tube is loose. | Ensure all connections are secure. |
| Battery not charging. | Charger not properly connected. | Check charger connection to the wall outlet and wall mount. |
| | Faulty charger or battery. | Contact customer support. |

8. TECHNICAL SPECIFICATIONS

| Feature | Specification |
|-----------------------|--|
| Model Number | HS-2900 (948907000) |
| Power | 29.9 Watts |
| Voltage | 240 Volts (AC) |
| Battery Type | Lithium-ion (29.6V) |
| Autonomy | Up to 50 minutes (ECO mode) |
| Charge Time | Approx. 4 hours |
| Dust Tank Capacity | 650 ml |
| Filter Type | Washable EPA Filter |
| Weight | 2.95 Kilograms |
| Dimensions (packaged) | 76 x 31.2 x 13.6 cm |
| Material | Plastic |
| Special Features | HEPA, Lightweight, 3-in-1 functionality, LED brush lights, Cyclonic System |

9. WARRANTY AND SUPPORT

The Taurus HS-2900 vacuum cleaner comes with a 2-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

9.1. Warranty Exclusions:

- Damage caused by improper use, negligence, or accident.
- Normal wear and tear, including filters and brush rolls.
- · Damage resulting from unauthorized repairs or modifications.

9.2. Customer Support:

For warranty claims, technical assistance, or spare parts, please contact Taurus customer support through their official website or the retailer where the product was purchased. Please have your proof of purchase and product model number ready.

Related Documents - HS-2900



Manual de Instrucciones Taurus HB1700X / HBA1700X: Batidora de Varilla

Manual completo de instrucciones para la batidora de varilla Taurus HB1700X y HBA1700X. Aprenda a usar, cuidar y limpiar su electrodomstico de cocina de forma segura y eficiente.



Taurus Model Air Hair Styler User Manual

User manual for the Taurus Model Air hair styler, providing instructions on use, care, safety, and accessories for effective hair styling.



Taurus Ultimate Go Series Stick Vacuum Cleaner User Manual

User manual for Taurus Ultimate Go, Ultimate Digital, Ultimate Go Animal, and Ultimate Digital Fuzzy cordless stick vacuum cleaners. Covers usage, care, installation, charging, cleaning, and maintenance.

