

[Manuals.plus](#) /

> [somfy](#) /

> Somfy Remote Situo 1 Pure - 74300 RTS Control for 1 Motorized Shade or One Group of Multiple Shades - Omni-Directional, Saves Favorite Position, Elegant White - #1870571

somfy 1870571

Somfy Remote Situo 1 Pure Instruction Manual

Model: 1870571

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Somfy Remote Situo 1 Pure. This remote control is designed to operate Somfy RTS (Radio Technology Somfy) motorized shades, curtains, and awnings, offering convenient and reliable control.

Please read this manual thoroughly before using the product to ensure proper function and to maximize its lifespan.

2. PRODUCT FEATURES

The Somfy Remote Situo 1 Pure offers a range of features designed for ease of use and aesthetic integration:

- **Clean White Design:** A sleek, pure white finish that complements various interior decors.
- **Single Channel Control:** Capable of controlling one individual motorized shade or a group of multiple shades, curtains, or awnings simultaneously.
- **Omni-Directional RTS Technology:** Operates without requiring direct pointing at the motorized product, thanks to Radio Technology Somfy (RTS).
- **"MY" Favorite Position:** An exclusive Somfy feature allowing users to save and recall a preferred intermediate position for their window coverings with a single press.
- **Included Wall Holder:** Comes with a convenient wall holder for easy storage and accessibility.
- **Battery-Powered:** Operates on 1 CR5 battery (included).
- **Compatibility:** Exclusively works with Somfy RTS motors. Not compatible with Zigbee, Z-Wave, Wi-Fi, or other protocols.



Image: The Somfy Remote Situ 1 Pure, its retail packaging, and the included wall holder.

3. SETUP AND PROGRAMMING

Programming your Somfy Remote Situ 1 Pure is a straightforward process. These steps outline how to link your remote to your Somfy RTS motorized product.

3.1. Initial Programming (Adding a New Remote)

1. **Prepare the Motor:** Ensure your Somfy RTS motor is powered on.
2. **Access Existing Remote (if applicable):** If you have an existing, already programmed Somfy RTS remote for the motor, locate the programming button (often a small pinhole button on the back).

3. **Activate Programming Mode:** On the *existing* remote, press and hold the programming button until the motorized product jogs (moves slightly up and down). This indicates the motor is in programming mode.
4. **Program New Remote:** On your *new* Somfy Remote Situo 1 Pure, press and hold the programming button (also a small pinhole button, usually on the back or side) until the motorized product jogs again. This confirms the new remote has been successfully programmed.
5. **Test Operation:** Use the UP, DOWN, and MY buttons on the new remote to verify control of the motorized product.

Note: If you do not have an existing remote, or if the motor is new, refer to the specific motor's instructions for putting it into initial programming mode. This often involves a brief power cycle.



Image: A hand holding the Somfy Situo 1 RTS remote, demonstrating its ergonomic design.

4. OPERATING INSTRUCTIONS

The Somfy Remote Situo 1 Pure features three primary buttons for intuitive control:

▲ UP Button:

Press this button to raise or open your motorized shade, curtain, or awning.

▼ DOWN Button:

Press this button to lower or close your motorized shade, curtain, or awning.

MY Button (Stop / Favorite Position):

- **Stop Function:** During movement (up or down), press the MY button once to stop the motorized product at its current position.
- **Favorite Position:** If a favorite position has been set, press the MY button once when the product is stopped to send it to the pre-programmed favorite position.
- **Setting Favorite Position:** To set a favorite position, move the product to your desired intermediate position using the UP or DOWN buttons. Once at the desired position, press and hold the MY button until the product jogs. This saves the current position as your favorite.
- **Deleting Favorite Position:** To delete a favorite position, send the product to its favorite position using the MY button. Once it reaches the favorite position and stops, press and hold the MY button until the product jogs. The favorite position is now cleared.

Three buttons.
Endless
possibilities.

UP
FAVORITE
DOWN

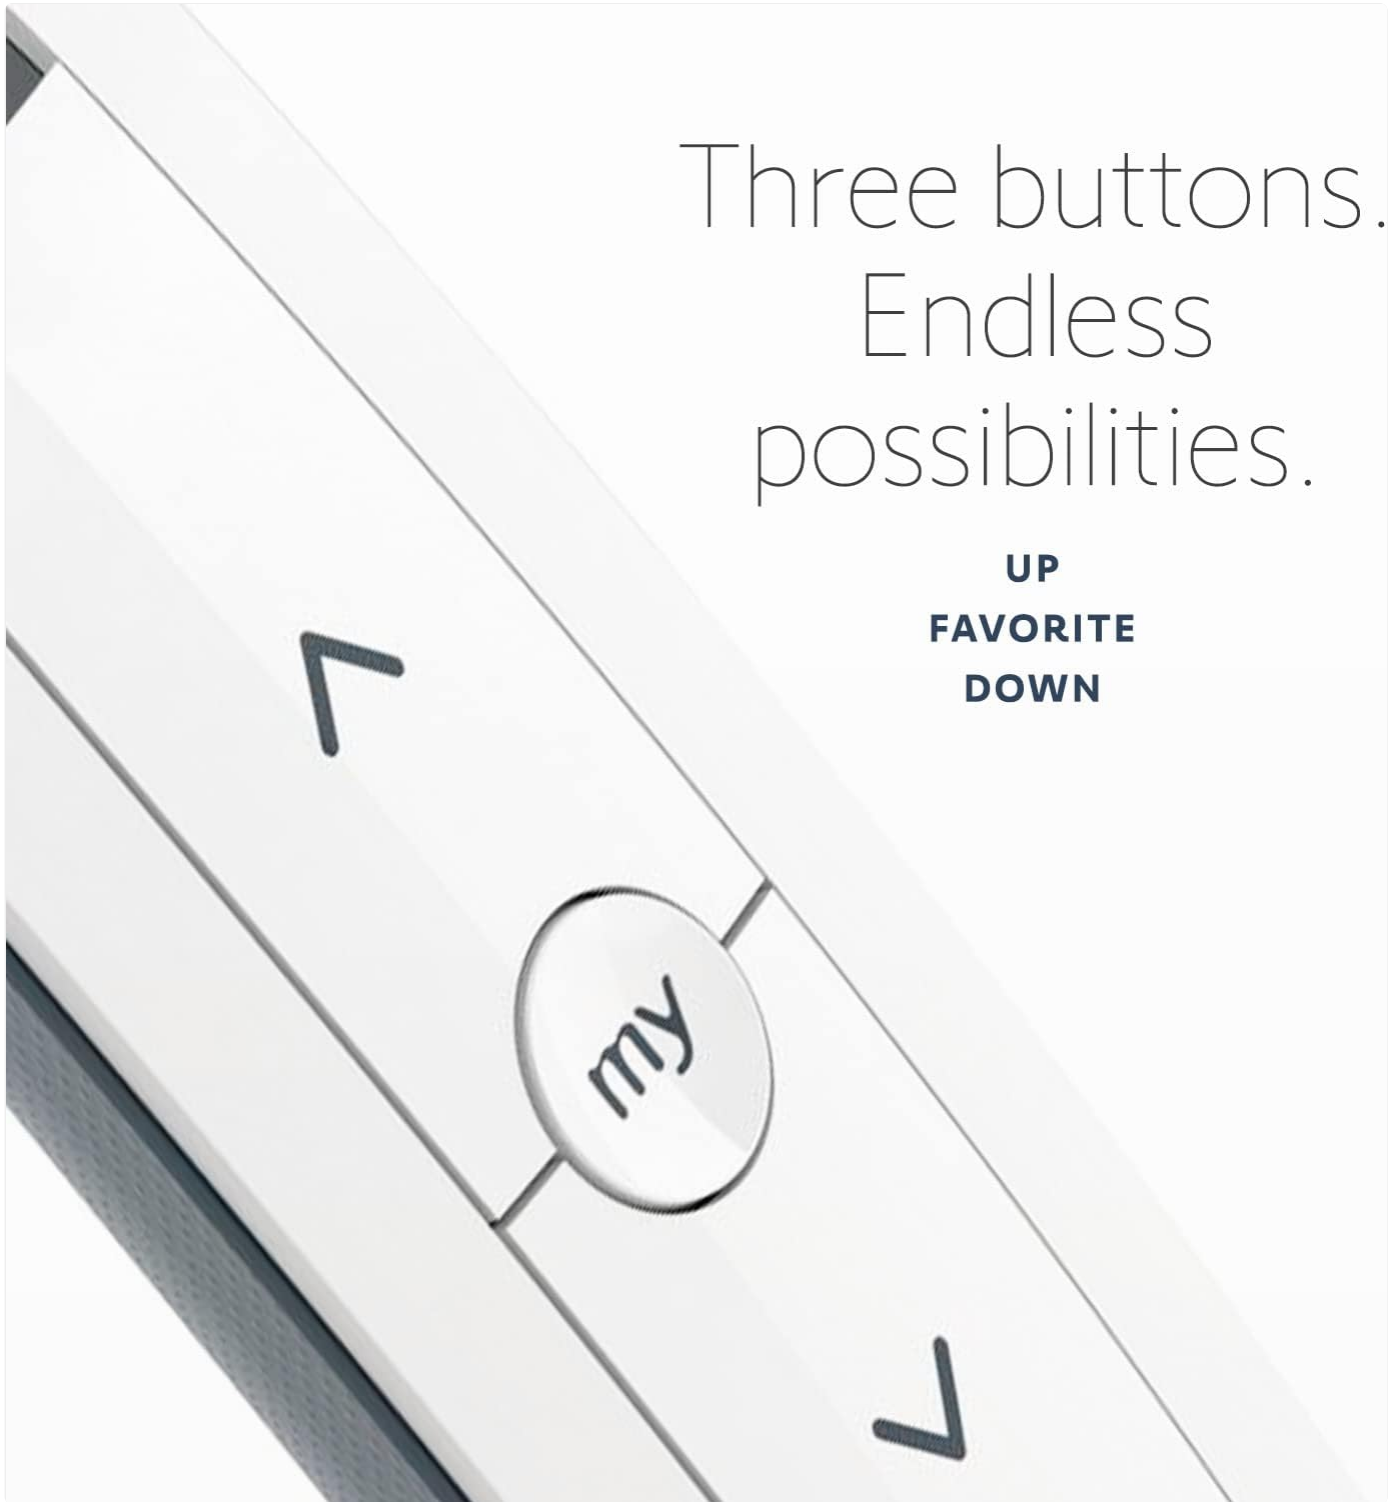


Image: A close-up view of the Somfy remote's three main control buttons: Up, My, and Down.

5. MAINTENANCE

5.1. Battery Replacement

The Somfy Remote Situo 1 Pure uses one CR5 battery. When the remote's range decreases or it becomes unresponsive, it's likely time to replace the battery.

1. Locate the battery compartment cover on the back of the remote.
2. Carefully open the compartment. You may need a small screwdriver or coin.
3. Remove the old CR5 battery.
4. Insert a new CR5 battery, ensuring correct polarity (+/-).

5. Close the battery compartment cover securely.
6. Test the remote's functionality.

5.2. Cleaning

To clean the remote, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the remote's finish or internal components.

6. TROUBLESHOOTING

If you experience issues with your Somfy Remote Situo 1 Pure, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote does not control the motor.	<ul style="list-style-type: none"> ◦ Battery is dead or low. ◦ Remote is not programmed to the motor. ◦ Motor is not powered. ◦ Remote is out of range. 	<ul style="list-style-type: none"> ◦ Replace the battery (see Section 5.1). ◦ Follow programming steps (see Section 3.1). ◦ Check power supply to the motor. ◦ Move closer to the motor.
Motor jogs but doesn't respond to commands.	<ul style="list-style-type: none"> ◦ Limits may need to be set or reset on the motor. 	<ul style="list-style-type: none"> ◦ Refer to your specific Somfy motor's instruction manual for limit setting procedures.
"MY" button does not recall favorite position.	<ul style="list-style-type: none"> ◦ Favorite position not set or was deleted. 	<ul style="list-style-type: none"> ◦ Re-set the favorite position (see Section 4).

If these steps do not resolve the issue, please contact Somfy customer support or consult the full installation manual available online.

Plays well with others.

Works with any Somfy RTS product.

▶ INTERIOR WINDOW TREATMENTS



▶ EXTERIOR SCREENS & MORE



▶ WALL SWITCHES



Image: The Somfy remote being used to control interior window treatments, demonstrating its application.

7. SPECIFICATIONS

Attribute	Detail
Model Number	1870571
Brand	Somfy
Product Dimensions	5 x 1.25 x 0.5 inches
Item Weight	2.39 ounces
Battery Type	1 CR5 battery (included)

Attribute	Detail
Control Technology	RTS (Radio Technology Somfy)
Channels	1 (controls one shade or group)
Color	Pure White
Compatible Devices	Somfy RTS Motors

8. WARRANTY AND SUPPORT

8.1. Warranty Information

Specific warranty details for the Somfy Remote Situo 1 Pure are typically provided with the product packaging or can be found on the official Somfy website. Somfy products are known for their quality and reliability. Please retain your proof of purchase for warranty claims.

8.2. Customer Support

For further assistance, technical support, or to inquire about additional Somfy products, please visit the official Somfy website or contact their customer service department. You can often find FAQs, video tutorials, and contact information on their support pages.

Online Resources:

- [Visit the Somfy Store on Amazon](#)
- [Download Installation Manual \(PDF\)](#)



© 2025 Somfy. All rights reserved.

This manual is for informational purposes only. Somfy reserves the right to make changes to its products without prior notice.