

ROTTOGOON 7a3a58e7-8fdd-41b2-9003-d7738b20b436

ROTTOGOON Semi Flush Mount Ceiling Light

Model: 7a3a58e7-8fdd-41b2-9003-d7738b20b436

Brand: ROTTOGOON

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installation and retain them for future reference. All electrical connections must be in accordance with local codes and ordinances, the National Electric Code (NEC), and ANSI/NFPA 70-1999. If you are unfamiliar with electrical wiring, consult a qualified electrician.

- **WARNING:** To avoid the risk of electric shock, always disconnect power at the main circuit breaker or fuse box before beginning installation or performing any maintenance.
- This fixture is intended for indoor use only.
- Ensure the mounting surface is structurally sound and can support the weight of the fixture.
- Use only E26 base bulbs with a maximum wattage of 60W per bulb.
- Do not exceed the recommended wattage.
- Handle glass components with care to prevent breakage.

2. WHAT'S IN THE BOX

Carefully unpack all components and inspect for any damage. Keep all packaging materials until you are satisfied with the product.

- Fixture Body with Brass Gold Finish Canopy and Rods
- 3 x Clear Seeded Glass Shades
- Mounting Hardware (Crossbar, Mounting Screws, Wire Nuts, Ground Screw)
- Instruction Manual

Note: Light bulbs are not included and must be purchased separately.



Brushed Nickel Metal Canopy
(Stylish and Sturdy)

E26 Lamp Base
(Versatile Compatibility)

Seeded Glass Shade
(Thick and Clear)

Image: Key components including the brushed gold metal canopy, E26 lamp base, and seeded glass shade.

3. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	ROTTOGOON
Model Number	7a3a58e7-8fdd-41b2-9003-d7738b20b436
Color	Gold (Fixture), Clear (Shade)
Material	Glass, Metal
Style	Modern
Light Fixture Form	Close to Ceiling / Semi Flush Mount

Product Dimensions	13.31"L x 9.5"W x 9.5"H
Number of Light Sources	3
Bulb Base	E26 Standard
Max Wattage per Bulb	60 Watts
Voltage	120 Volts (AC)
Special Feature	Dimmable (with compatible dimmer switch and bulbs)
Indoor/Outdoor Usage	Indoor Only



E26 BASE SOCKET

Compatible with E26 Base Bulb(60W MAX)

Image: Detailed dimensions and E26 bulb compatibility information.

4. SETUP AND INSTALLATION

This fixture is designed for easy installation. Follow these steps carefully:

1. **Turn Off Power:** Before starting, ensure the power supply to the junction box is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting:** Attach the mounting crossbar to the junction box using the provided mounting screws. Ensure it is securely fastened.
3. **Wire Connections:** Connect the fixture's wires to the corresponding wires from the junction box using the wire nuts. Connect the black wire (live) to the black wire, the white wire (neutral) to the white wire, and the ground wire to the ground wire (or green/bare copper wire). Secure all connections with wire nuts and wrap with electrical tape if desired.
4. **Mount Fixture:** Carefully push the wired fixture up to the ceiling, aligning the holes in the canopy with the screws on the mounting crossbar. Secure the fixture to the crossbar with the decorative nuts or screws provided.
5. **Install Glass Shades:** Gently attach each seeded glass shade to its respective lamp holder on the fixture. Ensure they are securely tightened but do not overtighten.
6. **Install Bulbs:** Screw in three E26 base bulbs (not included) into the sockets. Ensure they are no more than 60W each.
7. **Restore Power:** Once installation is complete and all components are secure, restore power at the circuit breaker.

For visual assistance, refer to the component image in Section 2.

5. OPERATING INSTRUCTIONS

The ROTTOGOON Semi Flush Mount Ceiling Light operates like a standard ceiling fixture. Once installed and powered, it can be controlled via your wall switch.

- **Bulb Compatibility:** This fixture uses E26 standard base bulbs. For optimal performance and aesthetic, consider using Edison-style LED bulbs.
- **Dimmable Feature:** The fixture is fully dimmable. To utilize this feature, you must use dimmable E26 bulbs and connect the fixture to a compatible dimmer switch (both sold separately).



Image: Examples of compatible E26 base bulbs.

This kitchen ceiling light will be fully dimmable with a compatible dimmer switch. (Bulb are not included)



Image: Demonstration of dimming functionality.

6. MAINTENANCE

Regular cleaning and proper care will help maintain the appearance and functionality of your light fixture.

- **Cleaning:** Always turn off the power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish. For glass shades, a mild glass cleaner can be used, applied to a cloth first, not directly to the shade.
- **Bulb Replacement:** Ensure the power is off and bulbs have cooled before attempting to replace them. Unscrew the old bulb and screw in a new E26 base bulb (max 60W).
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

7. TROUBLESHOOTING

If you encounter issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connections. Faulty bulb.	Check circuit breaker/fuse. Ensure all wire connections are secure (with power off). Replace bulb with a known working one.
Light flickers.	Loose bulb. Incompatible dimmer switch/bulbs. Loose wire connections.	Tighten bulb. Ensure dimmer and bulbs are compatible and rated for dimming. Check wire connections (with power off).
Glass shade is loose.	Shade not tightened properly.	Gently tighten the retaining ring or screws securing the shade.

If the problem persists after trying these solutions, please contact ROTTOGOON customer support.

8. WARRANTY AND SUPPORT

ROTTGOON is committed to providing high-quality products. While specific warranty details are not provided in this

manual, customers are encouraged to refer to the product listing on the point of purchase or contact ROTTOGOON customer service for information regarding warranty coverage and support.

For assistance, please visit the [ROTTOGOON Store on Amazon](#) or contact the seller directly through your purchase platform.

Protection plans may be available for purchase separately at the time of product acquisition. These plans offer extended coverage beyond the manufacturer's standard warranty.

- **3-Year Protection Plan:** Available for purchase.
- **4-Year Protection Plan:** Available for purchase.

© 2025 ROTTOGOON. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question