

[Manuals.plus](#) /

› [Magefesa](#) /

› Magefesa Borea MGF4470 Air Fryer Instruction Manual

Magefesa MGF4470

Magefesa Borea MGF4470 Air Fryer Instruction Manual

Model: MGF4470 | Brand: Magefesa

1. INTRODUCTION

Thank you for choosing the Magefesa Borea MGF4470 Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods by using rapid hot air circulation, significantly reducing the need for oil. Please read this manual thoroughly before operating the appliance and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block the air inlet or outlet vents during operation.
- The appliance features five protection systems: automatic shut-off when the basket is removed, sudden temperature protection, high-temperature resistant materials, fuse overheat protection, and food-grade materials.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Magefesa Borea MGF4470 Air Fryer.



Image 1: Front view of the Magefesa Borea MGF4470 Air Fryer. This image displays the overall design of the air fryer, highlighting its compact size, the main body, the handle for the food basket, and the two rotary control knobs on the top panel.

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Features temperature and timer knobs, and indicator lights.
- **Food Basket:** Removable basket for holding food during cooking.
- **Basket Support/Container:** Holds the food basket.
- **Handle:** For safely pulling out the food basket.
- **Air Inlet/Outlet Vents:** For proper air circulation.
- **Non-slip Base:** Provides stability during use.



Image 2: Detailed view of the control panel. This image shows the two rotary knobs for setting temperature (80-200°C) and time (0-60 minutes), along with the power and heating indicator lights.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials from the air fryer.
2. **Initial Cleaning:** Before first use, clean the food basket and basket support with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded wall outlet. Ensure the voltage matches the specifications of your appliance (220 Volts).

5. OPERATING INSTRUCTIONS

Follow these steps for cooking with your Magefesa Borea MGF4470 Air Fryer.

1. **Prepare Food:** Place your ingredients into the food basket. Do not overfill the basket to ensure even cooking. For best results, some foods may require a light coating of oil.
2. **Insert Basket:** Slide the food basket back into the main unit until it clicks securely into place.
3. **Set Temperature:** Use the temperature control knob to select the desired cooking temperature (80-200 °C).
4. **Set Timer:** Use the timer control knob to set the required cooking time (0-60 minutes). The power indicator light will illuminate.
5. **Cooking Process:** The air fryer will begin heating. The heating indicator light will turn on and off periodically as the

appliance maintains the set temperature.

- 6. **Shaking/Turning Food:** For some foods, especially fries or smaller items, it is recommended to shake or turn the food halfway through the cooking time to ensure even browning. To do this, carefully pull out the basket using the handle. The appliance will automatically pause. Shake or turn the food, then reinsert the basket. The cooking cycle will resume.
- 7. **Completion:** When the timer reaches zero, a bell will sound, and the air fryer will automatically shut off.
- 8. **Remove Food:** Carefully pull out the food basket. Use heat-resistant tongs to remove the cooked food. Be cautious of hot steam.
- 9. **Cool Down:** Allow the appliance to cool down completely before cleaning or storing.



Image 3: The air fryer basket containing cooked french fries. This illustrates the 3.2L capacity, suitable for preparing meals for 3-4 people.



Image 4: The air fryer basket containing cooked chicken nuggets. This highlights the healthier cooking method, reducing fat by up to 80% compared to traditional frying.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- 1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
- 2. **Removable Parts:** The food basket, support, and container are designed for easy disassembly and are dishwasher safe. Alternatively, wash them with warm water and a mild dishwashing liquid. Avoid using abrasive cleaning materials or metal scouring pads.
- 3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Never immerse the main unit in water or any other liquid.
- 4. **Interior:** For stubborn residue inside the main unit, use a damp cloth and a small amount of mild detergent. Ensure no water enters the electrical components.
- 5. **Storage:** Once clean and dry, store the air fryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not inserted correctly.	Check power cord connection; test outlet with another appliance; ensure basket is fully pushed in.
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned.	Do not overfill the basket; shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly; remove excess oil from food before cooking.

Problem	Possible Cause	Solution
Appliance smells like plastic during first use.	Normal for new appliances.	The smell will dissipate after a few uses. Ensure good ventilation.

8. SPECIFICATIONS

- **Model:** MGF4470 (Reference Part: 3205333, Article Model Number: 02FR4470000)
- **Brand:** Magefesa
- **Capacity:** 3.2 Liters
- **Power:** 1500 Watts
- **Voltage:** 220 Volts
- **Temperature Range:** 80°C - 200°C
- **Timer:** 0-60 minutes
- **Dimensions (Approximate):** 32 cm (base diameter) x 34 cm (height)
- **Weight:** 4.7 Kilograms
- **Special Features:** Temperature control, 5 protection systems, non-slip base.
- **Dishwasher Safe Parts:** Yes (basket, support, container)
- **Non-stick Coating:** No (as per product specifications)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Magefesa customer service.

Magefesa Official Website: www.magefesa.com

