



[Manuals.plus](#) /

> [Konix](#) /

> Konix FFF Wired Controller for Nintendo Switch & PC - White

Konix 3328170282925

Konix FFF Wired Controller Instruction Manual

Model: 3328170282925

INTRODUCTION

Thank you for choosing the Konix FFF Wired Controller. This controller is designed to enhance your gaming experience on Nintendo Switch, Switch 2, and PC, offering an ergonomic design, vibration feedback, and a convenient screenshot button. Please read this manual carefully before use to ensure proper setup and operation.



Figure 1: Konix FFF Wired Controller (White)

KEY FEATURES

- **Ergonomic Grip:** Crafted with quality materials and anti-slip grips for comfortable extended gaming sessions, reducing hand fatigue.
- **Wired Connection:** Features a 3-meter cable, providing ample length for flexible gameplay without battery concerns.
- **Vibration Function:** Enhances immersion during gameplay with responsive vibration feedback.
- **Screenshot Button:** Capture and share your in-game moments with a dedicated screenshot button, similar to official Nintendo Switch controllers.
- **Multi-Platform Compatibility:** Fully compatible with Nintendo Switch, Switch 2, and PC.

**FROM THE HOME MENU SELECT "SYSTEM SETTINGS"
> "CONTROLLERS AND SENSORS." SELECT "PRO
CONTROLLER WIRED COMMUNICATION" TO ENABLE
THIS FEATURE. SELECT IT AGAIN TO DISABLE IT.**



Figure 2: Controller features overview

SETUP INSTRUCTIONS

Connecting to Nintendo Switch / Switch 2

1. Enable Pro Controller Wired Communication:

Before connecting the controller for the first time, you must enable the "Pro Controller Wired Communication" option on your Nintendo Switch console.

- From the HOME Menu, select "**System Settings**".
- Scroll down the left-hand menu and select "**Controllers and Sensors**".
- Select "**Pro Controller Wired Communication**" to enable this feature. (Select it again to disable if needed).



Figure 3: Enabling Pro Controller Wired Communication on Nintendo Switch

2. Connect the Controller:

Plug the USB-A end of the controller's cable into an available USB port on your Nintendo Switch dock. The controller will automatically connect and be ready for use.



Figure 4: USB cable connection point

Connecting to PC

1. Plug and Play:

Connect the USB-A end of the controller's cable to an available USB port on your PC. The operating system should automatically detect and install the necessary drivers. The controller will then be ready for use with compatible PC games.

OPERATING INSTRUCTIONS

The Konix FFF Wired Controller functions similarly to standard gamepads. Refer to your game's specific control scheme for button assignments.

Button Layout

The controller features standard buttons including A/B/X/Y, directional pad, left and right analog sticks, L/R shoulder buttons, ZL/ZR triggers, Home button, Plus (+), Minus (-), and a dedicated Screenshot button.



Figure 5: Controller button layout (front view)

Using the Screenshot Button

- Press the **Screenshot button** (located below the directional pad) during gameplay to capture an image of your screen.
- On Nintendo Switch, captured images can be accessed and managed from the Album on the HOME Menu.

Vibration Function

- The controller's vibration function provides tactile feedback during compatible games.
- Vibration intensity may be adjustable within individual game settings or console system settings.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use abrasive cleaners or solvents.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharp bends or excessive pulling on the cable to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Controller not recognized by Nintendo Switch.	<ul style="list-style-type: none">• Ensure "Pro Controller Wired Communication" is enabled in System Settings (see Setup Instructions).• Check if the USB cable is securely connected to both the controller and the Switch dock.• Try a different USB port on the dock.
Controller not recognized by PC.	<ul style="list-style-type: none">• Ensure the USB cable is securely connected to both the controller and the PC.• Try a different USB port on your PC.• Restart your PC.• Check Device Manager for any driver issues.
Vibration function not working.	<ul style="list-style-type: none">• Verify that the game you are playing supports vibration feedback.• Check in-game settings and console/PC system settings to ensure vibration is enabled.
Buttons are unresponsive or sticky.	<ul style="list-style-type: none">• Ensure the controller is clean and free from debris.• If the issue persists, contact customer support.

SPECIFICATIONS

- **Model Number:** 3328170282925
- **Compatibility:** Nintendo Switch, Nintendo Switch 2, PC
- **Connection Type:** Wired USB
- **Cable Length:** 3 meters
- **Features:** Vibration function, Screenshot button, Ergonomic design
- **Dimensions (L x W x H):** 7 x 21.5 x 17.5 cm
- **Weight:** 390 grams
- **Recommended Age:** 3 years and older

WARRANTY INFORMATION

Konix products are covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Konix website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Konix FFF Wired Controller, please contact Konix customer

support through their official website or the contact information provided with your product packaging.
For more information, visit the [Konix Store on Amazon](#).

