

## Princess 01.182060.01.001

# Princess Digital Airfryer XXL Instruction Manual

Model: 01.182060.01.001 | Brand: Princess

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the appliance and save it for future reference. Incorrect use may lead to injury and void the warranty.

### General Safety

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not operate the appliance if the plug, main cord, or the appliance itself is damaged.
- Always unplug the appliance after use and before cleaning.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot air is released through the air outlet openings. Keep your hands and face at a safe distance from the openings.
- Do not cover the air inlet and outlet openings while the appliance is operating.
- The outer surfaces may become hot during use. Do not touch hot surfaces directly.

## 2. PRODUCT OVERVIEW

The Princess Digital Airfryer XXL is designed for healthy frying with hot air, offering a large capacity and digital controls for ease of use.



Figure 2.1: The Princess Digital Airfryer XXL, showcasing its sleek design and the removable basket filled with fries.

## Components

- Main Unit with Digital Control Panel
- Removable Frying Basket
- Removable Frying Pan (drawer)
- Air Inlet and Outlet Openings



Figure 2.2: Product dimensions and capacity details for the Princess Digital Airfryer XXL.



Figure 2.3: Illustration of the hot air circulation technology, which ensures even cooking and crispiness.

### 3. SETUP AND FIRST USE

#### Unpacking

Carefully remove the appliance and all accessories from the packaging. Remove any stickers or labels from the appliance.

## Before First Use

1. Clean the frying basket and pan thoroughly with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are completely dry before use.

## Placement

Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure adequate ventilation around the unit.



Figure 3.1: Demonstrating the easy removal of the frying basket from the airfryer.

## Video: Basket Assembly and Insertion

Your browser does not support the video tag.

Video 3.1: This video demonstrates how to properly assemble the frying basket and pan, and how to insert them into the Princess Digital Airfryer XXL. It also shows the digital display in action.

## 4. OPERATING INSTRUCTIONS

The digital control panel allows for precise temperature and time settings, as well as access to 8 pre-programmed cooking settings.



Figure 4.1: The intuitive digital control panel with touch buttons for temperature, time, and pre-programmed settings.

## Basic Operation

1. Place ingredients into the frying basket. Do not overfill.
2. Slide the frying pan with the basket back into the appliance.
3. Plug the appliance into a grounded wall socket.
4. Press the power button to turn on the display.
5. Select a pre-programmed setting or manually adjust temperature and time using the +/- buttons.
6. Press the start button to begin cooking.
7. For even cooking, shake the basket halfway through the cooking time for items like fries.

## Pre-programmed Settings

The airfryer features 8 pre-programmed settings for common dishes, optimizing cooking time and temperature automatically.



Figure 4.2: Examples of delicious meals that can be prepared using the airfryer's various settings.

Cooking Guide (Approximate)

| Food Item           | Temperature (°C) | Time (Minutes) | Notes                                       |
|---------------------|------------------|----------------|---------------------------------------------|
| Frozen Fries (500g) | 180-200          | 15-25          | Shake basket halfway                        |
| Chicken Drumsticks  | 180              | 20-30          | Flip halfway                                |
| Steak (200g)        | 180-200          | 8-15           | Flip halfway, depending on desired doneness |
| Vegetables (mixed)  | 160-180          | 10-20          | Toss halfway                                |

Note: Cooking times and temperatures are approximate and may vary based on food quantity, thickness, and desired crispiness. Always ensure food is cooked thoroughly.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your airfryer.

Cleaning the Frying Basket and Pan

- After each use, unplug the appliance and allow it to cool down completely.

- Remove the frying pan and basket. They are dishwasher safe.
- Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn residue, soak the pan and basket in hot water with dish soap for about 10 minutes.
- Ensure all parts are completely dry before reassembling or storing.



Figure 5.1: The removable frying basket and pan are designed for easy cleaning, including being dishwasher safe.

### Cleaning the Main Unit

- Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
- Clean the heating element inside the appliance with a cleaning brush to remove any food residue.

### Storage

Store the appliance in a dry, cool place when not in use, ensuring the power cord is neatly wrapped.

## 6. TROUBLESHOOTING

If you encounter issues with your Princess Digital Airfryer XXL, refer to the common problems and solutions below.

| Problem                     | Possible Cause                                       | Solution                                                                       |
|-----------------------------|------------------------------------------------------|--------------------------------------------------------------------------------|
| Appliance does not turn on. | Not plugged in; power outlet issue; appliance fault. | Check power cord connection; try a different outlet; contact customer support. |
| Food is not cooked evenly.  | Basket overloaded; food not shaken.                  | Reduce food quantity; shake or flip food halfway through cooking.              |

| Problem                            | Possible Cause                                                                | Solution                                                                 |
|------------------------------------|-------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| Food is not crispy.                | Not enough oil (for some foods); temperature too low; cooking time too short. | Lightly coat food with oil; increase temperature or cooking time.        |
| White smoke coming from appliance. | Grease residue from previous use; fatty ingredients.                          | Clean the pan and basket thoroughly; remove excess fat from ingredients. |

## 7. SPECIFICATIONS

**Brand:** Princess  
**Model Number:** 01.182060.01.001  
**Color:** Silver  
**Product Dimensions:** 40.5 x 39.5 x 33.5 cm (approx. 43D x 39B x 38H cm as per other spec)  
**Weight:** 4.55 kg (approx. 4554 Grams)  
**Capacity:** 5.5 Liters  
**Power/Wattage:** 1700 Watts  
**Voltage:** 230V  
**Material:** Stainless Steel  
**Special Features:** Temperature Control, Digital Control Panel, 8 Pre-programmed Settings

## 8. WARRANTY AND SUPPORT

This Princess Digital Airfryer XXL comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact Princess customer service through their official website or the contact details provided in your product documentation.

You can also visit the official Princess website for frequently asked questions and additional resources.

© 2024 Princess. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**