

[Manuals.plus](#) /

> [Deco Home](#) /

> Deco Home Excelsior Omma Desk Instruction Manual, Chocolate, Model 7502006219880

Deco Home 7502006219880

Deco Home Excelsior Omma Desk Instruction Manual

Model: 7502006219880 | Brand: Deco Home

1. INTRODUCTION

Thank you for choosing the Deco Home Excelsior Omma Desk. This manual provides detailed instructions for the assembly, operation, and maintenance of your new desk. Please read these instructions carefully before beginning assembly and retain them for future reference.

The Excelsior Omma Desk is a contemporary, chocolate-colored desk made from 15mm thick melamine, an environmentally sustainable material certified by FSC. It features a spacious work surface, a sliding drawer, and additional compartments for storage and decoration.



2. SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use damaged parts.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Do not stand or sit on the desk.
- Place the desk on a flat, stable surface to prevent tipping.
- Do not overload the desk or its shelves/drawer. Distribute weight evenly.
- Use appropriate tools as indicated in the assembly instructions.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- Desk panels (top, sides, shelves, drawer components)
- Hardware kit (screws, dowels, drawer slides, handle)
- Plastic glides
- Assembly instruction manual

4. ASSEMBLY INSTRUCTIONS

Assembly of the Deco Home Excelsior Omma Desk is designed to be straightforward. Follow these steps carefully. It is recommended to have a second person assist with assembly for stability and ease.

Step 1: Prepare the Base Structure

Begin by identifying the main side panels and the bottom panel. Attach the plastic glides to the bottom edges of the side panels. Connect the side panels to the bottom panel using the provided hardware (dowels and screws). Ensure all connections are secure.



Image 4.1: Initial assembly of the desk's structural components.

Step 2: Assemble the Storage Unit

Assemble the smaller side panels and shelves for the storage unit. Secure them together using the appropriate hardware. This unit will form the right-hand side of the desk, housing the drawer and open shelves.



Image 4.2: Assembly of the integrated storage unit.

Step 3: Attach the Desktop Surface

Carefully place the main desktop surface onto the assembled base and storage unit. Align the pre-drilled holes and secure the desktop using the provided screws. Ensure the desktop is flush and stable.



Image 4.3: The desk with the desktop surface attached.

Step 4: Assemble and Install the Drawer

Assemble the drawer components according to the separate drawer assembly instructions (if provided, or standard furniture drawer assembly). Attach the drawer slides to both the drawer and the desk's storage unit. Insert the assembled drawer into its designated slot. Finally, attach the drawer handle.



Image 4.4: Detail of the sliding drawer mechanism.

5. OPERATING INSTRUCTIONS

Using the Work Surface

The main desktop surface is designed to accommodate a computer, laptop, or other work essentials. Ensure that heavy items are placed centrally and that the total weight does not exceed the desk's capacity.



Image 5.1: The desk configured for a computer workstation.

Using the Sliding Drawer and Shelves

The integrated sliding drawer is suitable for organizing personal items, stationery, or documents. The open shelves provide space for books, decorative items, or small office supplies. Avoid placing excessively heavy items in the drawer or on the shelves to ensure smooth operation and prevent damage.



Image 5.2: The desk with its drawer open and shelves utilized for storage.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Do not use abrasive cleaners, brushes, or chemical products, as these can damage the melamine finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the material.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Protect the desk from excessive moisture.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Desk is wobbly	Loose connections; uneven floor.	Check and tighten all screws. Ensure the desk is on a level surface. Adjust plastic glides if possible.
Drawer does not slide smoothly	Drawer slides misaligned; obstruction; overloaded drawer.	Ensure drawer slides are correctly installed and aligned. Remove any obstructions. Reduce the weight in the drawer.
Scratches on surface	Sharp objects; abrasive cleaning.	Use protective mats for sharp objects. Avoid abrasive cleaning materials. Minor scratches may be concealed with furniture repair kits.

8. SPECIFICATIONS

- **Model:** 7502006219880
- **Brand:** Deco Home
- **Dimensions (L x W x H):** 110 cm x 43.3 cm x 73 cm (43.3 in x 17.0 in x 28.7 in)
- **Weight:** 23 kg (50.7 lbs)
- **Material:** 15mm thick Melamine
- **Color:** Chocolate
- **Features:** 1 sliding drawer, multiple open storage shelves, plastic glides.
- **Assembly:** Required (user assembly)

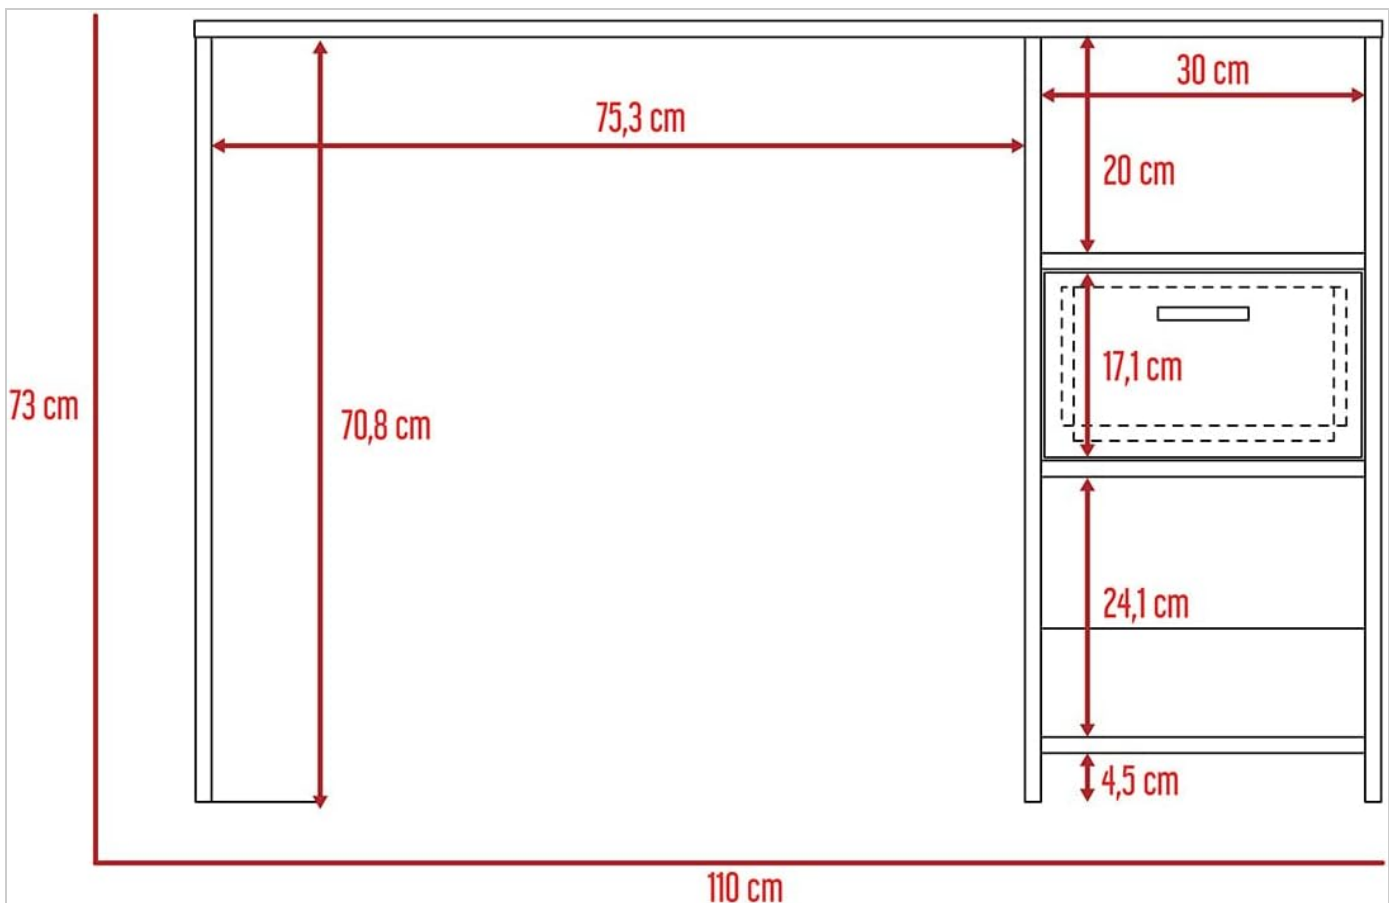


Image 8.1: Detailed dimensions of the Excelsior Omma Desk.

9. WARRANTY AND SUPPORT

This Deco Home product comes with a manufacturer's warranty. For specific details regarding warranty coverage and duration, please refer to the documentation included with your purchase or contact Deco Home customer service. Extended warranty

options may also be available through third-party providers like Assurant.

For technical assistance, missing parts, or any other inquiries, please visit the official Deco Home website or contact their customer support directly.

Manufacturer: Diecsa

Brand: Deco Home

