

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Outsunny](#) /

› [Outsunny Folding Chaise Lounge Chair User Manual - Model 84B-397CW](#)

Outsunny 84B-397CW

Outsunny Folding Chaise Lounge Chair User Manual

Model: 84B-397CW | Brand: Outsunny

1. PRODUCT OVERVIEW

The Outsunny Folding Chaise Lounge Chair is designed for outdoor relaxation, offering comfort and portability. This chair features a durable steel frame, breathable mesh fabric, and an adjustable backrest to suit various preferences.



The Outsunny Folding Chaise Lounge Chair in cream white, ready for use.

- **Relaxing Design:** Provides a comfortable seat for outdoor environments such as poolsides, beaches, yards, or patios.
- **Customizable Comfort:** Features an adjustable backrest with five positions, allowing users to find their preferred angle for activities like sunbathing, reading, or napping.
- **Portable and Versatile:** Lightweight and foldable design facilitates easy transportation and storage, making it suitable for camping trips or as extra outdoor seating.
- **Outdoor Durability:** Constructed with a strong steel frame, powder-coated for water resistance, and a breathable mesh seat for quick drying and comfort.

2. SETUP INSTRUCTIONS

The Outsunny Folding Chaise Lounge Chair is designed for quick and easy setup. No assembly tools are required.

1. **Unpack the Chair:** Carefully remove the chair from its packaging. Ensure all components, including the chair frame and headrest, are present.
2. **Unfold the Chair:** Hold the folded chair and gently pull the two main sections apart. The chair will unfold into its full length.

3. **Lock into Place:** Once fully extended, ensure the frame locks securely into position. The chair should feel stable.
4. **Attach Headrest:** Place the removable padded headrest onto the top section of the chair. It typically slides over the top bar or attaches with straps.

Your browser does not support the video tag.

Video demonstrating the unpacking, unfolding, and initial setup of the Outsunny Folding Chaise Lounge Chair.



The chair folds compactly for easy transport and storage, fitting conveniently into a car trunk.

3. OPERATING INSTRUCTIONS

Adjusting the Backrest

The chair features a 5-position adjustable backrest for optimal comfort.

1. To adjust, lift the backrest slightly to disengage the locking mechanism.
2. Move the backrest to your desired angle.
3. Lower the backrest until it securely locks into one of the five available positions. Ensure it is stable

before use.



The backrest offers five adjustable positions for customized comfort, suitable for reading, listening to music, resting, or napping.

Folding for Storage

To fold the chair for storage or transport:

1. Ensure the backrest is in its lowest, flat position.
2. Gently push the two main sections of the chair together until it folds compactly.
3. The chair will lock into its folded position for easy carrying and storage.

4. MAINTENANCE

To ensure the longevity and appearance of your Outsunny Folding Chaise Lounge Chair, follow these simple maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, especially during inclement weather or off-season, fold the chair and store

it in a dry, protected area to prevent wear and tear.

- **Inspection:** Periodically check all frame connections and fabric for any signs of damage or wear. Tighten any loose bolts if necessary.

5. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent injury and ensure proper use of the chair:

- **Weight Capacity:** Do not exceed the maximum weight capacity of **264 pounds** for safe use.
- **Stable Surface:** Always place the chair on a flat, stable, and level surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the chair during setup and folding to avoid pinching hazards.
- **Proper Use:** Use the chair only for its intended purpose as a lounge chair. Avoid standing on it or using it as a step stool.
- **Adjustments:** Ensure the backrest is securely locked in position before leaning back.

6. SPECIFICATIONS

Detailed specifications for the Outsunny Folding Chaise Lounge Chair:

Feature	Detail
Brand	Outsunny
Model Number	84B-397CW
Color	Cream White
Material	Steel, Mesh Fabric
Product Dimensions (D x W x H)	71.7" x 22" x 11"
Folded Dimensions (L x W x H)	26.4" x 22.4" x 3.1" (approximate, inferred from feature bullets)
Item Weight	8.14 Pounds
Maximum Weight Recommendation	264 Pounds
Reclining Positions	5 Positions
Assembly Required	No
Indoor/Outdoor Usage	Outdoor
Product Care Instructions	Wipe Clean

5-LEVEL ADJUSTABLE BACKREST

Adjust your way to total relaxation

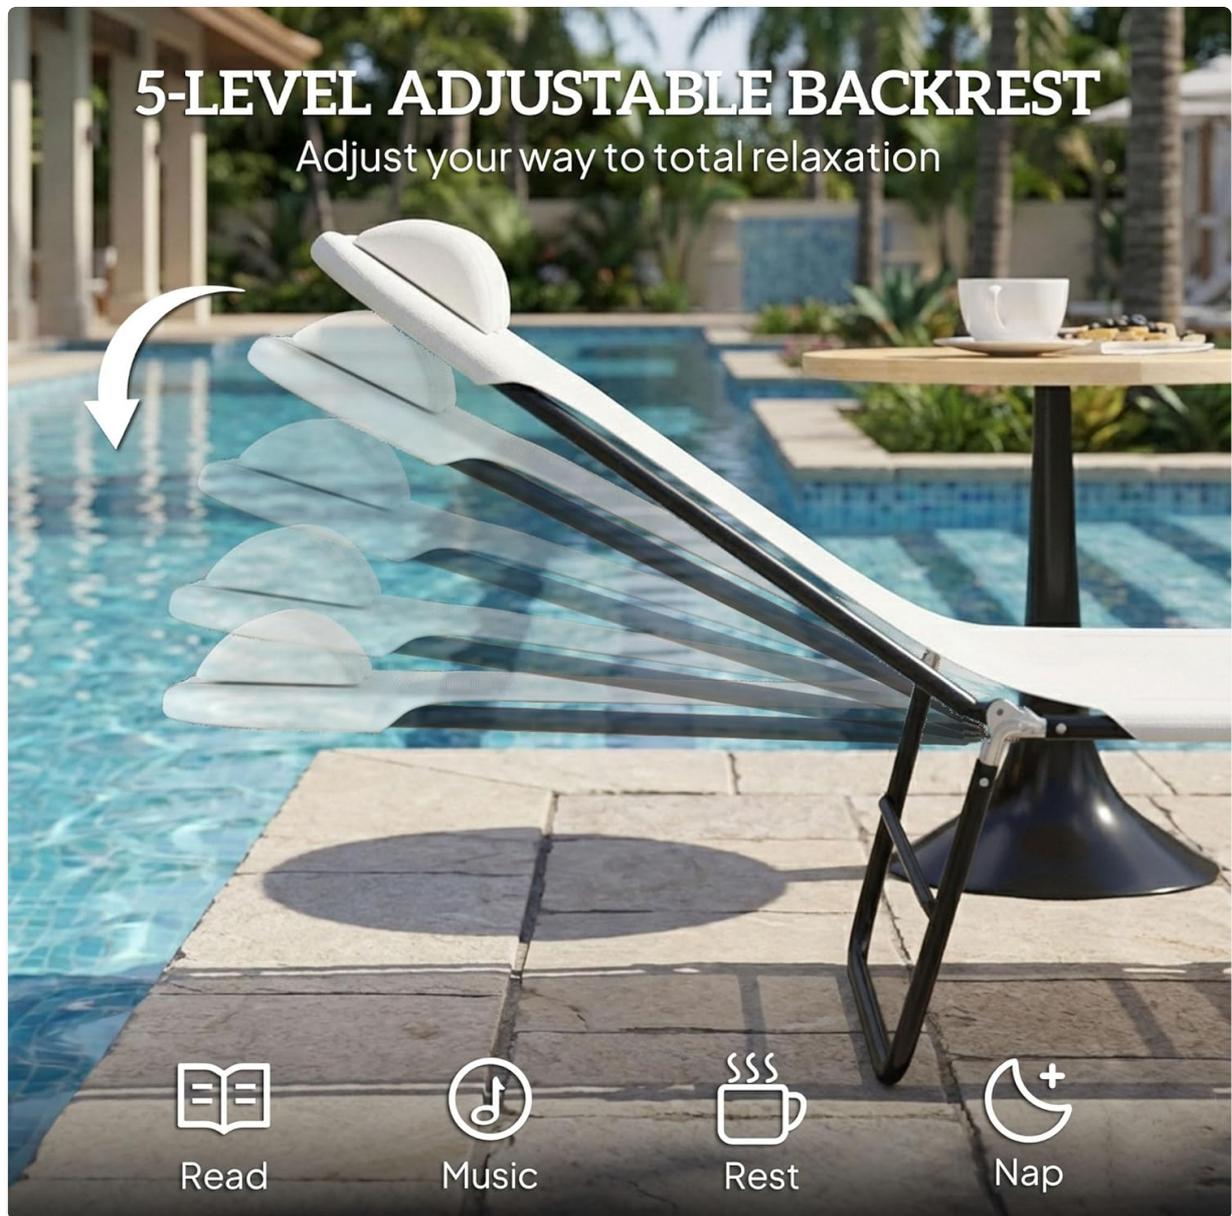


Diagram illustrating the key dimensions of the chaise lounge chair.



REINFORCED STEEL FRAME

Relax safely—reliable support for everyday lounging

The chair features a reinforced steel frame with a powder-coated finish, ensuring stability and durability for outdoor use.

BREATHABLE MESH FABRIC

Ventilated support and sweat-free relaxation on hot days




Keep Cool



Quick-Dry



Easy to Clean

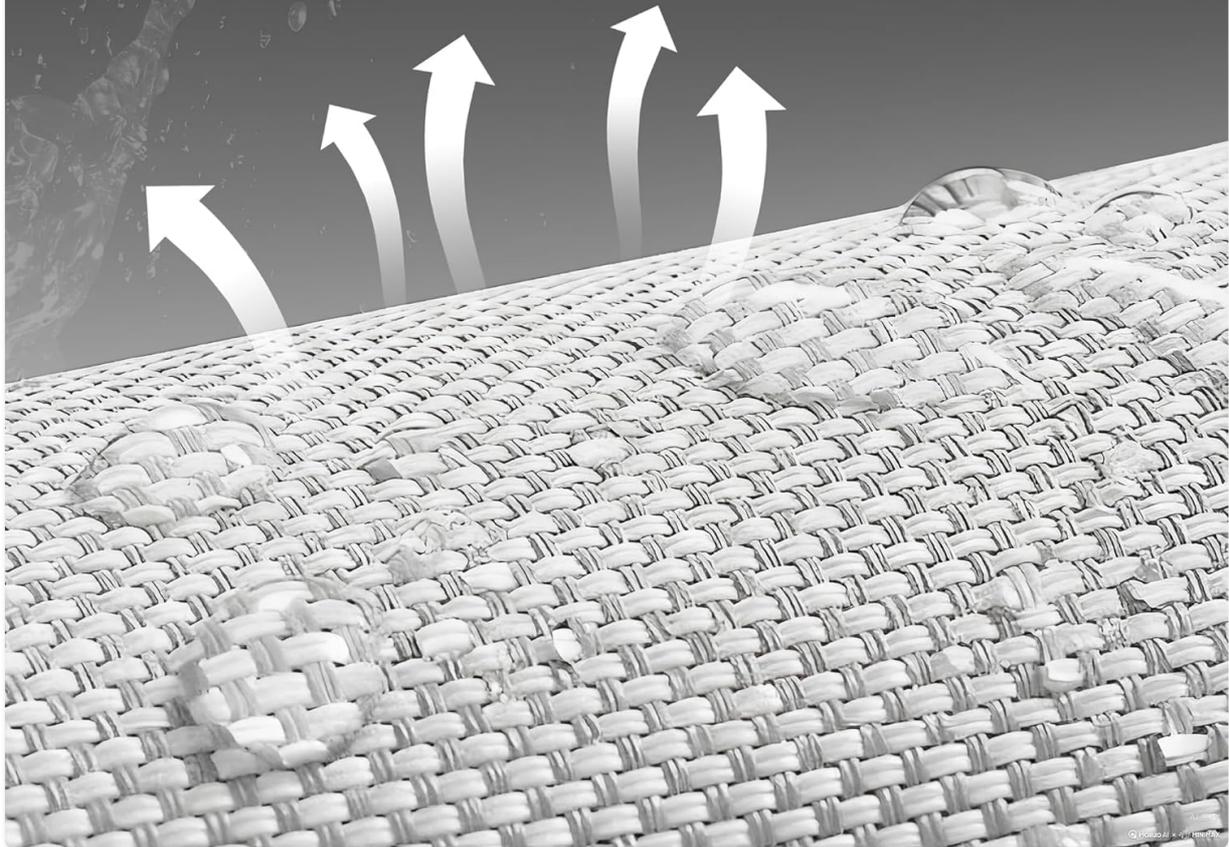

The mesh fabric is designed for ventilation, quick drying, and easy cleaning, making it ideal for outdoor use.

7. TROUBLESHOOTING

If you encounter any issues with your Outsunny Folding Chaise Lounge Chair, consider the following:

- **Chair Not Unfolding/Folding Smoothly:** Check for any obstructions in the folding mechanism. Ensure all joints are clean and free of debris. Apply a silicone-based lubricant if necessary.
- **Backrest Not Locking:** Ensure the backrest is fully engaged in one of the five positions. Lift and re-seat the backrest to confirm it clicks into place.
- **Instability:** Verify that the chair is placed on a flat, even surface. Check all frame connections for tightness.

For persistent issues, please contact customer support.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact Outsunny customer service directly. Contact details can typically be found on the manufacturer's website or your retailer's support page.

You may also visit the [Outsunny Store on Amazon](#) for additional product information and support resources.