

Remax TWS-19

Remax TWS-19 Wireless Bluetooth Earphones User Manual

MODEL: TWS-19

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Remax TWS-19 Wireless Bluetooth Earphones. Please read this manual thoroughly before operating the device and retain it for future reference.

2. PRODUCT OVERVIEW

The Remax TWS-19 are wireless Bluetooth earphones featuring an integrated LED display on the charging case. They offer stereo sound, active noise cancellation, and can function as a standalone digital player with built-in storage. The charging case also includes a Type-C port for charging and data transfer, and the device incorporates a pedometer function.



Remax TWS-19 earphones in their charging case, showcasing the LED display.



Remax TWS-19 earphones and charging case displayed alongside a smartphone, illustrating their compact size.

3. SETUP

3.1 Charging the Earphones and Case

Before first use, fully charge the earphones and the charging case. Connect the provided Type-C cable to the charging port on the case and to a compatible USB power source. The LED display will indicate charging status. A full charge takes approximately 2.5 hours.



Close-up of the Remax TWS-19 charging case, highlighting the Type-C charging port for convenient power input.

3.2 Pairing with a Bluetooth Device

To pair your Remax TWS-19 earphones with a Bluetooth device:

1. Ensure the earphones are charged and placed in the charging case.
2. Open the charging case. The earphones will automatically enter pairing mode.
3. On your device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
4. Select 'Remax TWS-19' from the list of found devices.
5. Once connected, the earphones will indicate successful pairing, and the LED display may show connection status.

The earphones support Bluetooth 5.0 and have a transmission range of up to 10 meters.

4. OPERATING INSTRUCTIONS

4.1 Music Playback

The Remax TWS-19 can play music from a connected Bluetooth device or directly from its internal storage.

- **Play/Pause:** Tap the touch control area on either earbud once.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Volume Control:** Adjust volume via your connected device or through specific gestures if supported (refer to the LED display interface for direct control options).

4.2 Call Management

- **Answer/End Call:** Tap the touch control area on either earbud once during an incoming call.
- **Reject Call:** Press and hold the touch control area on either earbud for approximately 2 seconds during an incoming call.

4.3 Noise Cancellation

The earphones feature Active Noise Cancellation (ANC) to reduce ambient noise. This function can typically be toggled on or off via the touch controls or through the device's menu on the LED display. Refer to the on-screen interface for specific

activation methods.

4.4 LED Display Functions

The integrated LED display on the charging case provides various information and control options:

- **Battery Status:** Shows the remaining battery level of the charging case and individual earbuds.
- **Music Information:** Displays track titles, artist information, and playback progress when using the internal digital player.
- **Mode Selection:** Allows switching between Bluetooth mode, internal player mode, and potentially other functions like the pedometer.
- **Settings:** Access device settings and preferences.

4.5 Digital Player Functionality

The Remax TWS-19 includes built-in storage, allowing it to function as a standalone music player.

- **Transferring Music:** Connect the charging case to a computer using the Type-C cable. The device should appear as a removable storage drive, allowing you to copy audio files directly to its internal memory.
- **Playback:** Use the controls on the charging case's LED display to navigate and play music stored internally.
- **Connection Options:** The host part can listen to local music through wired headphones, Bluetooth audio, or standard headphones. The wireless headset can also be connected to a mobile phone to listen to music and answer calls.



Infographic detailing the features of the Remax TWS-19 as a digital player and wireless headphone, including play time, charging time, battery capacity, and standby time.



Diagram illustrating two modes of operation for the Remax TWS-19: as a standalone host connected to Bluetooth audio, and as a wireless headset connected to a mobile phone.

4.6 Pedometer Function

The device can record real-time steps, distance, speed, duration, and calories burned. Access this feature through the LED display menu to monitor your activity.

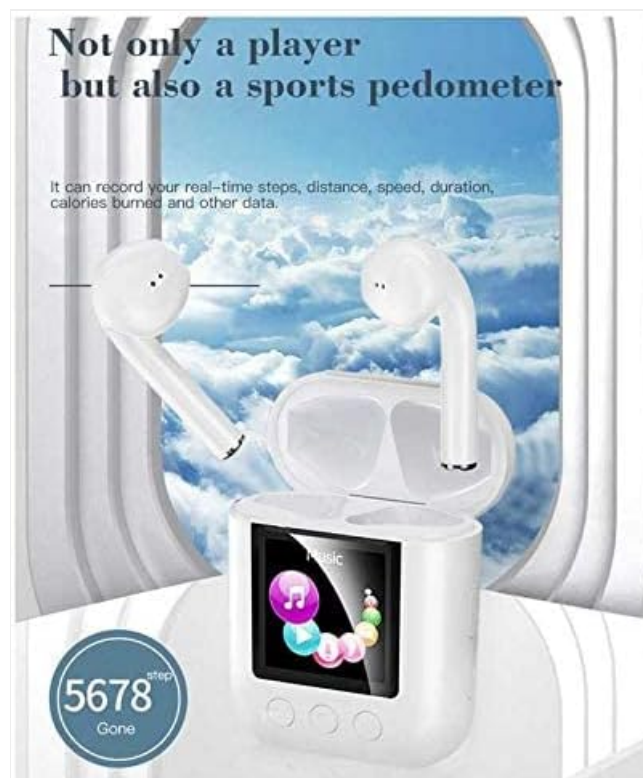


Image showing the Remax TWS-19 displaying a step count, indicating its integrated pedometer function.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Remax TWS-19 earphones:

- **Cleaning:** Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or immerse the device in water.

- **Storage:** Store the earphones in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures and direct sunlight.
- **Charging:** Use only the provided Type-C cable and a compatible power adapter. Do not overcharge the device.

6. TROUBLESHOOTING

If you encounter issues with your Remax TWS-19 earphones, refer to the following common solutions:

- **No Power:** Ensure the earphones and charging case are fully charged.
- **Cannot Pair:**
 - Make sure Bluetooth is enabled on your device.
 - Ensure the earphones are in pairing mode (open the case).
 - Move the earphones closer to your device (within 10 meters).
 - Forget the device from your phone's Bluetooth list and try pairing again.
- **No Sound:**
 - Check the volume level on both the earphones and your connected device.
 - Ensure the earphones are properly paired and connected.
 - Try playing music from a different source or using the internal player.
- **Charging Issues:**
 - Verify the Type-C cable is securely connected to both the case and the power source.
 - Try a different charging cable or power adapter.
 - Clean the charging port for any debris.

7. SPECIFICATIONS

Feature	Specification
Model Number	TWS-19
Brand	Remax
Bluetooth Version	5.0
Transmission Range	10 meters
Standby Time	50 hours
Charging Time	2.5 hours
Playtime	4 hours
Impedance	32 ohm
Noise Control	Active Noise Cancellation (ANC)
Headphones Ear Placement	In Ear
Headphones Form Factor	In Ear
Connectivity Technology	Wireless

Wireless Communication Technology	Bluetooth
Manufacturer	Remax
Package Dimensions	14.3 x 9.3 x 3.8 cm; 140 g

8. WARRANTY AND SUPPORT

The Remax TWS-19 earphones come with a standard manufacturer's warranty. For specific warranty terms, please refer to the documentation included with your purchase or contact Remax customer support. For technical assistance or further inquiries, please visit the official Remax website or contact their support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question