

[Manuals.plus](#) /

› [Prtukyt](#) /

› Prtukyt 6S Wireless Bluetooth Headphones User Manual

Prtukyt lyej17

Prtukyt 6S Wireless Bluetooth Headphones User Manual

Model: lyej17

INTRODUCTION

The Prtukyt 6S Wireless Bluetooth Headphones are designed to deliver superior sound quality with high fidelity deep bass and crystal clear treble. Featuring advanced Bluetooth 5.0 technology, these headphones ensure fast and stable connections for seamless audio and video streaming. Their foldable and adjustable design makes them comfortable for extended wear and convenient for travel. Equipped with a built-in microphone, they support hands-free calling, making them suitable for various uses including travel, sports, and daily activities.

WHAT'S IN THE BOX?

- Prtukyt 6S Wireless Bluetooth Headphones
- USB Charging Cable
- User Manual
- 3.5mm Audio Cable (for wired mode)



Image: Ptukyt 6S Wireless Bluetooth Headphones in Pink, showcasing the main product and included accessories.

PRODUCT FEATURES

- **Hi-Fi Stereo Sound:** Equipped with an advanced Bluetooth 5.0 chip, these headphones deliver superior sound quality with deep bass and crystal clear treble.
- **Bluetooth 5.0 Connectivity:** Ensures fast, stable connections and low latency for audio/video streaming.
- **Built-in Microphone:** High-quality microphone for hands-free calling.
- **Comfortable Design:** Earmuffs imitate human skin texture for lasting comfort. Foldable and stretchable for a perfect fit.
- **Adjustable and Portable:** Ergonomic design with ultra-soft ear cups and foldable structure for easy portability.

- **Long Battery Life & Dual Mode:** 500mAh battery provides up to 20 hours of music time (30 hours playtime). Supports 2.5 hours fast charging. Can be used in wired mode when battery is low.
- **FM Radio & TF Card Support:** Integrated FM radio and TF card slot for MP3 playback (TF card not included).

SHOCKING STRONG BASS

Hear every word, note,
and tune with incredible clarity.



Image: A woman wearing the headphones, highlighting the "Shocking Strong Bass" feature.

40-HOUR PLAYTIME

600 Songs | 40 Meetings

40

HOURS OF
LISTENING TIME

The **5-Minutes** charge for
3 Hours of playtime



Image: The headphones with a graphic indicating "40-Hour Playtime" and "5-Minutes charge for 3 Hours of playtime".

NEVER POWER OFF

Note: the microphone only works in wireless (Bluetooth) mode.



Image: The headphones demonstrating both wireless (Bluetooth) and wired connection capabilities. Note: Microphone only works in wireless mode.

OUR HEADPHONES MEET YOUR DAILY NEEDS

Sport



Home



Outdoor



Image: Various usage scenarios for the headphones, including sport, home, and outdoor activities.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the supplied USB charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge takes approximately 2.5 hours and provides up to 20 hours of music playback or 30 hours of general playtime.

2. Powering On/Off

To power on, press and hold the Power button until the LED indicator lights up. To power off, press and hold the Power button again until the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure the headphones are powered off.

2. Press and hold the Power button for approximately 3-5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "6S" from the list of found devices.
5. Once connected, the LED indicator will turn solid blue or flash blue slowly.

4. Wired Connection (Dual Mode)

When the battery is low or if you prefer a wired connection, you can use the included 3.5mm audio cable. Plug one end into the audio cable link hole on the headphones and the other end into your audio device's 3.5mm jack. The microphone function is only available in wireless (Bluetooth) mode.

OPERATING INSTRUCTIONS

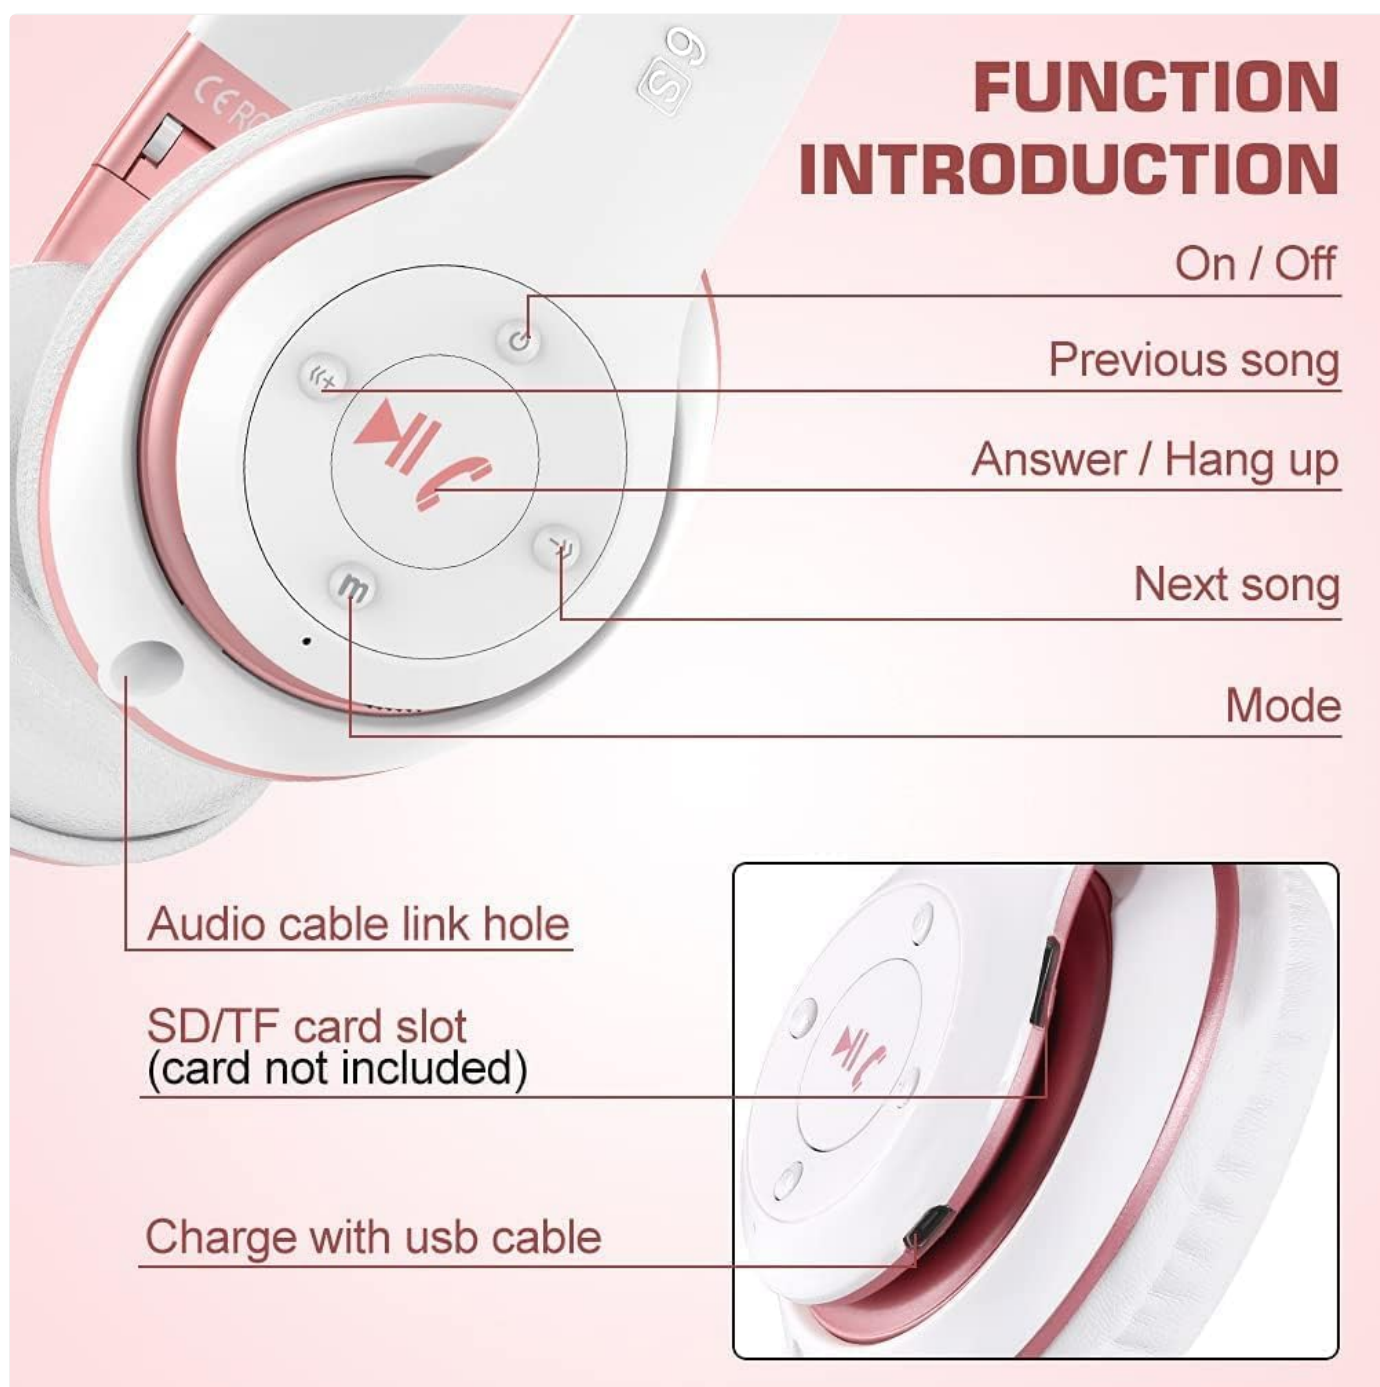


Image: Detailed diagram showing the function of each button on the headphone earcup.

Button/Port	Function
Power Button	Press and hold to Power On/Off. Short press to Play/Pause music or Answer/End calls.
"+" Button	Short press for Next Song. Press and hold to Increase Volume.
"-" Button	Short press for Previous Song. Press and hold to Decrease Volume.
"M" Button (Mode)	Short press to switch between Bluetooth, FM Radio, and TF Card modes.
Audio Cable Link Hole	Connect 3.5mm audio cable for wired listening.
SD/TF Card Slot	Insert a TF card (not included) for MP3 playback.
USB Charge Port	Connect USB cable for charging.

MAINTENANCE

- Clean the headphones regularly with a soft, dry cloth.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Do not use abrasive cleaners or solvents.
- Store the headphones in a cool, dry place when not in use. The foldable design allows for compact storage.
- Avoid dropping or subjecting the headphones to strong impacts.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are charged. Connect to a power source using the USB cable.
Cannot pair with Bluetooth device.	◦ Ensure headphones are in pairing mode (LED flashing blue/red). ◦ Make sure Bluetooth is enabled on your device. ◦ Move headphones closer to your device (within 10 meters). ◦ Forget "6S" from your device's Bluetooth list and try pairing again.
No sound or low volume.	◦ Adjust volume on both headphones and your connected device. ◦ Ensure headphones are properly connected via Bluetooth or 3.5mm cable. ◦ If using wired mode, ensure the cable is fully inserted.
Microphone not working.	The microphone only functions in wireless (Bluetooth) mode. Ensure you are not using the 3.5mm wired connection.

SPECIFICATIONS

Feature	Detail
Model Name	6S
Connectivity Technology	Wireless

Feature	Detail
Wireless Communication Technology	Bluetooth 5.0
Included Components	Headphones, USB Charging Cable, 3.5mm Audio Cable, User Manual
Material	Faux Leather
Charging Time	2.5 Hours
Compatible Devices	Laptops, Desktops, Tablets, Telephones, Smart Speakers, Televisions, Car Audio Systems, Cellphones
Control Type	Volume Control
Frequency Range	20 Hz - 20,000 Hz
Control Method	Remote, Touch
Battery Life	30 Hours (Playtime)
Audio Driver Type	Dynamic Driver
Bluetooth Range	10 Meters
Earpiece Shape	Rounded
UPC	790184240193
Manufacturer	PRTUKYT
Product Dimensions	3.94 x 6.3 x 3.15 inches
Item Weight	10.8 ounces
Item Model Number	lyej17
Batteries	1 Lithium Polymer battery (included)
Color	Pink
Ear Placement	Over Ear
Form Factor	Over Ear
Headphones Jack	3.5 mm Jack

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Prtukyt website. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question