

[manuals.plus](#) /

› [Instant](#) /

› [Instant Pot Duo Crisp 11-in-1 Electric Pressure Cooker & Air Fryer User Manual](#)

**Instant 140-0043-01-UK**

# Instant Pot Duo Crisp 11-in-1 Electric Pressure Cooker & Air Fryer User Manual

Model: 140-0043-01-UK

## 1. INTRODUCTION

The Instant Pot Duo Crisp is a versatile kitchen appliance that combines the functions of a pressure cooker and an air fryer, along with 9 other cooking programs. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before first use.



Figure 1: Instant Pot Duo Crisp 11-in-1 Multi-Cooker with Air Fryer Lid.

## 2. KEY FEATURES AND FUNCTIONS

Your Instant Pot Duo Crisp offers 11 smart programs to simplify your cooking:

- **Pressure Cook:** For fast, healthy meals.
- **Sauté:** For browning and simmering.
- **Steam:** For delicate cooking of vegetables and fish.
- **Slow Cook:** For tender, flavorful dishes.
- **Sous Vide:** For precision cooking.
- **Warm:** To keep food at serving temperature.

- **Air Fry:** For crispy results with little to no oil.
- **Roast:** For tender meats and vegetables.
- **Bake:** For cakes, breads, and more.
- **Grill:** For a perfect finish.
- **Dehydrate:** For making dried fruits and jerky.

# 9 WAYS TO COOK

## Air Fryer and Instant Pot in one

+ Dehydrate  
&  
Keep Warm



PRESSURE COOK



AIR FRY



SLOW COOK



STEAM



SAUTE



GRILL



ROAST



SOUS VIDE



BAKE

Figure 2: Overview of the 9 primary cooking methods, including dehydrate and keep warm.



Figure 3: The air fryer lid allows for crispy meals with up to 95% less oil compared to deep frying.



Figure 4: Prepare speedy weekday dinners using the pressure cooking lid, cooking up to 70% faster than traditional methods.

### 3. SETUP AND FIRST USE

#### 3.1 Unpacking

Carefully remove all components from the packaging. Retain packaging materials for future storage or transport. Verify all parts are present according to the packing list.

## 3.2 Initial Cleaning

Before first use, wash the inner pot, sealing ring, and accessories (steam rack, air fryer basket, dehydrator rack) with warm, soapy water. Wipe the exterior of the cooker base and lids with a damp cloth. Ensure all parts are completely dry before assembly.

## 3.3 Component Identification

The Instant Pot Duo Crisp includes:

- Cooker Base
- Pressure Cooking Lid
- Air Fryer Lid
- Inner Pot (Stainless Steel)
- Steam Rack with Handles
- Air Fryer Basket
- Dehydrator Rack
- Protective Pad for Lids
- Power Cord



**SAVE UP TO 80% ENERGY\***  
**Spacious 5.7L capacity**  
**to cook up to 6 portions**



\*Study conducted to assess energy usage in a 2400W electric oven and Pro Crisp 8L Multi Pressure Cooker and Air Fryer when cooking the same Roast Chicken recipe. View the full report.

Figure 5: Product dimensions for the Instant Pot Duo Crisp, showing height with both lids.

## 4. OPERATING INSTRUCTIONS

### 4.1 Pressure Cooking

1. Place the inner pot into the cooker base.
2. Add ingredients and liquid according to your recipe. Do not exceed the PC MAX line.
3. Place the pressure cooking lid on the cooker base, aligning the triangle on the lid with the triangle on the base. Rotate clockwise until locked.
4. Ensure the steam release handle is in the Sealing position.
5. Select a Smart Program (e.g., Pressure Cook, Rice, Soup) or manually set time and pressure level.
6. Press 'Start'. The display will show 'On' as it preheats.
7. Once cooking is complete, allow for natural release or perform quick release as per recipe instructions.

## 4.2 Air Frying

1. Place the inner pot into the cooker base.
2. Place the air fryer basket with food inside the inner pot.
3. Place the air fryer lid on the cooker base. The appliance will beep when the lid is correctly placed.
4. Select an Air Fryer Smart Program (e.g., Air Fry, Roast, Bake, Grill, Dehydrate) or manually set time and temperature.
5. Press 'Start'.
6. Some programs may prompt you to 'Turn Food' halfway through cooking.

## 4.3 Other Functions

For Sauté, Slow Cook, Steam, Sous Vide, and Keep Warm functions, follow the specific instructions in your recipe or the Instant Pot app. Always ensure the correct lid (pressure cooking or air fryer) is used for the selected function.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Instant Pot Duo Crisp.

- **Inner Pot:** The stainless steel inner pot is dishwasher safe. For stubborn food residue, soak with warm soapy water before cleaning.
- **Lids:** Both the pressure cooking lid and air fryer lid should be hand-washed with warm, soapy water. Ensure the sealing ring on the pressure lid is removed and cleaned separately. Do not immerse the air fryer lid in water.
- **Cooker Base:** Wipe the exterior of the cooker base with a damp cloth. Never immerse the cooker base in water or other liquids.
- **Accessories:** All accessories (steam rack, air fryer basket, dehydrator rack) are dishwasher safe.
- **Sealing Ring:** Inspect the sealing ring regularly for cracks or damage. Replace if necessary.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Unit not powering on	Power cord not properly connected; outlet issue.	Ensure power cord is fully inserted into the appliance and a working outlet.
Pressure not building	Steam release handle in Venting position; sealing ring not properly installed or damaged; insufficient liquid.	Turn steam release handle to Sealing; check and adjust sealing ring; add more liquid.

Problem	Possible Cause	Solution
Food not crispy (Air Fry)	Overcrowding the basket; incorrect temperature/time; not preheated.	Cook in smaller batches; adjust temperature/time; allow preheating.
Error codes on display	Specific internal issue.	Refer to the Instant Pot website or contact customer support for specific error code meanings and solutions.

## 7. SPECIFICATIONS

Specification	Value
Brand	Instant
Model Number	140-0043-01-UK
Color	Stainless Steel/Black
Product Dimensions (L x W x H)	34.5 x 34.5 x 35.5 cm
Capacity	5.7 Liters
Power	1500 Watts
Voltage	240 Volts
Material	Stainless Steel
Item Weight	10.06 Kilograms
Special Feature	Combination of pressure cooker and air fryer, EvenCrisp Technology

## 8. WARRANTY AND SUPPORT

Your Instant Pot Duo Crisp comes with a limited warranty. Please refer to the warranty card included in your product packaging for details on coverage and terms. For technical support, recipe inspiration, or to register your product, please visit the official Instant Pot website or contact their customer service department.

For further assistance, you may also refer to the Instant Brands Connect app, which offers over 1200 recipes and additional support resources.

© 2024 Instant Brands. All rights reserved.