

Severin PG 8123

SEVERIN Style Evo PG 8123 Electric Barbecue

Instruction Manual

1. INTRODUCTION

Thank you for choosing the SEVERIN Style Evo PG 8123 Electric Barbecue. This appliance is designed for both indoor and outdoor grilling, offering fast heating and optimal heat distribution for excellent cooking results. Please read this instruction manual carefully before using the appliance for the first time to ensure safe operation and to achieve the best performance.



Image 1.1: The SEVERIN Style Evo PG 8123 Electric Barbecue, showcasing its compact design suitable for various settings.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety instructions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the voltage indicated on the rating label matches your mains voltage. Do not immerse the appliance, cord, or plug in water or other liquids. Always unplug the appliance when not in use, before cleaning, or if a fault occurs.

- **Heat Safety:** The grill reaches high temperatures (up to 350°C). Despite the SafeTouch housing, exercise caution. Do not touch hot surfaces directly. Keep children and pets away from the hot appliance.
- **Placement:** Use the barbecue on a stable, heat-resistant surface. Ensure adequate ventilation, especially when used indoors. Do not place near flammable materials.
- **SafeTouch Housing:** The appliance features a SafeTouch housing, which ensures that touchable surfaces do not become excessively hot during operation, allowing for easier handling and transport.

Keine Verbrennungsgefahr dank SafeTouch-Gehäuse

Innovative Reflektorschale für optimale Wärmeverteilung



Image 2.1: Illustration highlighting the SafeTouch housing for reduced burn risk and the innovative reflector tray for optimal heat distribution.

3. PRODUCT OVERVIEW AND FEATURES

The SEVERIN Style Evo PG 8123 is designed for efficient and safe grilling. Key features include:

- **Fast Start-up:** Heats from 0 to 350°C in approximately 10 minutes.
- **Optimal Heat Distribution:** Achieved through a specially designed reflector tray.
- **SafeTouch Housing:** Ensures external surfaces remain cool enough to touch during operation.
- **Versatile Use:** Suitable for both indoor and outdoor environments.

- **Easy Cleaning:** Removable parts facilitate quick and thorough cleaning.
- **Safety Micro-switch:** Enhances operational safety.
- **Extra Long Cable:** Provides flexibility in placement.

SEVERIN

Friends for Life

Leichte Reinigung



Drinnen & Draußen

XXL Kabel

Sicherheits-Mikroschalter

Image 3.1: Diagram illustrating key features such as easy cleaning, indoor/outdoor suitability, safety micro-switch, and extra-long cable.

4. SETUP AND INITIAL USE

Before first use, ensure all packaging materials are removed and the appliance is assembled correctly.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble:** Place the heating element and grill grate into the main unit. Ensure the reflector tray is correctly positioned.
3. **Add Water:** Pour water into the reflector tray up to the indicated MAX level. This prevents fat from burning and reduces smoke.

4. **First Use Preparation:** Before grilling food, operate the barbecue empty for approximately 10 minutes at maximum temperature to burn off any manufacturing residues. Ensure good ventilation during this process.



Image 4.1: View of the grill's components, including the main body, grill grate, heating element, reflector tray, and wind deflector, ready for assembly.



Image 4.2: Demonstrating the process of pouring water into the reflector tray to prevent fat burning and minimize smoke during grilling.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal grilling performance:

1. **Connect Power:** Plug the power cord into a suitable electrical outlet.
2. **Set Temperature:** Use the rotary control knob to select the desired grilling temperature. The appliance can reach up to 350°C.
3. **Preheat:** Allow the grill to preheat for approximately 10 minutes to reach the optimal grilling temperature.
4. **Grill Food:** Place food directly onto the grill grate. Monitor cooking progress and adjust temperature as needed.
5. **After Use:** Turn the temperature control to the 'OFF' position and unplug the appliance from the mains. Allow it to cool down completely before cleaning.



SEVERIN

Friends for Life

**Heißer Grillgenuss:
von 0 auf 350 °C in 10 Minuten**

Image 5.1: The SEVERIN Style Evo barbecue in use, demonstrating its rapid heating capability to 350°C for quick grilling.



Image 5.2: A close-up view of food grilling on the hot surface of the SEVERIN Style Evo barbecue, showing the even heat distribution.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your barbecue.

1. **Cool Down:** Always allow the appliance to cool down completely before cleaning.
2. **Disassemble:** Remove the grill grate, heating element, and reflector tray.
3. **Clean Components:** The grill grate and reflector tray can be cleaned with warm soapy water or in a dishwasher. The heating element should only be wiped with a damp cloth; do not immerse in water.
4. **Clean Housing:** Wipe the main housing with a damp cloth. Do not use abrasive cleaners or scourers.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.



Image 6.1: The grill disassembled into its main components, illustrating how easily it can be taken apart for thorough cleaning.

7. TROUBLESHOOTING

If you encounter issues with your SEVERIN Style Evo PG 8123, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outage; safety micro-switch not engaged.	Check power connection; verify power supply; ensure heating element is correctly seated and micro-switch is activated.
Excessive smoke during grilling.	No water in reflector tray; fat dripping onto heating element.	Ensure water is added to the reflector tray before use; clean the tray regularly.
Food not cooking evenly.	Insufficient preheating time; uneven food placement.	Allow full preheating; distribute food evenly on the grill grate.

8. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	PG 8123 (Reference: 812300)
Power	2500 Watts
Voltage	230V
Dimensions (L x W x H)	62 x 41 x 16.5 cm
Weight	4.25 kg
Cable Length	2 meters
Max. Grilling Temperature	Up to 350°C
Special Features	SafeTouch housing, Fat management system, Cool-touch
Material	Stainless Steel (handle/lever), No burn risk on touchable parts

9. WARRANTY AND SUPPORT

SEVERIN products are manufactured to high-quality standards and undergo strict quality control. In the unlikely event of a defect, please contact your retailer or the official SEVERIN customer service. Keep your proof of purchase for warranty claims.

For further assistance or to find authorized service centers, please visit the official SEVERIN website or contact their customer support directly. Contact information can typically be found on the product packaging or the brand's official website.

© 2024 Severin. All rights reserved. Model PG 8123.

Related Documents - PG 8123

 Barbecue-Grill Barbecue grill PG 8107	<p>Severin PG 8107 Barbecue Grill Parts Diagram and Overview</p> <p>An exploded view and parts list for the Severin PG 8107 Barbecue Grill, detailing all components for assembly and maintenance.</p>
--	--

