

Patria Illumination 1624

Patria Illumination 11 Inch LED Taper Set (Model 1624) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Patria Illumination 11 Inch LED Taper Set. This product provides the aesthetic appeal of traditional taper candles with the safety and convenience of LED technology. Featuring a realistic flicker and remote control functionality, these battery-operated candles are designed for indoor decorative use.

Please read this manual thoroughly before using the product to ensure proper setup and operation.

2. SAFETY INFORMATION

- **Indoor Use Only:** This product is designed for indoor decorative purposes. Do not use outdoors or in wet conditions.
- **Not Water Resistant:** Avoid exposure to water or high humidity.
- **Battery Safety:**
 - Use only the specified battery type (AAA).
 - Do not mix old and new batteries, or different types of batteries.
 - Insert batteries with correct polarity (+/-).
 - Remove depleted batteries promptly to prevent leakage.
 - Dispose of batteries according to local regulations.
 - Keep batteries out of reach of children.
- **Heat:** Do not place near open flames or heat sources.
- **Cleaning:** Clean only with a soft, dry cloth.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x Patria Illumination 11 Inch LED Taper Candles (Ivory)
- 1 x Remote Control

Note: AAA batteries for the taper candles are not included and must be purchased separately.



Image 1: The Patria Illumination 11 Inch LED Taper Set, showing two ivory taper candles packaged in a black box.

4. SETUP

4.1 Battery Installation (LED Taper Candles)

1. Gently twist the bottom cap of each LED taper candle counter-clockwise to open the battery compartment.
2. Insert two (2) AAA batteries into each candle, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Replace the bottom cap by twisting it clockwise until securely closed.



Image 2: Two Patria Illumination 11 Inch LED Taper Candles, showing their ivory color and realistic LED flames.

4.2 Battery Installation (Remote Control)

The remote control typically comes with a pre-installed button cell battery (e.g., CR2025 or CR2032) with a plastic tab to prevent discharge. If the remote does not function, or if you need to replace the battery:

1. Locate the battery compartment on the back or side of the remote control.
2. If a plastic tab is present, pull it out to activate the battery.
3. If replacing, open the compartment (you may need a small screwdriver or to press a latch) and insert a new button cell battery with the positive (+) side facing up.
4. Close the battery compartment securely.

4.3 Placement

Place the LED taper candles in appropriate candle holders on a stable, flat surface. Ensure they are positioned away from direct sunlight or extreme temperatures, which can affect battery life.

5. OPERATING INSTRUCTIONS

The Patria Illumination LED Taper Set is operated using the included remote control.

- **Power On/Off:** Press the "ON" button to turn the candles on, and the "OFF" button to turn them off.
- **Flicker Mode:** The candles feature a realistic flickering effect. Some remotes may offer options to adjust the flicker speed or switch to a steady light mode. Refer to your remote's specific buttons for these functions.
- **Brightness Adjustment:** Use the brightness buttons (often marked with "+" and "-") to increase or decrease the light intensity of the candles.
- **Timer Function:** The remote control may include a timer function (e.g., 2H, 4H, 6H, 8H). Pressing a timer button will keep the candles lit for the specified duration, after which they will automatically turn off and cycle on again at the same time the next day. To cancel the timer, press the "OFF" button.

Note: The remote control operates on an infrared signal. Ensure there is a clear line of sight between the remote and the candles for optimal performance.

6. MAINTENANCE

- **Cleaning:** Wipe the candles and remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** Replace batteries in both the candles and the remote control when their performance diminishes. Always replace all batteries in a device at the same time.
- **Storage:** If storing the candles for an extended period, remove all batteries to prevent leakage and store in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Candles do not turn on.	Batteries are depleted or incorrectly inserted. Remote control battery is depleted. No line of sight for remote.	Check and replace AAA batteries in candles, ensuring correct polarity. Check and replace the remote control battery. Ensure remote is pointed directly at the candles without obstruction.
Candles flicker erratically or dim.	Low battery power.	Replace AAA batteries in the affected candles.
Remote control is unresponsive.	Remote battery is depleted. Obstruction between remote and candles. Remote is too far from candles.	Replace the remote control battery. Ensure clear line of sight. Move closer to the candles.

8. SPECIFICATIONS

Feature	Detail
Brand	Patria Illumination
Model Number	1624
Product Dimensions (each)	1"D x 1"W x 11"H (2.54 cm D x 2.54 cm W x 27.94 cm H)
Item Weight (set)	5.28 ounces (149.69 grams)
Color	Ivory
Material	Plastic
Light Source Type	LED
Power Source	Battery Powered (2 x AAA batteries per candle, not included)

Feature	Detail
Control Method	Remote Control
Special Feature	Cordless, Flickering Flame Effect
Indoor/Outdoor Usage	Indoor Only
Water Resistance Level	Not Water Resistant
Included Components	2 LED Taper Candles, 1 Remote Control

9. WARRANTY AND SUPPORT

Patria Illumination is committed to providing quality products. For any questions, concerns, or support regarding your LED Taper Set, please refer to the retailer's return policy or contact Patria Illumination customer service through their official channels. Please retain your proof of purchase for any warranty claims.