

[Manuals.plus](#) /

› [Radio Flyer](#) /

› Radio Flyer DJ Dance & Spin Electric Ride-On User Manual

Radio Flyer 998Z

Radio Flyer DJ Dance & Spin Electric Ride-On

Model: 998Z

User Instruction Manual

INTRODUCTION

Welcome to the exciting world of the Radio Flyer DJ Dance & Spin Electric Ride-On! This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new ride-on toy. Please read it thoroughly before first use and keep it for future reference.

Important Safety Warning:

This product is designed for children aged 1.5 to 4 years, with a maximum weight capacity of 43 lbs. Adult supervision is required at all times. Ensure children are strong enough to hold onto the steering wheel, especially during dance and spin modes, to prevent falling. Always operate on flat, clear surfaces away from traffic, pools, or steps.

SAFETY INFORMATION

As stated in the product's important information, please read all safety instructions provided inside the packaging before operating this product.

- Always ensure the child is wearing appropriate safety gear, such as a helmet, if riding outdoors.
- Do not operate near streets, motor vehicles, steep inclines, steps, or swimming pools.
- Only one rider at a time.
- Ensure the battery is properly charged and connected before each use.
- Adult assembly and supervision are required.

Refer to the physical manual included with your product for a complete list of safety warnings and guidelines.

SETUP AND ASSEMBLY

Assembly is required for the DJ Dance & Spin ride-on. Please follow the instructions carefully.

1. Unboxing and Component Check

Carefully remove all components from the packaging. Verify that all parts are present according to the packing list provided in your product box.

2. Initial Battery Charge

The 6-volt battery included with your ride-on must be fully charged before first use. This typically takes 8-12 hours. Do not overcharge for more than 18 hours.

**EZ charge
battery**



Image: Charging port located at the rear of the vehicle for easy battery charging.

3. Assembly Steps

Refer to the detailed assembly instructions and diagrams in the physical manual. Key steps typically include:

1. Attaching the steering wheel.
2. Connecting the battery.
3. Securing any loose components.

Ensure all connections are secure and all screws are tightened before allowing a child to use the product.

OPERATING INSTRUCTIONS

The DJ Dance & Spin offers two primary modes of operation: free driving and programmed dance moves.

1. Powering On

Locate the power switch (if present, typically near the battery compartment or under the seat) and turn the unit ON.

2. Free Driving

To drive the car, press and hold the large red button on the steering wheel. The car will move forward at a speed of up to 2 MPH. Steer using the steering wheel.

**5 original
songs**



Image: Easy-to-use steering wheel with a large red button for driving.

3. Activating Dance & Spin Modes

The DJ Dance & Spin features 5 programmed dance moves synchronized with 5 original songs. To activate a dance mode, press one of the colored buttons on the steering wheel (orange, blue, purple, yellow). The car will twist, wiggle, and spin 360 degrees according to the selected dance routine.

Car twists, wiggles and dances!



Image: The car performs twisting, wiggling, and spinning motions during dance modes.

**Select dance moves
on steering wheel**



Image: Steering wheel buttons activate different dance moves and songs.

4. Lights and Sounds

The ride-on is equipped with LED lights that illuminate during operation and dance modes, enhancing the experience. The 5 original tunes play automatically when dance modes are selected.



LED lights

Image: LED lights add to the fun, especially during dance sequences.

5. Automatic Shut-off

The unit may feature an automatic shut-off after a period of inactivity to conserve battery life.

MAINTENANCE

1. Battery Care

- Always recharge the battery after each use, even if only for a short period.
- Charge the battery for 8-12 hours. Do not charge for more than 18 hours.
- If storing the product for an extended period, charge the battery once a month to prolong its lifespan.

- Use only the charger provided by Radio Flyer.

2. Cleaning

Wipe the ride-on with a damp cloth and mild soap. Do not use abrasive cleaners or solvents. Avoid spraying water directly onto electrical components.

3. Storage

Store the product in a dry, cool place away from direct sunlight and moisture. Protect it from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not move or has low power.	Battery is low or not charged. Battery connection is loose. Thermal fuse has tripped.	Charge the battery for 8-12 hours. Check all battery connections are secure. Allow the vehicle to cool down for 20 minutes. Avoid overloading or continuous operation on rough surfaces.
Vehicle makes unusual noises.	Gears may be worn or damaged. Loose parts.	Contact customer service for assistance. Check for any loose screws or components and tighten them.
Dance/Spin feature not working.	Button not pressed correctly. Electrical connection issue.	Ensure the dance mode button is fully pressed. If issue persists, contact customer service.

If you encounter problems not listed here, or if the suggested solutions do not resolve the issue, please contact Radio Flyer Customer Service.

SPECIFICATIONS

- Model Number:** 998Z
- Recommended Age:** 1.5 - 4 years
- Maximum Weight Capacity:** 43 lbs
- Battery:** 6-volt (charger included)
- Speed:** Up to 2 MPH
- Product Dimensions (L x W x H):**69.1 cm x 42.4 cm x 42.7 cm (27.2" L x 16.7" W x 16.8" H)
- Material:** Plastic
- Color:** Red, Black

Assembly: Required



Image: Product dimensions for the DJ Dance & Spin ride-on.

WARRANTY AND SUPPORT

Radio Flyer is committed to providing high-quality products and excellent customer service. For information regarding product warranty, parts replacement, or any other support needs, please visit the official Radio Flyer website or contact their customer service team directly.

You can typically find contact information on the Radio Flyer website or in the original product packaging.

"Time Flies. Enjoy the Ride." - Radio Flyer

© 2024 Radio Flyer. All rights reserved.

For more information, visit www.radioflyer.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question