

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AEEZO](#) /

› [AEEZO Kids Tablet TK701 7-inch WiFi Android 10 User Manual](#)

AEEZO TK701

AEEZO Kids Tablet TK701 7-inch WiFi Android 10 User Manual

Model: TK701

INTRODUCTION

Welcome to the AEEZO Kids Tablet TK701 user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new tablet. Designed for children, this 7-inch tablet features a Full HD IPS touch screen, Android 10 operating system, and pre-installed Kidoz for a safe and engaging experience.

PRODUCT OVERVIEW

Tablet Components



Image Description: A detailed diagram of the AEEZO Kids Tablet TK701, highlighting its various ports and buttons. The tablet is shown from the front, side, and top views, with numbers indicating specific components.

1. **Reset:** Small pinhole for device reset.
2. **Power on/off:** Button to turn the tablet on or off.
3. **Volume+:** Button to increase volume.
4. **Volume-:** Button to decrease volume.
5. **Front-facing Camera:** Camera located on the front of the tablet.
6. **Headphone Jack:** 3.5mm port for headphones.
7. **SD Card Slot:** Slot for inserting a microSD card for expanded storage.
8. **Type C Port:** USB Type-C port for charging and data transfer.
9. **Rear Camera:** Camera located on the back of the tablet.
10. **Speaker:** Audio output speaker.

11. **Microphone:** Built-in microphone.

Key Features

1080P FHD image quality

1080P

HD Image Quality

IPS

FHD Touch Screen

178°

Wide Viewing Angle



Image Description: An image comparing 1080p FHD image quality (right, showing Red from Angry Birds clearly) with a lower resolution (left, showing a blurry green pig), illustrating the superior display of the AEEZO tablet.

- **Display:** 7-inch FHD IPS Touch Screen with 1920x1200 resolution, 323 PPI, offering a 178° wide viewing angle.
- **Operating System:** GMS-certified Android 10.0.
- **Processor:** 1.6 GHz Quad-Core processor.
- **Memory & Storage:** 2GB RAM, 32GB ROM (expandable up to 128GB via microSD card, not included).
- **Cameras:** Dual cameras (2MP front, 5MP rear).
- **Battery:** 2,600mAh battery, providing approximately 4 hours of average use.
- **Connectivity:** WiFi.

CHOOSE A TABLET WITH GOOD EYE PROTECTION

AEEZO tablets



Blocks blue light, really protecting your eyes

Other tablets



Can't filter out blue light -- harsh glare



No yellowing or discoloration -clear, natural



Yellowing and discoloration increases visual fatigue

Image Description: A four-panel image demonstrating the AEEZO tablet's eye protection features. Two top panels show a child comfortably using an AEEZO tablet (blocking blue light) versus a child squinting at another tablet (harsh glare). Two bottom panels show the AEEZO tablet's clear display versus another tablet's yellowed display, highlighting the absence of discoloration.

- **Protective Features:** Food-grade silicone cover designed to prevent damage from falls and collisions, and a pre-applied screen protection film that blocks harmful blue light for eye protection. The cover includes a 360-degree adjustable ring stand.
- **Child-Friendly Software:** Pre-installed Kidoz app, a COPPA-certified platform for kids, with parental controls.

SETUP

1. Initial Charging

Before first use, fully charge the tablet. Connect the provided USB Type-C cable to the tablet's Type C Port (8) and to a compatible 5V 2A charger (not included). The charging indicator will show the charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power on/off button (2) until the screen lights up.
- **To Power Off:** Press and hold the Power on/off button (2) until a power-off menu appears. Select "Power off" to shut down the device.

3. Initial Setup Wizard

Upon first power-on, follow the on-screen instructions to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, and setting up your Google account.

4. Inserting a microSD Card (Optional)

To expand storage, insert a microSD card (up to 128GB, not included) into the SD Card Slot (7). Ensure the tablet is powered off before inserting or removing the card.

OPERATING INSTRUCTIONS

Basic Navigation

- **Touch Screen:** Navigate the tablet by tapping, swiping, and pinching on the screen.
- **Home Screen:** Access apps and widgets from the main home screen.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.

Using Google Play



Image Description: A young child smiling next to the AEEZO tablet, surrounded by icons for Google Play, Kidz, Family Link, and FamilyGroup, indicating the tablet's software capabilities.

The tablet provides full access to Google services, including the Google Play Store. Parents can download a wide range of educational apps, games, and other content suitable for children. Ensure your Google account is set up and parental controls are configured within Google Play for content filtering.

Kidz App

Kid-friendly Content In Pre-installed Kidoz APP



Image Description: The AEEZO Kids Tablet, encased in its blue protective cover, displays the colorful Kidoz app interface. Various icons representing kid-friendly games, videos, and creative tools are shown floating above the tablet.

Kidoz is a pre-installed, COPPA-certified application designed for children. It offers a curated selection of age-appropriate content. Navigate through Kidoz to find games, videos, and educational activities.

PARENTAL CONTROL

Premium Parent Control



Image Description: A mother and child are comfortably seated on a sofa, with the child holding the AEEZO Kids Tablet. On the right side of the image, three circular icons represent key parental control features: Child Lock, Content Filter, and Time Limits.

The AEEZO Kids Tablet is equipped with robust parental control features to ensure a safe digital environment for children.

- **Kidoz Parental Control:** The pre-installed Kidoz app includes an advanced parental control system. Parents can set up a password to manage access to content, filter age-inappropriate material, and monitor usage.
- **Content Filtering:** Utilize the age filter within Kidoz to ensure children only access content suitable for their age group.
- **Time Limits:** Set daily time limits for tablet usage to promote healthy screen habits.
- **App Management:** Control which applications your child can access.
- **Google Family Link:** For more comprehensive device management, consider using Google Family Link, which allows parents to manage app downloads, screen time, and device location from their own device.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and tablet body. Avoid abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not allow the battery to fully discharge frequently. Charge the tablet regularly.

- **Software Updates:** Periodically check for system updates in the tablet's settings to ensure optimal performance and security.
- **Protective Cover:** The food-grade silicone cover provides protection against drops and impacts. Keep it clean and ensure it is properly fitted.
- **Screen Protector:** The pre-applied screen protection film helps block harmful blue light and protects the screen. If it becomes damaged, consider replacing it with a similar eye-protective film.

TROUBLESHOOTING

Tablet Does Not Turn On

- Ensure the tablet is sufficiently charged. Connect it to a power source for at least 30 minutes.
- Press and hold the Power on/off button (2) for 10-15 seconds.
- If unresponsive, use a thin object (like a paperclip) to press the Reset button (1) and then attempt to power on.

Slow Performance

- Close unused applications running in the background.
- Clear cache data for frequently used apps.
- Ensure there is sufficient storage space. Uninstall unnecessary apps or move files to an SD card.
- Restart the tablet.

Wi-Fi Connectivity Issues

- Ensure Wi-Fi is enabled in the tablet's settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect, entering the password again.
- Ensure the tablet is within range of the Wi-Fi signal.

Battery Drains Quickly

- Reduce screen brightness.
- Close background apps and disable unnecessary notifications.
- Turn off Wi-Fi or Bluetooth when not in use.
- Check for apps consuming excessive battery in settings.

SPECIFICATIONS

Feature	Detail
Model Name	TK701
Screen Size	7 Inches
Screen Resolution	1920 x 1200 (FHD IPS)
Processor	1.6 GHz Quad-Core (ARM)
RAM	2 GB
Internal Storage	32 GB

Feature	Detail
Expandable Storage	Up to 128 GB (MicroSD, not included)
Operating System	Android 10.0 (GMS Certified)
Rear Webcam Resolution	5 MP
Front-facing Camera	2 MP
Battery	2,600mAh Lithium Ion
Average Battery Life	Approximately 4 Hours
Connectivity	WiFi
Item Weight	1.43 pounds (approx. 648g)
Product Dimensions	9.06 x 6.69 x 1.97 inches
Color	Blue

WARRANTY AND SUPPORT

Kid-friendly Design



Food Grade Silicone



360-degree rotation



One-year warranty



Anti Blue light Film



Image Description: A young boy is shown playing with the AEEZO Kids Tablet, which is protected by a blue silicone case and features a yellow rotating stand. Insets highlight key features: Food Grade Silicone, 360-degree rotation, a "1 Year Warranty" badge, and "Anti Blue Light Film."

The AEEZO Kids Tablet TK701 comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or any questions regarding your tablet, please contact AEEZO customer service through the retailer where you purchased the product or visit the official AEEZO website for contact information.

