#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Cherry /
- > CHERRY GENTIX Desktop Wireless Keyboard and Mouse US-International Layout QWERTY Black User Manual

## Cherry JD-7000EU-2

# **CHERRY GENTIX Desktop Wireless Keyboard and Mouse User Manual**

Model: JD-7000EU-2

## INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your CHERRY GENTIX Desktop Wireless Keyboard and Mouse. This wireless combo offers ergonomic design, durable construction, and convenient features for daily use.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- · GENTIX DESKTOP Wireless Keyboard
- GENTIX DESKTOP Wireless Mouse
- · 2 x AAA Batteries for Keyboard
- · 2 x AAA Batteries for Mouse
- Nano-USB-Receiver
- · Manual (this document)
- · Warranty Information



Image: The CHERRY GENTIX wireless keyboard and mouse are shown alongside the compact Nano-USB receiver, which facilitates wireless connection to your computer.

## SETUP

## 1. Inserting Batteries

The keyboard requires two AAA batteries, and the mouse requires two AAA batteries. Batteries are included.

#### For the Keyboard:

- 1. Locate the battery compartment on the underside of the keyboard.
- 2. Open the battery compartment cover.
- 3. Insert two AAA batteries, ensuring correct polarity (+/-).
- 4. Close the battery compartment cover.

#### For the Mouse:

- 1. Locate the battery compartment on the underside of the mouse.
- 2. Open the battery compartment cover. The Nano-USB receiver is typically stored here.
- 3. Insert two AAA batteries, ensuring correct polarity (+/-).
- 4. Close the battery compartment cover.



Image: A close-up view of the CHERRY GENTIX wireless keyboard and mouse, highlighting the compact USB receiver. This receiver enables the wireless connection between the devices and your computer.

## 2. Connecting the Receiver

- 1. Remove the Nano-USB receiver from the mouse's battery compartment.
- 2. Plug the Nano-USB receiver into an available USB port on your computer.
- 3. Your computer should automatically detect and install the necessary drivers. This is a Plug & Play device.
- 4. It is recommended to use a USB 2.0 port. While USB 3.0 ports may work, some users have reported occasional issues.

## 3. Powering On

Locate the On/Off switch on the underside of both the keyboard and the mouse. Switch them to the "On" position.

The devices should now be connected and ready for use.

## **OPERATING INSTRUCTIONS**

## **Keyboard Usage**

The CHERRY GENTIX keyboard features a full-size US-International QWERTY layout with an integrated palm rest for ergonomic comfort.

## **Multimedia and Office Keys:**

The keyboard includes 10 dedicated multimedia and office keys for quick access to common functions. These include:

- · PC Blocking
- Browser/Home
- E-Mail Program
- Calculator
- Volume Down
- Mute
- Volume Up
- · Previous Track
- Play/Pause
- Next Track

These keys are typically located above the function keys or in a dedicated row.

#### **Status LEDs:**

Three integrated status LEDs indicate the status of Caps Lock, Num Lock, and Scroll Lock.

#### **Adjustable Height:**

The keyboard features 3 sturdy support feet on the underside, allowing you to adjust the typing angle for personal comfort.



Image: A user's hands are shown typing on the CHERRY GENTIX wireless keyboard, demonstrating its ergonomic design and

## **Mouse Usage**

The CHERRY GENTIX mouse is a symmetrical six-key mouse designed for both left and right-handed users.

#### **DPI Adjustment:**

The mouse features an adjustable resolution (DPI) of 1,000 or 2,000 dpi. This allows you to change the cursor speed and sensitivity. A dedicated button, usually located near the scroll wheel, cycles between these settings.

#### **Side Buttons:**

The mouse includes two side buttons, typically used for forward and backward navigation in web browsers or file explorers.

#### **Battery Status Indicator:**

A red light flashes at the scroll wheel when the mouse battery is low, indicating it's time for replacement.



Image: An overhead view of the CHERRY GENTIX wireless keyboard and mouse, showcasing their full layout and design.

## MAINTENANCE

## **Battery Replacement**

The keyboard and mouse have an estimated battery life of up to three years, depending on usage. Replace batteries when performance degrades or the low battery indicator activates.

#### For Keyboard and Mouse:

- 1. Turn off the device using the On/Off switch.
- 2. Open the battery compartment.
- 3. Remove the old AAA batteries.
- 4. Insert new AAA batteries, observing correct polarity.
- 5. Close the compartment and turn the device back on.

## **Cleaning**

To clean your devices, use a soft, damp cloth. Avoid harsh chemicals or abrasive materials. Ensure devices are turned off before cleaning.

#### **TROUBLESHOOTING**

## No Connection / Device Not Responding

• Ensure the Nano-USB receiver is securely plugged into a USB port on your computer.

- Check that both the keyboard and mouse are switched "On".
- Verify that the batteries are correctly inserted and not depleted. Replace batteries if necessary.
- Try plugging the Nano-USB receiver into a different USB port, preferably a USB 2.0 port.
- Move the devices closer to the receiver to rule out range issues (maximum range is 10m).

## **Mouse Cursor Jumps or is Erratic**

- Clean the optical sensor on the underside of the mouse.
- Ensure you are using the mouse on a suitable surface. Avoid highly reflective or transparent surfaces.
- · Adjust the DPI setting of the mouse.

## **Keys Not Responding**

- · Check for debris under the keys.
- Ensure the keyboard is powered on and connected.
- Replace keyboard batteries.

## **SPECIFICATIONS**

Feature	Detail
Model Number	JD-7000EU-2
Connectivity	Wireless 2.4 GHz Radio Frequency
Wireless Range	Up to 10 meters (33 feet)
Keyboard Layout	US-International QWERTY
Keyboard Special Features	Integrated palm rest, 10 Office and multimedia keys, 3 status LEDs, 3 adjustable support feet
Mouse Type	Symmetrical six-key optical mouse
Mouse Resolution (DPI)	1,000 / 2,000 dpi (adjustable)
Batteries	4 x AAA (2 for keyboard, 2 for mouse) - included
Battery Life	Up to three years (approximate)
Product Dimensions (Keyboard)	21.6 x 8.2 x 1.9 inches (approximate)
Item Weight	2.14 pounds (approximate)
Compatible Operating Systems	Windows 11, Windows 10, Windows 8, Windows 7

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the included warranty document in your package or visit the official Cherry website.

Online resources and FAQs may also be available on the Cherry Brand Store.

## **A**DDITIONAL INFORMATION

The CHERRY GENTIX Desktop is designed in Germany, reflecting a commitment to quality and precision.


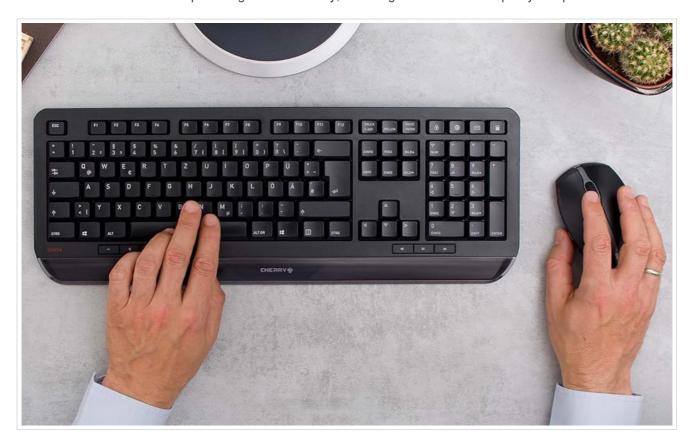


Image: A top-down view of a user's hands operating the CHERRY GENTIX wireless keyboard and mouse on a clean desk, illustrating typical usage.



Image: A side profile of the CHERRY GENTIX wireless keyboard and mouse, highlighting the ergonomic design and low profile of the keyboard.

#### Related Documents - JD-7000EU-2

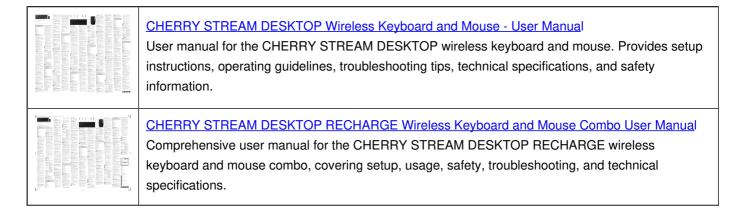

CHERRY STREAM MOUSE ULTIMATE User Manual Comprehensive user guide for the CHERRY STREAM MOUSE ULTIMATE wireless mouse, covering setup, features, troubleshooting, and technical specifications.
CHERRY DW 8000 Wireless Desktop - User Manual and Setup Guide  Comprehensive user manual for the CHERRY DW 8000 wireless keyboard and mouse set.  Includes setup instructions, troubleshooting tips, technical specifications, and safety information.
CHERRY DW 9100 SLIM Wireless Keyboard and Mouse Combo - User Manual Comprehensive user manual for the CHERRY DW 9100 SLIM wireless keyboard and mouse, covering setup, operation, troubleshooting, and technical specifications. Supports Bluetooth and RF connections.
CHERRY MW 8C ERGO Wireless Mouse User Manual and Guide Comprehensive user guide for the CHERRY MW 8C ERGO wireless mouse, covering setup, connection (Bluetooth, RF), operation, DPI settings, charging, cleaning, troubleshooting, technical specifications, and compliance information.