

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bauknecht](#) /

› [Bauknecht MW 59 Mo Microwave Oven User Manual](#)

Bauknecht MW 59 Mo

Bauknecht MW 59 Mo Microwave Oven User Manual

Model: MW 59 Mo (MW 59 MB)

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Bauknecht MW 59 Mo freestanding microwave oven. This appliance features a 25-liter capacity, 800W microwave power, a 900W quartz grill, a 3D system for even cooking, and various automatic programs including DualCrisp, CrispFry, and Double Steam functions. Please read this manual thoroughly before using the appliance and keep it for future reference.


SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven from its packaging. Inspect the appliance for any damage. Remove all packing materials, including any protective film or tape from the interior and exterior surfaces. Ensure all accessories, such as the turntable, crisp plate with handle, steam tray support, and grill rack, are present.

Placement

Place the microwave oven on a stable, level surface. Ensure adequate ventilation around the appliance.

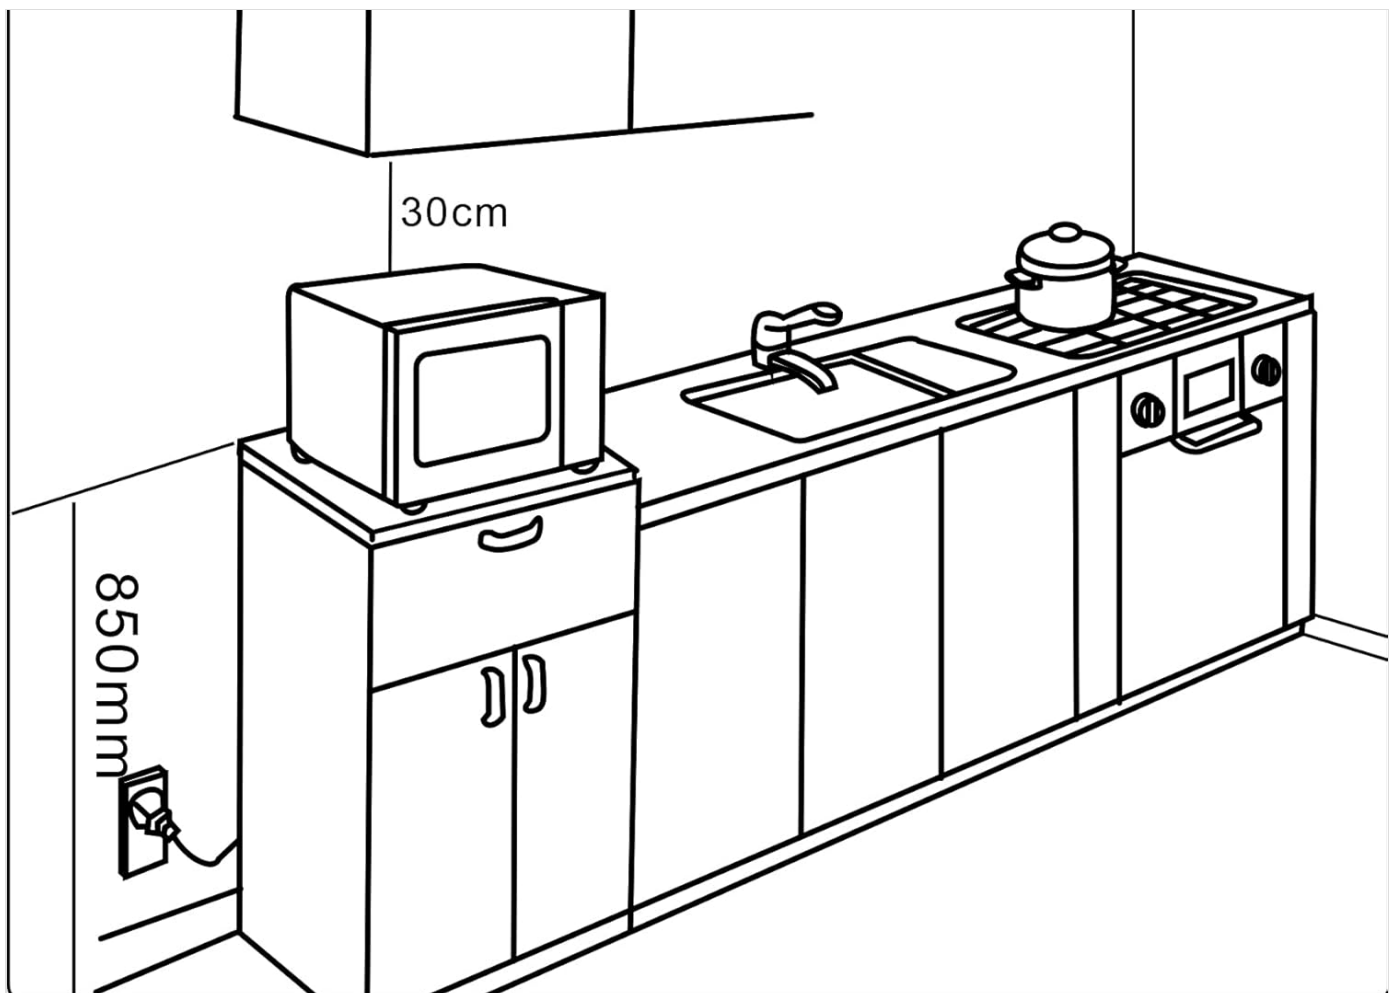

Wichtige Hinweise:

- Die Mikrowelle darf nicht in einen Schrank gestellt werden.
- Stellen Sie die Mikrowelle in einem Abstand zu anderen Wärmequellen auf.
- Für eine ausreichende Belüftung muss ein Freiraum von mindestens 30 cm oberhalb der Mikrowelle vorhanden sein.
- Diese Mikrowelle ist nicht für eine Aufstellung oder Verwendung auf einer Arbeitsfläche vorgesehen, deren Höhe unter 850 mm zum Fußboden liegt.

Image Description: A diagram illustrating the recommended placement of the microwave oven in a kitchen setting. It shows the microwave on a countertop with specific clearance requirements.

- The microwave must not be placed inside a cabinet.
- Place the microwave at a distance from other heat sources.
- For sufficient ventilation, there must be a free space of at least 30 cm above the microwave.
- This microwave is not intended for placement or use on a work surface whose height is below 850 mm from the floor.

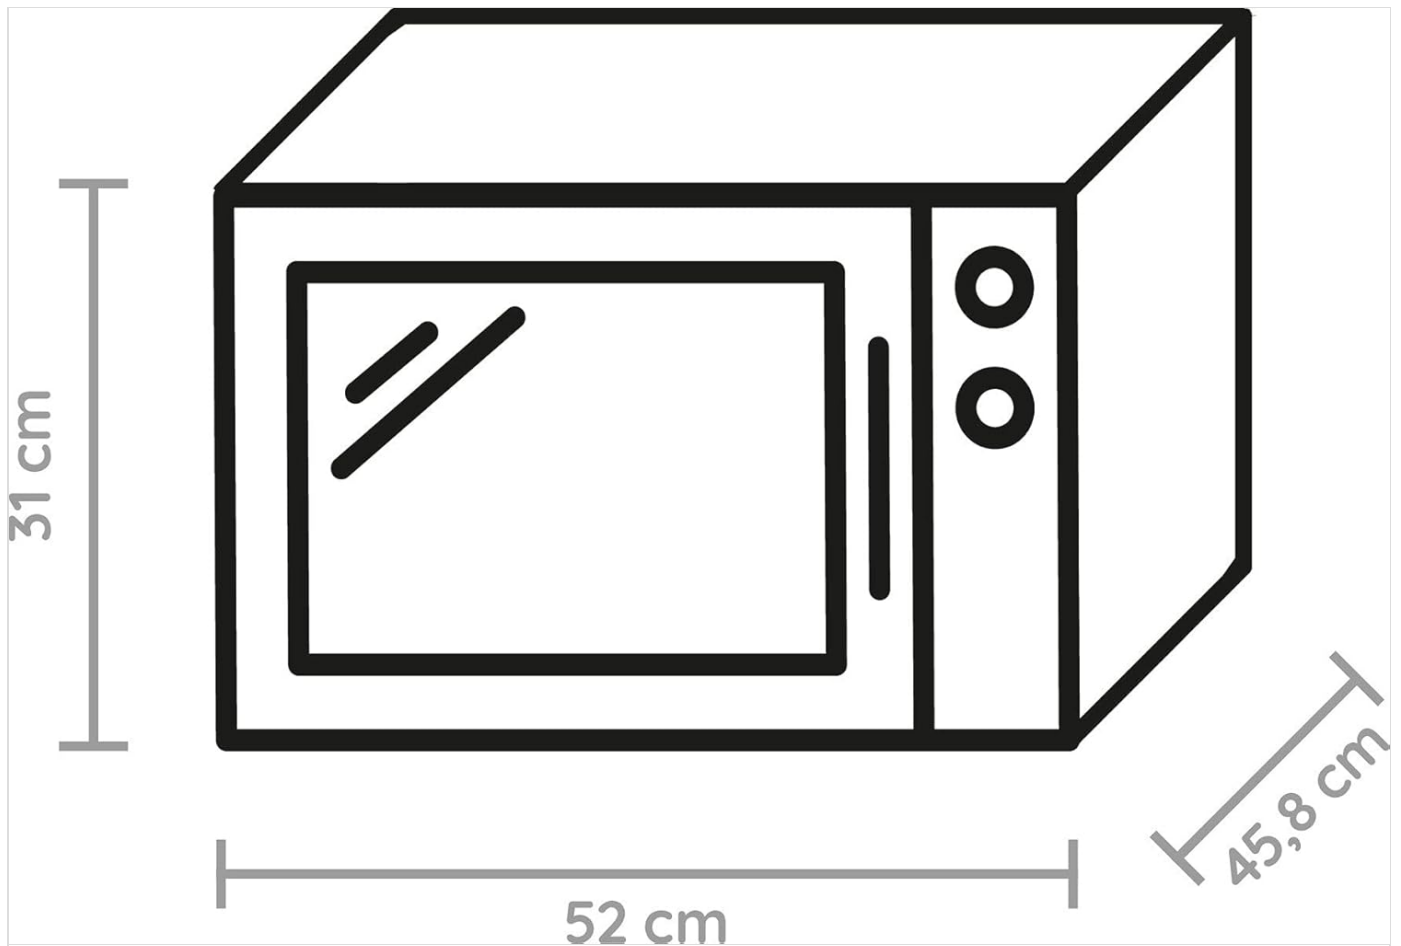


Image Description: A line drawing illustrating the external dimensions of the microwave: 31 cm height, 52 cm width, and 45.8 cm depth.

Power Connection

Ensure the power outlet matches the voltage and frequency specified on the appliance's rating label. Plug the microwave into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Your Bauknecht MW 59 Mo microwave oven features a user-friendly touch control panel and a digital display.



Image Description: A close-up view of the microwave's control panel, showing the digital display and various function buttons for microwave, grill, crisp, steam, and automatic programs.

Basic Microwave Function

Use the microwave function for heating, reheating, and cooking various foods. The appliance operates at 800 Watts.

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Select the microwave function.
4. Adjust the cooking time and power level as needed using the control panel.
5. Press Start.

Grill Function

The 900W quartz grill is ideal for browning and crisping food.

1. Place food on the grill rack or a heat-resistant dish.
2. Select the grill function.
3. Set the desired grilling time.
4. Press Start.

DualCrisp and CrispFry Functions

These functions are designed to provide crispy results for foods like fries, chicken, or pizza. Use the provided crisp plate for optimal performance.



Image Description: The microwave oven with its door open, revealing the glass turntable inside. A separate crisp plate with a handle is shown next to the microwave.

1. Place food on the crisp plate.
2. Select the DualCrisp or CrispFry function.
3. Follow the on-screen prompts or manual recommendations for cooking time.
4. Press Start.

Double Steam Function

The Double Steam function allows for healthy steaming on two levels using the steam tray support.



Image Description: The microwave oven with its door open, showing a two-tier pink and white steamer container placed inside on the turntable.

1. Add water to the bottom of the steam container and place food in the steaming baskets.
2. Place the steam container on the steam tray support inside the microwave.
3. Select the Double Steam function.
4. Set the steaming time.
5. Press Start.

Automatic Programs

The microwave includes several pre-programmed automatic recipes for convenience. These programs automatically adjust cooking time and power for optimal results.

- Defrost
- Pizza
- Popcorn
- Reheat
- Roast
- And other stored recipes.

1. Place the food in the microwave.
2. Select the desired automatic program from the control panel.
3. Follow any on-screen instructions, such as entering food weight.
4. Press Start.

Quick Start Function

The Quick Start function allows for immediate cooking at full power for a short duration, typically 30 seconds, with each press adding more time.

1. Place food in the microwave.

2. Press the Quick Start button to begin cooking.
3. Press again to add more cooking time in increments.

CARE AND MAINTENANCE

Cleaning the Interior and Exterior

- Always unplug the microwave before cleaning.
- Clean the interior cavity after each use with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen food particles.
- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- Ensure the ventilation openings are clear of dust and debris.

Cleaning Accessories

- The glass turntable can be removed and washed in warm soapy water or in a dishwasher.
- The crisp plate, steam tray support, and grill rack should be cleaned according to their specific material instructions, typically with warm soapy water.
- Ensure all accessories are completely dry before placing them back into the microwave.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Power cord unplugged; door not closed properly; fuse blown.	Check power connection; ensure door is fully closed; check household fuse/circuit breaker.
Food is not heating evenly.	Food quantity too large; incorrect power level/time; turntable not rotating.	Reduce food quantity or increase cooking time; ensure turntable is correctly placed and rotates freely.
Unusual noise during operation.	Turntable not correctly positioned; foreign object in cavity.	Reposition turntable; check for and remove any foreign objects.
Display shows an error code.	Internal malfunction.	Unplug the appliance for a few minutes, then plug it back in. If the error persists, contact customer support.

TECHNICAL SPECIFICATIONS

Model Name	Bauknecht MW 59 Mo
Model Number	MW 59 MB
Type	Freestanding Microwave Oven with Grill
Capacity	25 Liters
Microwave Power	800 Watts
Grill Power	900 Watts (Quartz Grill)

Heating Methods	Microwave radiation, Quartz grill
Control Type	Tactile (Touch)
Turntable Diameter	33.6 cm
Exterior Dimensions (L x W x H)	45.8 x 52 x 31 cm
Interior Dimensions (L x W x H)	33.1 x 33.6 x 22.2 cm
Weight	18.7 Kilograms
Material	Metal
Special Features	DualCrisp, CrispFry, 3D System, Automatic Programs, Double Steam, Quick Start Function, Automatic Defrost
Included Components	MW 59 Mo unit, 1 Crisp plate with handle, 1 steam tray support, grill rack

WARRANTY INFORMATION

Your Bauknecht MW 59 Mo microwave oven comes with a manufacturer's warranty. Please refer to the separate warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about spare parts, please contact Bauknecht customer service. Contact details can typically be found on the official Bauknecht website or in the warranty documentation provided with your appliance.

