

[Manuals.plus](#) /

› [iBUYPOWER](#) /

› iBUYPOWER Pro Gaming PC Computer Desktop - SlateMR 1004 User Manual

iBUYPOWER SlateMR 1004

iBUYPOWER Pro Gaming PC Computer Desktop - SlateMR 1004 User Manual

Model: SlateMR 1004

[Visit the iBUYPOWER Store](#)

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your iBUYPOWER Pro Gaming PC Computer Desktop, model SlateMR 1004. Please read these instructions carefully before using your new computer.

WHAT'S IN THE BOX

Upon unboxing, verify that all components are present:

- iBUYPOWER Pro Gaming PC (SlateMR 1004)
- Tempered Glass RGB Gaming Case
- Gaming Keyboard
- RGB Gaming Mouse
- Power Cord
- Wi-Fi Adapter (if external)
- Documentation (this manual, warranty information)



Image: The iBUYPOWER SlateMR 1004 gaming PC tower, accompanied by the included gaming keyboard and RGB gaming mouse.

SETUP INSTRUCTIONS

1. **Unpacking the PC:** Carefully remove the PC from its packaging. Retain all packaging materials for future transport or warranty claims.
2. **Connecting Peripherals:**
 - Connect your monitor to the graphics card's HDMI or DisplayPort output. Ensure it is connected to the dedicated graphics card (NVIDIA GeForce GTX 1650), not the motherboard's integrated video ports.
 - Connect the gaming keyboard and RGB gaming mouse to available USB ports.
 - Connect any other peripherals such as speakers, headphones, or external drives.



Image: Top-down view of the PC tower, highlighting the front panel with USB 3.1 ports, headphone jack, and microphone jack for easy access.

3. **Power Connection:** Connect the power cord to the PC's power supply unit (PSU) and then to a wall outlet or surge protector.

4. **Network Connection:**

- For wired connection, connect an Ethernet cable to the RJ-45 network port on the back of the PC.

- For wireless connection, ensure the Wi-Fi antenna (if external) is attached and the system's 802.11AC Wi-Fi is enabled.

OPERATING INSTRUCTIONS

Powering On/Off

- **To Power On:** Press the power button located on the front or top of the PC case. The system will boot into Windows 11 Home.
- **To Power Off:** Click the Start button in Windows, then select Power > Shut down. Avoid directly holding the power button to shut down, as this can lead to data loss or system instability.
- **Restart:** Click the Start button, then select Power > Restart.

RGB Lighting Control

Your iBUYPOWER SlateMR 1004 features addressable RGB fans and 16-color RGB lighting. Control of these lighting effects is typically managed through pre-installed software or a dedicated button on the case. Refer to the specific software documentation for detailed instructions on customizing lighting patterns and colors.



Image: The iBUYPOWER SlateMR 1004 PC tower showcasing its four addressable RGB fans, illuminated with vibrant colors, visible through the tempered glass side panel.

MAINTENANCE

- **Dust Cleaning:** Regularly clean dust from the PC's vents and fans using compressed air. Ensure the PC is powered off and unplugged before cleaning.
- **Software Updates:** Keep your Windows 11 operating system, drivers (especially graphics drivers), and other software up to date to ensure optimal performance and security.
- **System Backups:** Periodically back up important data to an external drive or cloud storage to prevent data loss.

TROUBLESHOOTING

No Display on Monitor

- Ensure the monitor is powered on and correctly connected to the graphics card's output port (HDMI/DisplayPort).
- Verify that the monitor's input source is set correctly.
- Try a different cable or monitor if available.

PC Not Powering On

- Check if the power cord is securely connected to both the PC and the wall outlet.
- Ensure the power switch on the PSU (located at the back of the PC) is in the 'On' position.
- Test the outlet with another device to confirm it has power.

System Performance Issues

- Close unnecessary background applications.
- Ensure drivers, especially for the graphics card, are up to date.
- Check for sufficient free space on the 500 GB NVMe SSD.

SPECIFICATIONS

Feature	Detail
Brand	iBUYPOWER
Model Name	SlateMR 1004
Operating System	Windows 11 Home
CPU	Intel Core i3-10105F (3.7GHz base, 4.4 GHz Max Turbo)
Graphics Card	NVIDIA GeForce GTX 1650 4GB GDDR6
RAM	8 GB DDR4 (3000 MHz)
Storage	500 GB NVMe SSD
Connectivity	6 x USB 3.1, 1x RJ-45 Ethernet 10/100/1000, 802.11AC Wi-Fi
Video Output	HDMI

Feature	Detail
Audio	On board audio
Case Features	Tempered Glass RGB Gaming Case, 16 Color RGB Lighting
Dimensions (L x W x H)	18.9 x 8.66 x 19.3 inches
Color	Black
Included Peripherals	Gaming Keyboard, RGB Gaming Mouse
UPC	848604041216



Image: Rear view of the iBUYPOWER SlateMR 1004 PC, illustrating the various input/output ports including USB, Ethernet, and video outputs from the graphics card.



Image: The iBUYPOWER SlateMR 1004 PC tower shown with its approximate dimensions labeled in both millimeters and inches.

WARRANTY AND SUPPORT

Your iBUYPOWER Pro Gaming PC comes with a **1 Year Parts & Labor Warranty**. Additionally, you receive **Free Lifetime US Tech Support**

For technical assistance or warranty claims, please contact iBUYPOWER customer support. Refer to the official iBUYPOWER website for the most current contact information and support resources.



**CUSTOMER
SUPPORT**



**BUILT
IN THE USA**

Images: Icons representing customer support and the "Built in USA" manufacturing origin.

