

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smoby](#) /

› [Quinny Twin Toy Pretend Play Pushchair User Manual](#)

### Smoby 253217

## Quinny Twin Toy Pretend Play Pushchair User Manual

Model: 253217 | Brand: Smoby

### INTRODUCTION

---

This manual provides instructions for the assembly, operation, and maintenance of the Smoby Maxi-Cosi & Quinny Twin Toy Pretend Play Pushchair. This product is designed for children aged 3 years and up, allowing them to transport two dolls up to 42cm each. The pushchair features an ergonomic handle, rubber-coated wheels for smooth movement, and a storage tray.



Image: The Quinny Twin Toy Pretend Play Pushchair in light pink, featuring two doll seats and a storage basket.

## SAFETY INFORMATION

---

**WARNING: TOY INSIDE.** For use under adult supervision.

- This product is suitable for children aged 3 years and up.
- Always ensure adult supervision during play.
- Keep small parts away from younger children to prevent choking hazards.
- Regularly inspect the pushchair for any damage or loose parts before use.

## WHAT'S IN THE Box

---

Upon unpacking, please verify that all components are present:

- 1 x MAXICOSI & QUINNY TWIN PUSHCHAIR - LIGHT PINK (main assembly)

Dolls are sold separately and are not included with the pushchair.

## SETUP

---

Minimal assembly is required for this pushchair. Please follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Unfold Frame:** Gently unfold the pushchair frame until it locks into its open position. Ensure all locking mechanisms are securely engaged.
3. **Attach Wheels (if separate):** If the wheels are not pre-attached, align each wheel with its axle and push firmly until it clicks into place. Verify that all wheels rotate freely.
4. **Verify Handlebar:** Ensure the ergonomic handlebar is securely attached and stable. The handle height is approximately 64cm.
5. **Check Storage Tray:** Confirm the storage tray beneath the seats is properly positioned and secure.



Image: A child interacting with the pushchair, demonstrating potential setup or adjustment of the doll seats.

## OPERATING INSTRUCTIONS

---

This section details how to use the Quinny Twin Toy Pretend Play Pushchair.

### Placing Dolls

1. Ensure the pushchair is on a stable, flat surface.
2. Gently place one doll into each seat. The pushchair can accommodate two dolls up to 42cm in height.
3. If equipped, secure the dolls using any integrated safety straps.



Image: A child carefully placing a doll into the pushchair, demonstrating how to position dolls.

### Maneuvering the Pushchair

- Grasp the ergonomic handle firmly with both hands.
- The rubber-coated wheels provide a smooth and quiet ride.
- The front wheels are multi-directional and swivel for easy steering around obstacles.
- Use the storage tray beneath the seats to carry small accessories for the dolls.



Image: A child pushing the twin doll pushchair with two dolls, illustrating typical operation.



Image: A child pushing the pushchair outdoors, demonstrating its use in various environments.

## MAINTENANCE

Proper care will ensure the longevity of your Quinny Twin Toy Pretend Play Pushchair.

- **Cleaning:** The fabric components of the pushchair are made from an easy-clean, durable material. Wipe clean

with a damp cloth and mild soap. Do not use abrasive cleaners.

- **Frame Cleaning:** Wipe the plastic and metal frame parts with a damp cloth.
- **Storage:** Store the pushchair in a dry place away from direct sunlight when not in use.
- **Inspection:** Periodically check all screws, bolts, and moving parts to ensure they are secure and functioning correctly. Tighten any loose fasteners.

## TROUBLESHOOTING

---

This section addresses common issues you might encounter with the pushchair.

- **Wheels not turning smoothly:** Check for any debris (e.g., hair, string) caught in the wheel axles. Clean as necessary. Ensure wheels are securely attached.
- **Pushchair feels unstable:** Verify that the frame is fully unfolded and all locking mechanisms are engaged. Ensure no parts are damaged or bent.
- **Difficulty with assembly:** Refer back to the 'Setup' section and ensure all steps are followed correctly. Do not force parts together. If a part seems ill-fitting, double-check its orientation.

## SPECIFICATIONS

---



Feature	Detail
Product Dimensions	21.46 x 15.16 x 25.2 inches
Item Weight	6.6 pounds
Item Model Number	253217
Manufacturer Recommended Age	3 years and up
Handle Height	64cm
Doll Capacity	2 dolls, up to 42cm each
Manufacturer	MaxiCosi & Quinny
Release Date	February 3, 2021


## WARRANTY AND SUPPORT

---

Information regarding specific warranty terms for the Smoby Maxi-Cosi & Quinny Twin Toy Pretend Play Pushchair is not provided in this manual. For warranty details, product support, or to inquire about replacement parts, please contact the manufacturer, Smoby, directly or refer to the product packaging for contact information.

## Related Documents - 253217

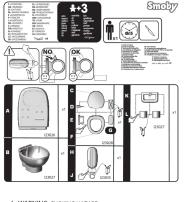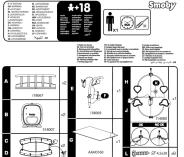
 Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.	
 Smoby Pushchair + Pram Assembly Instructions Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.	
 Smoby Landau Calin Baby Doll Stroller Assembly Instructions This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.	
 Smoby Baby Nurse Crib Assembly Instructions A comprehensive guide to assembling your Smoby Baby Nurse Crib, featuring clear, step-by-step instructions, safety warnings, and a list of included parts. Model AAP2210B.	
 Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.	
 Smoby Playhouse Slabs: Configurations and Requirements A guide to Smoby's modular slab system for playhouses, detailing configurations and the number of slab sets required for various models like Jura Lodge, Chef House, Friends House, and Tipi. Includes product references and coverage information.	

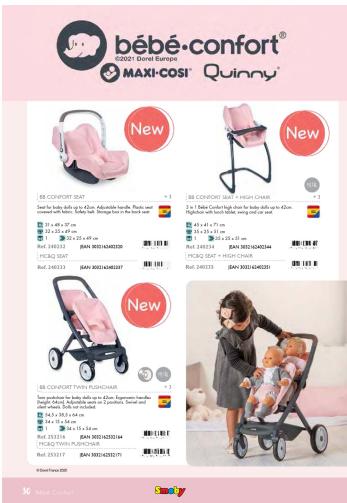

[pdf]

Bekijk de handleiding Smoby Maxi Cosi Quinny Autostol Roze bol original media s YQJZp11p2R4O |||  
BB CONFORT SEAT 3 BB CONFORT SEAT HIGH CHAIR 3 Seat for baby dolls up to 42cm. Adjustable ... cm 34 x 15 x 54 cm 1 34 x 15 x 54 cm Ref. 253216 EAN 3032162532164 MC Q TWIN PUSHCHAIR Ref. 253217 EAN 3032162532171 Dorel France 2020 30 Bb Confort ...


lang:en score:16 filesize: 138.12 K page\_count: 1 document date: 2021-06-11

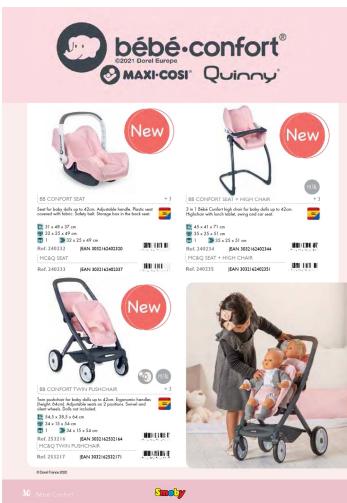

[pdf]

Bekijk de handleiding Smoby Maxi Cosi Quinny Tweeling Poppenwagen bol original media s 3jq3ywkgIvNO |||  
BB CONFORT SEAT 3 BB CONFORT SEAT HIGH CHAIR 3 Seat for baby dolls up to 42cm. Adjustable ... cm 34 x 15 x 54 cm 1 34 x 15 x 54 cm Ref. 253216 EAN 3032162532164 MC Q TWIN PUSHCHAIR Ref. 253217 EAN 3032162532171 Dorel France 2020 30 Bb Confort ...

lang:en score:16 filesize: 138.12 K page\_count: 1 document date: 2021-06-11

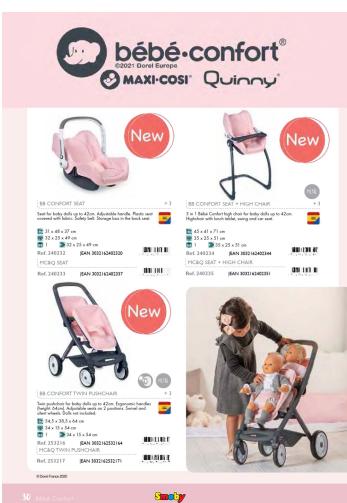

[pdf]

Bekijk de CE markering Smoby Maxi Cosi Quinny Tweeling Poppenwagen bol original media s j60kEx34rGxR |||  
BB CONFORT SEAT 3 BB CONFORT SEAT HIGH CHAIR 3 Seat for baby dolls up to 42cm. Adjustable ... cm 34 x 15 x 54 cm 1 34 x 15 x 54 cm Ref. 253216 EAN 3032162532164 MC Q TWIN PUSHCHAIR Ref. 253217 EAN 3032162532171 Dorel France 2020 30 Bb Confort ...

lang:en score:16 filesize: 138.06 K page\_count: 1 document date: 2022-05-19