

Lenco LS-100WD

Lenco LS-100WD Turntable User Manual

Model: LS-100WD | Brand: Lenco

INTRODUCTION

Thank you for purchasing the Lenco LS-100WD Turntable. This manual provides essential information for the proper setup, operation, and maintenance of your new record player. Please read this manual thoroughly before using the device to ensure safe and optimal performance.

WHAT'S IN THE BOX

- Lenco LS-100WD Turntable Unit
- 2 x External Speakers
- Power Adapter
- Slipmat
- 45 RPM Adapter
- User Manual (in multiple languages)
- Extra Instruction Card

PRODUCT OVERVIEW



**Figure 1:** Front view of the Lenco LS-100WD turntable system, showcasing the main unit with its wooden finish and the two matching external speakers. The clear dust cover is closed over the turntable platter.



**Figure 2:** Angled view of the Lenco LS-100WD turntable, showing the dust cover in an open position, revealing the platter, tonearm, and control knob. The two external speakers are positioned on either side.



**Figure 3:** Rear view of the Lenco LS-100WD turntable unit, highlighting the connection ports. Visible ports include AUX IN, R (Right) and L (Left) speaker outputs, DC 12V power input, and a SPEAKER OUT connection. Speaker cables are shown connected.



**Figure 4:** Close-up top view of the Lenco LS-100WD turntable's main unit. The image focuses on the platter with the Lenco slipmat, the tonearm with its ceramic cartridge, and the speed selection knob (33/45/78 RPM) located on the right side of the wooden base.

## SETUP

### 1. Unpacking

1. Carefully remove all components from the packaging.
2. Retain the packaging materials for future transport or storage.
3. Place the turntable unit on a stable, level surface away from direct sunlight, heat sources, or excessive dust.

### 2. Connecting the Speakers

1. Identify the speaker cables. Each speaker has a cable with RCA connectors.
2. Connect the right speaker cable to the "R" (Right) speaker output on the back of the turntable unit.
3. Connect the left speaker cable to the "L" (Left) speaker output on the back of the turntable unit.
4. Ensure the connections are firm.

### 3. Power Connection

1. Insert the DC plug of the power adapter into the "DC 12V" input jack on the back of the turntable unit.
2. Plug the power adapter into a suitable wall outlet.

### 4. Placing the Slipmat

1. Place the provided slipmat directly onto the turntable platter. This protects your records and provides better grip.

## OPERATING INSTRUCTIONS

---

### 1. Playing a Record

1. Open the dust cover.
2. Place a record on the platter, ensuring it is centered.
3. Select the correct speed (33, 45, or 78 RPM) using the speed selector knob on the turntable unit. For 45 RPM records with a large center hole, place the included 45 RPM adapter on the spindle before placing the record.
4. Release the tonearm lock.
5. Gently lift the tonearm using the cueing lever.
6. Move the tonearm over the desired starting groove of the record.
7. Slowly lower the tonearm using the cueing lever. The stylus will make contact with the record, and playback will begin.
8. Adjust the volume using the volume knob on the turntable unit.

### 2. Stopping Playback

1. Gently lift the tonearm using the cueing lever.
2. Return the tonearm to its rest position.
3. Engage the tonearm lock.
4. Close the dust cover to protect the turntable from dust.

### 3. Using AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the "AUX IN" port on the back of the turntable using a 3.5mm audio cable (not included).
2. The audio from the connected device will play through the Lenco LS-100WD's speakers.

### 4. Using Speaker Out

1. The "SPEAKER OUT" port allows you to connect the turntable to an external amplifier or powered speakers for alternative audio output. Use an appropriate RCA cable (not included) to connect this port to your external audio system's input.

## MAINTENANCE

---

### 1. Cleaning the Turntable Unit

1. Wipe the turntable's surface and dust cover with a soft, dry, lint-free cloth.
2. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

## 2. Cleaning Records

1. Always handle records by their edges or the label.
2. Use a dedicated record cleaning brush to gently remove dust and debris from the record surface before each play.
3. For deeper cleaning, use a record cleaning solution and cloth designed for vinyl records.

## 3. Stylus Care

1. The stylus (needle) is delicate. Avoid touching it with your fingers.
2. Clean the stylus periodically using a soft brush designed for stylus cleaning, brushing gently from back to front.
3. If the sound quality deteriorates or the stylus appears damaged, it may need replacement. Consult Lenco support for replacement options.

## TROUBLESHOOTING

| Problem                     | Possible Cause                                                       | Solution                                                                                                            |
|-----------------------------|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| No power                    | Power adapter not connected or faulty outlet.                        | Ensure power adapter is securely plugged into the turntable and a working wall outlet. Try a different outlet.      |
| No sound from speakers      | Speakers not connected, volume too low, or incorrect input selected. | Check speaker cable connections to the turntable. Increase volume. Ensure tonearm is lowered onto a playing record. |
| Sound distorted or skipping | Dirty record, dirty/damaged stylus, or turntable not level.          | Clean the record. Clean the stylus. Ensure the turntable is on a stable, level surface. Replace stylus if damaged.  |
| Record plays too fast/slow  | Incorrect speed selected.                                            | Adjust the speed selector knob to match the record's RPM (33, 45, or 78).                                           |

## SPECIFICATIONS

- **Model:** LS-100WD
- **Brand:** Lenco
- **Speeds:** 33<sup>1</sup>/<sub>3</sub>, 45, 78 RPM
- **Cartridge Type:** Ceramic
- **Included Components:** Turntable, 2 External Speakers, Power Adapter, Slipmat, 45 RPM Adapter
- **Connectivity:** AUX IN, Speaker OUT (RCA)
- **Power Supply:** DC 12V
- **Material:** Wood (cabinet), Acrylic (dust cover)
- **Dimensions (Turntable Unit):** Approximately 157.48 x 196.85 x 11.81 inches (as per product data, likely external packaging dimensions, actual unit will be smaller)
- **Item Weight:** Approximately 8.76 pounds (3.98 Kilograms)

*Note: Specifications are subject to change without prior notice.*

## WARRANTY INFORMATION

Lenco products are covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included in your product packaging or visit the official Lenco website. Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

Should you encounter any issues or have questions not covered in this manual, please contact Lenco customer support. Contact details can typically be found on the official Lenco website or on the product packaging. For more information, visit the official Lenco website: [www.lenco.com](https://www.lenco.com)

© 2025 Lenco. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question

Open the live page

<https://manuals.plus/asin/B08VZ5BQN9>

More documents and user manuals: <https://manuals.plus/>