

[Manuals.plus](#) /

› [Foxnovo](#) /

› Foxnovo Handheld Vacuum Cleaner Cordless User Manual

Foxnovo Foxnovo Handheld Vacuum Cleaner Cordless

Foxnovo Handheld Vacuum Cleaner Cordless User Manual

Model: Foxnovo Handheld Vacuum Cleaner Cordless

INTRODUCTION

Thank you for choosing the Foxnovo Handheld Vacuum Cleaner Cordless. This powerful and lightweight device is designed for efficient cleaning of various surfaces in your home and car. Featuring dual suction modes, fast charging, and multiple attachments, it provides a convenient solution for everyday messes. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.

SAFETY INSTRUCTIONS

- Always ensure the vacuum cleaner is fully charged before first use.
- Do not use the vacuum cleaner to pick up water or other liquids, as this may damage the motor and electrical components.
- Do not pick up burning or smoking materials, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use without the dust cup and filter in place.
- Store the vacuum cleaner in a dry place when not in use.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the charging accessories provided by the manufacturer.
- If the charging cable or adapter is damaged, do not use it. Contact customer support for replacement.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- Foxnovo Handheld Vacuum Cleaner Unit
- Charging Dock
- USB-C Charging Cable
- HEPA Filter (pre-installed or spare)
- Brush Attachments (various types, e.g., Crevice Tool, Dusting Brush, 2-in-1 Brush)
- User Manual (this document)



Image: The Foxnovo Handheld Vacuum Cleaner shown with its charging dock, USB-C cable, HEPA filter, and various brush attachments including a crevice tool and a multi-purpose brush.

SETUP

1. **Initial Charge:** Before first use, fully charge the vacuum cleaner. You can place it on the charging dock or connect

the USB-C cable directly to the vacuum. The charging indicator light will show charging status. A full charge typically takes a few hours.

2. **Attach Accessories:** Select the appropriate brush attachment for your cleaning task. Align the attachment with the vacuum's nozzle and push firmly until it clicks into place.



20-30min
2600mAh



2600 MAH BATTERY CAPACITY		2200 MAH BATTERY CAPACITY
90W BRUSHLESS MOTOR		85W BRUSHLESS MOTOR
CHARGING DOCK AND TYPE-C CABLE		CHARGING DOCK
ALL IN ONE BRUSH ATTACHMENTS		SINGLE BRUSH ATTACHMENTS
LOW NOISE		LOUD AND ANNOYING

Image: A graphic illustrating the Foxnovo vacuum's features, highlighting its 2600 mAh battery, 90W brushless motor, and dual charging options (dock and Type-C cable), compared to a generic vacuum.

MULTIPURPOSE BRUSH ATTACHMENTS



Dusting Brush:
For dust



Crevice Nozzle:
For Narrow Gaps/Debris



2 in 1 Brush:
For Pet Hair/Fiber



Crevice Nozzle+2 in 1 Brush:
For Curtain

Image: Four examples of how to use the multipurpose brush attachments: a dusting brush for car interiors, a crevice nozzle for narrow gaps, a 2-in-1 brush for pet hair/fiber on upholstery, and a crevice nozzle with an extension for curtains.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button to turn the vacuum cleaner on. Press it again to turn it off.
2. **Select Suction Mode:** The Foxnovo handheld vacuum features two suction modes:
 - **8Kpa Mode:** Ideal for light dust and general surface cleaning.
 - **13Kpa Mode:** Provides stronger suction for deep cleaning and larger debris. Press the mode button to switch between these two settings.
3. **Cleaning:** Move the vacuum cleaner over the surface to be cleaned. For optimal results, use the appropriate attachment for the task.

POWERFUL CORDLESS SUCTION

8000-13000pa quick clean



Image: A Foxnovo handheld vacuum cleaner actively cleaning crumbs and debris from a wooden table, demonstrating its powerful cordless suction capability (8000-13000pa quick clean).

CREVICE TOOL AND FLIP-UP BRUSH

Easy to reach to corner and upholstery



Image: Two views of the Foxnovo handheld vacuum demonstrating its crevice tool and flip-up brush, designed for easy access to corners and upholstery.



LIGHTWEIGHT AND PORTABLE

Perfect for quick cleans on the go

Image: A person using the Foxnovo handheld vacuum cleaner to clean food debris from a baby stroller, illustrating its lightweight and portable design for quick cleans on the go.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dust Cup:

After each use, or when the dust cup is full, press the dust cup release button to detach it from the main unit. Empty the collected debris into a trash bin. Reattach the dust cup firmly until it clicks.



Image: A Foxnovo handheld vacuum cleaner being emptied into a trash can by pressing a single button, demonstrating the "one button empty" feature for easy dust disposal.

2. Cleaning the Filter:

The HEPA filter should be cleaned regularly, especially if you notice a decrease in suction power. Remove the filter from the dust cup. Tap it gently to remove loose dust. If necessary, rinse the filter under running water. Ensure the filter is **completely dry** before reinserting it into the vacuum cleaner. Do not use the vacuum with a wet filter.

3. Cleaning Attachments: Wipe attachments with a damp cloth as needed. Ensure they are dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is low or depleted.	Charge the vacuum cleaner fully.
Reduced suction power.	Dust cup is full. Filter is clogged. Nozzle/attachment is blocked.	Empty the dust cup. Clean or replace the filter. Check and clear any blockages in the nozzle or attachments.

Problem	Possible Cause	Solution
Vacuum stops during operation.	Battery is depleted. Overheating protection activated.	Recharge the battery. Turn off the vacuum and let it cool down for at least 30 minutes before resuming use.
Charging indicator not working.	Charging cable or adapter is faulty. Connection is loose.	Ensure the cable and adapter are securely connected. Try a different power outlet. If issues persist, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Foxnovo
Special Feature	Cordless
Filter Type	Cartridge (HEPA Filter)
Included Components	HEPA Filter, Brush Attachments
Suction Power	8Kpa (Standard Mode), 13Kpa (Powerful Mode)
Motor Power	90W
Weight	Approximately 2.4 lbs
Charging Method	Charging Dock, USB-C Cable

WARRANTY AND SUPPORT

Foxnovo offers a **one-year guarantee** for this product. If you encounter any problems or have questions regarding your Foxnovo Handheld Vacuum Cleaner, please do not hesitate to contact Foxnovo customer support. Refer to the product packaging or the official Foxnovo website for contact information.

IMPORTANT NOTE ON VIDEOS

No official product videos from the seller were available in the provided data to embed in this manual. For visual demonstrations, please refer to the product page on the retailer's website or the manufacturer's official channels.

