

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Smart Cube 7L Smart Air Fryer Instruction Manual

Aigostar HU-XI-201

Aigostar Smart Cube 7L Smart Air Fryer Instruction Manual

Model: HU-XI-201

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.

2. PRODUCT OVERVIEW

The Aigostar Smart Cube Air Fryer is designed for healthy cooking with minimal oil. It features smart connectivity and an intuitive control panel.

2.1 Components

- Main Unit
- Frying Basket
- Removable Handle (for basket)

2.2 Control Panel and Features

The appliance features an LED touch screen for easy operation and monitoring.



Detailed view of the Aigostar Smart Cube Air Fryer control panel with LED display and function icons. This image illustrates the various touch controls for power, temperature, time, preset functions, and Wi-Fi connectivity.

- **Power Button:** To turn the appliance on/off.
- **Temperature Control:** Adjusts temperature from 80°C to 200°C.
- **Timer Control:** Sets cooking time from 0 to 60 minutes.
- **Preset Functions:** Seven pre-programmed settings for common dishes (Potatoes, Shrimp, Chicken, Beef, Meat, Fish, Cake).
- **Keep Warm Function:** Maintains food temperature after cooking.
- **Wi-Fi Indicator:** Shows connection status to the AigoSmart app.



The Aigostar Smart Cube Air Fryer shown with a basket full of cooked fries and an accompanying recipe book. This image highlights the product's main function and included accessories.

3. SETUP

3.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all components are present and undamaged.

3.2 Cleaning Before First Use

- Wipe the exterior of the appliance with a damp cloth.
- Clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
- Do not immerse the main unit in water or any other liquid.

3.3 Placement

- Place the appliance on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides of the appliance, and 10 cm (4 inches) above it, to allow for proper air circulation.
- Do not place the appliance against a wall or other appliances.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Plug the power cord into a grounded wall outlet.
2. Pull out the frying basket from the appliance.
3. Place ingredients into the frying basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the appliance.
5. Press the Power button to turn on the appliance. The LED display will illuminate.
6. Use the temperature and time control buttons to set your desired cooking parameters, or select a preset function.
7. Press the Power button again to start cooking.

4.2 Preset Functions

The air fryer includes 7 preset functions for convenience:

- Potatoes
- Shrimp
- Chicken
- Beef
- Meat
- Fish
- Cake

To use a preset function, simply press the corresponding icon on the control panel. The appliance will automatically set the recommended temperature and time. You can adjust these settings manually after selecting a preset if needed.

4.3 Manual Mode

For custom cooking, use the manual mode:

1. After turning on the appliance, use the temperature control buttons (80°C to 200°C) to set the desired temperature.
2. Use the timer control buttons (0 to 60 minutes) to set the desired cooking duration.
3. Press the Power button to start cooking.

1900W POWER



The Aigostar Smart Cube Air Fryer, capable of 1900W power, is shown with a perfectly cooked chicken dish, illustrating its cooking efficiency.

4.4 Wi-Fi Connection and App Usage

The Aigostar Smart Cube Air Fryer can be controlled via the AigoSmart mobile application.

1. Download the AigoSmart app from your mobile app store.
2. Follow the in-app instructions to connect your air fryer to your home Wi-Fi network.
3. Once connected, you can control the air fryer remotely, select recipes, adjust settings, and receive notifications.
4. Additional functions available through the app include saving custom menus and reminders to rotate the basket during cooking.

SHARINGCOMMUNITY

Share equipment with family and make delicious food together



An individual is shown using the AigoSmart mobile application on a smartphone to adjust settings for the air fryer, demonstrating its smart connectivity features.

4.5 Keep Warm Function

After cooking is complete, you can activate the Keep Warm function to maintain the food's temperature until serving. Refer to the control panel or the AigoSmart app for activation.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

5.1 General Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.

5.2 Cleaning the Frying Basket and Pan

Detachable handle

It is easy to operate



This image demonstrates the detachable handle and the removable frying basket, highlighting the ease of disassembly for cleaning purposes.

- The frying basket and pan are removable and feature a non-stick coating.
- Clean them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residues, soak the basket and pan in hot water with some dish soap for approximately 10 minutes before cleaning.
- Ensure all parts are thoroughly dry before reassembling or storing.

6. TROUBLESHOOTING

If you encounter issues with your Aigostar Smart Cube Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped.	Do not overload the basket. Shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly. For fatty foods, absorb excess oil before cooking.
Air fryer smells during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. The smell will dissipate.
Wi-Fi connection issues.	Incorrect password; router too far; app issues.	Check Wi-Fi password. Move air fryer closer to router. Restart app and air fryer.

7. SPECIFICATIONS

Feature	Specification
Model Number	HU-XI-201
Power Supply	220-240V ~ 50/60 Hz
Power Consumption	1900W
Capacity	7 Liters
Dimensions (L x W x H)	41.6 x 31.8 x 34.6 cm
Weight	7.21 kg
Temperature Range	80°C - 200°C
Timer Range	0 - 60 minutes
Material	Polypropylene (PP)
Special Features	Wi-Fi Connectivity, LED Touch Screen, 7 Preset Functions, Keep Warm Function, BPA-Free, Detachable Basket, Non-slip Feet, Cable Storage, Cool-touch Handle

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Aigostar customer service. Keep your purchase receipt as proof of purchase.



20 RECIPES INCLUDED

The Aigostar Smart Cube Air Fryer is shown in a social setting, emphasizing its role in preparing meals. The image also highlights the inclusion of 20 recipes to inspire users.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08W1MV85J>

More documents and user manuals: <https://manuals.plus/>