

Tribesigns HL0184

Tribesigns HL0184 Height Adjustable C Table with Wheels User Manual

Model: HL0184

INTRODUCTION

Thank you for choosing the Tribesigns HL0184 Height Adjustable C Table. This versatile table is designed to enhance your comfort and productivity, whether you are working, dining, or relaxing. Its adjustable height, tiltable tabletop, and mobile design make it suitable for various uses alongside sofas, beds, or chairs. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your product.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 30 pounds (13.6 kg) for the tabletop.
- Avoid placing hot items directly on the tabletop without protective coasters.
- Use caution when adjusting the height or tilt to prevent pinching fingers or dropping items.
- Do not stand or sit on the table.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Tabletop Panels (Fixed and Tilttable)
- Metal Frame Components
- Storage Shelf Panels
- Caster Wheels (with brakes)
- Height Adjustment Knobs
- Tilt Adjustment Mechanism
- Assembly Hardware (screws, bolts, Allen wrench)

- Instruction Manual

SETUP (ASSEMBLY)

Assembly typically takes approximately 30 minutes. It is recommended to have two people for easier assembly, though one person can complete it.

Tools Required

- Included Allen Wrench
- Phillips Head Screwdriver (not included, optional for some screws)

Assembly Steps

1. **Attach Caster Wheels:** Secure the four caster wheels to the base frame using the provided screws. Ensure two wheels with locking brakes are positioned on the same side for stability.
2. **Assemble Base Frame:** Connect the vertical support bars to the base frame. Ensure all connections are firm but do not fully tighten screws until all major components are aligned.
3. **Install Storage Shelves:** Attach the lower mesh shelf and the upper wooden storage shelf to the designated frame sections.
4. **Attach Tabletop Supports:** Connect the adjustable vertical supports to the main frame. These supports will hold the tabletop panels.
5. **Mount Tabletop Panels:** Carefully place and secure the fixed and tiltable tabletop panels onto their respective supports. Ensure the tilt mechanism is correctly aligned.
6. **Tighten All Fasteners:** Once all components are in place and aligned, fully tighten all screws and bolts. Do not overtighten.



Image: Product dimensions and component layout.

Portable & Versatile for Anywhere

Slide under sofa/bed, move around easily



Image: Detail of the height adjustment knobs.

OPERATING INSTRUCTIONS

Adjusting Height

The table's height can be adjusted from 26 inches to 34.5 inches to suit various seating arrangements.

1. Loosen the four height adjustment knobs located on the vertical support bars.
2. Gently raise or lower the tabletop to your desired height. It may require slight alternating pressure on both sides.
3. Once the desired height is reached, firmly tighten all four knobs to secure the tabletop in place. Ensure all knobs are equally tight for stability.

Height Adjustable Design

24.3in~34.2in height range to fit various heights sofa and bed



Image: Demonstrating the height adjustment range of the table.

Adjusting Tilttable Board

One section of the tabletop can be tilted from 0° to 80° for reading, drawing, or using a laptop.

1. Locate the tilt adjustment mechanism beneath the tilttable tabletop section.
2. Lift the tilttable section to disengage the locking mechanism.
3. Adjust the board to one of the 12 available angles.
4. Release the board to lock it into the chosen position. Ensure it is securely locked before placing items on it.
5. To return to a flat position, lift the board to its highest point, then gently lower it until it clicks into the flat position.



Spacious Tabletop



2-Tier storage shelves



Slide under sofa/bed

Image: The tiltable tabletop section in use, alongside the fixed section and storage shelves.

Using Caster Wheels

The four caster wheels allow for easy movement of the table. Two wheels are equipped with locking brakes for stability.

- **To Move:** Ensure the brakes on the caster wheels are disengaged (unlocked). Gently push or pull the table to its desired location.
- **To Secure:** Once the table is in position, engage the brakes on the two locking caster wheels by pressing down on the lever. This will prevent the table from rolling.



Image: Detail of a caster wheel, highlighting the brake lever.

MAINTENANCE

- **Cleaning:** Wipe the table surfaces with a dry, soft cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten as needed to maintain stability.
- **Caster Care:** Keep caster wheels free of debris (hair, lint) to ensure smooth rolling.
- **Storage:** Store the table in a dry environment away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly.	Loose fasteners; uneven floor.	Ensure all screws and bolts are fully tightened. Move table to a level surface.
Difficulty adjusting height.	Knobs not sufficiently loosened; internal friction.	Fully loosen all four adjustment knobs. Apply gentle, even pressure when raising/lowering.
Caster wheels not rolling smoothly.	Brakes engaged; debris in wheels.	Disengage wheel brakes. Clean any hair or debris from around the wheel axles.
Tilttable board does not lock.	Mechanism not fully engaged.	Lift the board slightly and re-adjust, ensuring it clicks into place at the desired angle.

SPECIFICATIONS

Feature	Detail
Model Number	HL0184
Brand	Tribesigns

Feature	Detail
Product Dimensions (D x W x H)	15.7"D x 31.5"W x 26"H (minimum height)
Adjustable Height Range	26 inches to 34.5 inches
Tabletop Thickness	0.59 Inches
Maximum Weight Recommendation	30 Pounds (13.6 kg)
Item Weight	31.3 Pounds (14.2 kg)
Material Type	Engineered Wood (Tabletop), Metal (Frame)
Color	Black+Oak
Tiltable Board Angles	12 multiple angles (0° to 80°)
Wheels	4 caster wheels, 2 with locking brakes
Assembly Required	Yes

WARRANTY AND SUPPORT

Warranty Information

This product comes with an 18-month quality assurance. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use conditions.

Customer Support

For assistance with assembly, missing parts, or any other inquiries, please contact Tribesigns customer service. Refer to the contact information provided with your purchase or visit the official Tribesigns website for support options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08W214R1G>

More documents and user manuals: <https://manuals.plus/>