

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CoComelon](#) /
- › [CoComelon Sing and Learn Laptop Toy: Instruction Manual](#)

CoComelon 96113

CoComelon Sing and Learn Laptop Toy: Instruction Manual

Model: 96113

INTRODUCTION

The CoComelon Sing and Learn Laptop Toy is an interactive educational device designed for toddlers aged 18 months and up. This toy provides an engaging way for children to learn about letters, numbers, shapes, animals, and more through lights, sounds, and music. Its design encourages imaginative play, allowing children to mimic adults using a laptop.



Image: The CoComelon Sing and Learn Laptop Toy in its open position, displaying colorful characters on the screen and interactive buttons on the keyboard area.

WHAT'S INCLUDED

- 1 x CoComelon Sing and Learn Laptop Toy

KEY FEATURES

- **Interactive Learning:** Features lights, sounds, music, and over 60 learning phrases to teach letters, numbers, shapes, animals, and weather.
- **Imaginative Play:** Designed to resemble a real laptop with a fold-up design, built-in play trackball, and a screen decal.
- **Child-Friendly Design:** Chunky, easy-to-push buttons are ideal for small hands.
- **Musical Engagement:** Includes "The Alphabet Song" and "Bingo" to encourage singing and dancing.
- **Skill Development:** Aids in developing fine motor skills, reading and talking, cognitive learning, social-emotional skills, and creativity.
- **Portability:** Folds up and features a built-in handle for easy transport and on-the-go learning.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the laptop.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 2 x AA batteries, ensuring correct polarity (+/-). The toy includes batteries.
5. Replace the battery compartment cover and tighten the screw.



Image: The underside of the CoComelon Sing and Learn Laptop, highlighting the battery compartment for easy access during installation.

OPERATING INSTRUCTIONS

Power and Volume Control

On the top right side of the keyboard area, locate the power/volume switch. Slide the switch to turn the laptop ON. You can select between a low volume setting and a high volume setting to suit your environment.

Interactive Buttons

The laptop features 9 large, light-up buttons. Pressing these buttons activates various learning modes and sounds:

- **ABC Button:** Teaches letters and plays the "Alphabet Song."
- **Numbers Button:** Introduces numbers and counting.

- **Shapes Button:** Helps identify different shapes.
- **Animals Button:** Plays animal sounds and names.
- **Weather Button:** Describes different weather conditions.
- **Time Button:** Teaches about times of the day (e.g., morning, afternoon).
- **Music Button:** Plays various CoComelon songs, including "Bingo."
- **Feelings Button:** Explores different emotions.
- **CoComelon Button (Spacebar):** Activates additional phrases and sounds.

Trackball Functionality

The red trackball can be moved around to trigger sound effects, enhancing the interactive experience.



Image: A close-up view of the CoComelon Sing and Learn Laptop's keyboard area, showing the ABC, numbers, shapes, and music buttons, along with the red trackball.

Demonstration Videos

Your browser does not support the video tag.

Video: An overview of the CoComelon Sing and Learn Laptop Toy, demonstrating its various features and interactive elements.

Your browser does not support the video tag.

Video: A demonstration of the laptop's volume control and how to easily turn it off.

Your browser does not support the video tag.

Video: Showcasing the portability of the CoComelon laptop, ideal for travel and on-the-go play.

Your browser does not support the video tag.

Video: A child interacting with the CoComelon laptop, highlighting its educational and engaging aspects.

MAINTENANCE

To clean the CoComelon Sing and Learn Laptop Toy, wipe it with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents. Ensure the battery compartment is securely closed after battery changes to prevent moisture ingress.

TROUBLESHOOTING

- **No Sound/Lights:** Check if the power/volume switch is in the ON position. Ensure batteries are correctly installed and are not depleted. Replace with fresh AA batteries if necessary.
- **Intermittent Functionality:** This may indicate low battery power. Replace batteries.

SPECIFICATIONS

Product Dimensions	9.25 x 2.5 x 0.04 inches
Item Weight	1.45 pounds
Item Model Number	96113
Manufacturer Recommended Age	18 months - 4 years
Batteries	2 AA batteries required (included)
Manufacturer	Just Play

SAFETY INFORMATION

This toy is intended for children aged 18 months to 4 years. Adult supervision is recommended during play. May contain small pieces. Always ensure the battery compartment is secure to prevent access to batteries by young children.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for any warranty claims.