



Manuals.plus /

› KUMTEL /

› KUMTEL LX-9625 Mini Oven XXL 70L 2000W Instruction Manual

KUMTEL LX-9625

KUMTEL LX-9625 Mini Oven XXL 70L 2000W Instruction Manual

Model: LX-9625 | Brand: KUMTEL

1. IMPORTANT SAFETY INSTRUCTIONS

Before using your KUMTEL Mini Oven, please read all instructions carefully to ensure safe operation and prevent injury or damage. Keep this manual for future reference.

- Ensure the oven is placed on a stable, heat-resistant surface with adequate ventilation around it. Maintain a minimum distance of 10 cm from walls and other appliances.
- Do not touch hot surfaces. Always use oven mitts or gloves when handling hot items or parts of the oven.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the oven from the outlet when not in use and before cleaning. Allow it to cool completely before adding or removing parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- Do not use accessories or attachments not recommended by the manufacturer, as this may cause hazards.
- Do not place the oven on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause the oven to overheat.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything similar.
- Do not use the oven for purposes other than its intended use.

2. PRODUCT OVERVIEW

2.1 Components

The KUMTEL Mini Oven LX-9625 comes with the following standard accessories:

- 1 x Oven Grid
- 1 x Baking Tray
- 1 x Pizza Plate

Mitgeliefertes Zubehör

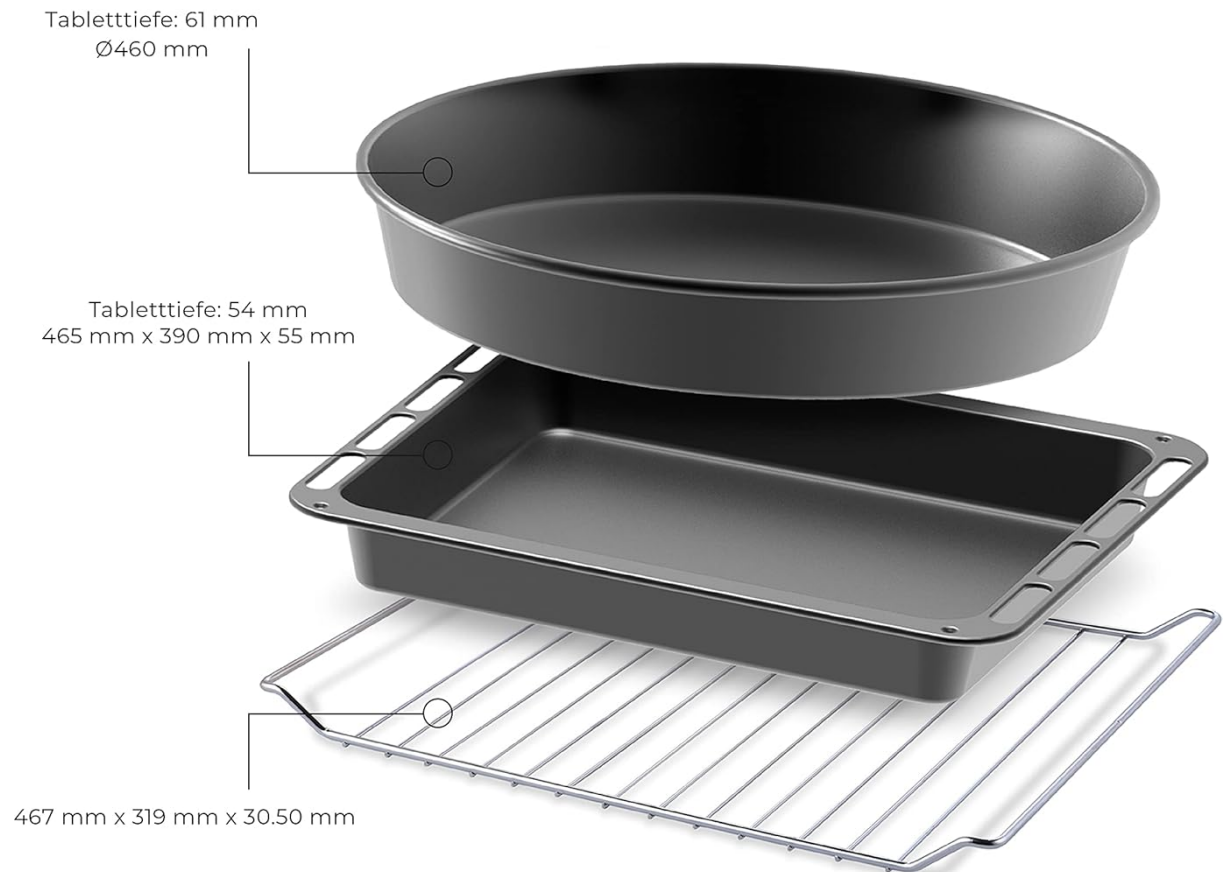


Image: Included accessories for the Kumtel Mini Oven, showing the oven grid, baking tray, and pizza plate.

2.2 Control Panel

The control panel features four rotary knobs for setting temperature, cooking function, and timer.

High Power 2000W



Stilvolle und Ergonomische Knöpfe

6 Programme

Bedienfeld aus Edelstahl

Image: The oven's control panel, featuring four rotary knobs for precise temperature, cooking mode, and timer adjustments.

3. SETUP AND FIRST USE

3.1 Unpacking and Placement

- Carefully remove all packaging materials from the oven.
- Place the oven on a flat, stable, and heat-resistant surface. Ensure there is at least 10 cm of clear space on all sides for proper ventilation.
- Do not place the oven near flammable materials or heat sources.

3.2 Initial Cleaning

- Before first use, wipe the interior and exterior of the oven with a damp cloth.
- Wash the oven grid, baking tray, and pizza plate with warm, soapy water, then rinse and dry thoroughly.

3.3 First Burn-Off

It is recommended to perform a burn-off cycle before cooking food to eliminate any manufacturing odors.

1. Plug the oven into a grounded electrical outlet.

2. Set the temperature knob to maximum (230°C).
3. Set the function knob to a standard heating mode (e.g., combined heating).
4. Set the timer knob to approximately 15-20 minutes.
5. Allow the oven to run in a well-ventilated area. A slight odor or smoke may be present during this initial use; this is normal.
6. Once the cycle is complete, turn off the oven and allow it to cool completely.

4. OPERATING INSTRUCTIONS


4.1 Temperature Control

Use the temperature knob to select the desired cooking temperature. The oven can be set to temperatures up to 230°C.

4.2 Cooking Modes

The oven offers 6 cooking modes to suit various culinary needs. Rotate the function knob to select the desired mode:

- **Turbo Function (Convection):** Activates a fan for even heat distribution, ideal for faster and more uniform cooking.
- **Upper Heating:** Heats from the top element, suitable for browning or crisping the top of dishes.
- **Lower Heating:** Heats from the bottom element, ideal for baking bases or slow cooking.
- **Combined Heating:** Uses both upper and lower heating elements for general baking and roasting.
- **Grill (Barbecue):** Intense heat from the top element for grilling meats, vegetables, or toasting.
- **Defrost Function:** Uses the fan without heat to gently thaw frozen foods.

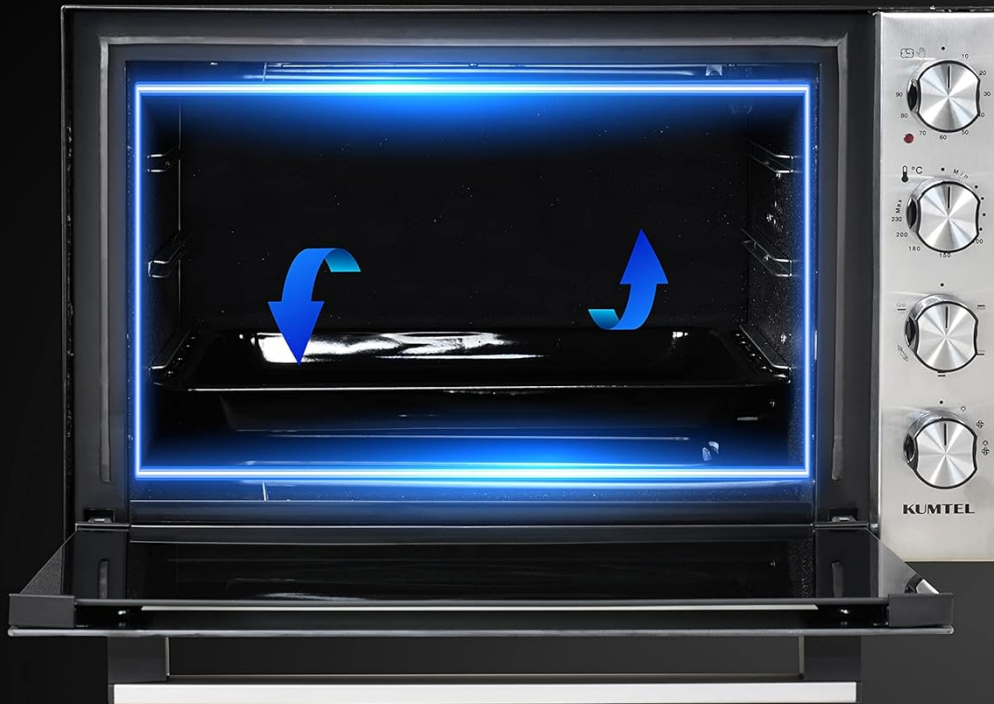

Hervorragendes Kochen mit Turbofunktion

Image: The oven interior illustrating the airflow generated by the turbo function for even cooking.

4.3 Timer Function

The timer knob allows you to set a cooking duration. Once the set time elapses, the oven will automatically switch off, indicated by an audible signal. This auto-stop function helps prevent overcooking and saves energy.

4.4 Interior Light

The oven is equipped with an interior light, allowing you to monitor the cooking process without opening the door. The light typically activates when the oven is in operation.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your oven. Always unplug the oven and allow it to cool completely before cleaning.

5.1 Interior Cleaning

The oven features a healthy granite interior coating, making cleaning easier.

- Wipe the interior with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive oven cleaner suitable for granite surfaces.
- Rinse with a clean, damp cloth to remove any detergent residue.
- Ensure the interior is completely dry before next use.

5.2 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may scratch the finish.

5.3 Cleaning Accessories and Door

- The oven grid, baking tray, and pizza plate can be washed by hand with warm, soapy water or placed in a dishwasher.
- The double glass door can be cleaned with a damp cloth and glass cleaner. Ensure no liquid seeps into the oven's electrical components.



Image: The oven interior, highlighting the easy-to-clean granite coating and the double-glazed door for safety and maintenance.

6. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the oven is securely plugged into a working outlet. Check your home's circuit breaker.
Oven not heating.	Temperature or function knob not set correctly; timer not set.	Verify that both the temperature and function knobs are set to the desired settings. Ensure the timer is set for a duration longer than 0.
Food cooking unevenly.	Improper rack position; oven overloaded; turbo function not used.	Adjust rack position for optimal heat distribution. Avoid overcrowding the oven. Use the Turbo function for more even cooking.
Smoke or odor during first use.	Residual manufacturing oils.	This is normal during the initial burn-off cycle. Ensure good ventilation. If it persists after initial use, contact support.

If the problem persists after attempting these solutions, please contact KUMTEL customer support.

7. TECHNICAL SPECIFICATIONS

Brand	KUMTEL
Model Number	LX-9625
Color	Black
Capacity	70 Liters
Power	2000 Watts
Dimensions (L x W x H)	64 x 55 x 40 cm
Weight	20.1 Kilograms
Material	Stainless Steel (control panel), Granite (interior coating)
Max Temperature	230°C
Control Type	Button Control (Rotary Knobs)
Special Features	Timer with Auto-Stop, Interior Light, Double Glazing
Included Components	1 Oven Grid, 1 Baking Tray, 1 Pizza Plate

8. WARRANTY AND SUPPORT

Your KUMTEL Mini Oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact KUMTEL customer service through the contact information provided on your warranty card or the official KUMTEL website. When contacting support, please have your model number

(LX-9625) and purchase date available.