

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BEKO](#) /

› [BEKO BBIM13300XD Multifunction Oven User Manual](#)

## BEKO BBIM13300XD

# BEKO BBIM13300XD Multifunction Oven User Manual

Model: BBIM13300XD (S0429117)

## 1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new BEKO BBIM13300XD multifunction oven. Please read these instructions carefully before using the appliance for the first time and keep them for future reference. Proper installation, use, and maintenance will ensure optimal performance and extend the lifespan of your oven.

## 2. SAFETY INSTRUCTIONS

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the oven is correctly installed and grounded by a qualified technician. Do not use adapters or extension cords. Disconnect the power supply before cleaning or maintenance.
- **Hot Surfaces:** The oven and its accessible parts become hot during use. Exercise caution to avoid touching heating elements. Use oven mitts when handling hot dishes or oven accessories.
- **Children and Vulnerable Persons:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- **Flammable Materials:** Do not store flammable materials in or near the oven. Do not use the oven for heating the room.
- **Cleaning:** Always allow the oven to cool down before cleaning. Use only recommended cleaning agents and methods.
- **Ventilation:** Ensure adequate ventilation around the appliance as specified in the installation instructions.

## 3. PRODUCT OVERVIEW

The BEKO BBIM13300XD is a built-in multifunction electric oven designed for versatile cooking. It features a sleek black finish with stainless steel accents and touch controls for ease of use.



**Image Description:** This image displays the energy label for the BEKO BBIM13300XD multifunction oven. The label indicates the brand BEKO and model BBIM13300XD. It shows an energy efficiency class of A, with a usable volume of 72 liters. The energy consumption per cycle is listed as 0.88 kWh for conventional heating and 0.81 kWh for fan-assisted heating. This label conforms to regulation 65/2014.

Key features include:

- **Multifunction Cooking:** Offers various cooking modes for different culinary needs.
- **Touch Control:** Intuitive electronic touch controls for precise temperature and function selection.
- **Capacity:** A generous 72-liter usable capacity (total capacity 80 liters) suitable for family-sized meals.
- **Energy Efficiency:** Rated A for energy efficiency, contributing to lower energy consumption.
- **Material:** Constructed with durable stainless steel for longevity and easy cleaning.

## 4. INSTALLATION

Installation of the BEKO BBIM13300XD oven should only be performed by a qualified electrician or authorized service technician in accordance with local regulations and safety standards.

### 4.1. Pre-Installation Checks

- Verify that the electrical supply matches the voltage and power requirements specified on the oven's rating plate (220V, 2500W).
- Ensure the cabinet opening dimensions are appropriate for the built-in oven (refer to the specific installation guide for precise measurements).
- Confirm adequate ventilation space around the oven to prevent overheating.

## 4.2. Electrical Connection

The oven must be connected to a properly grounded electrical outlet. Do not use multi-plug adapters or extension cords. The electrical circuit must be protected by a suitable fuse or circuit breaker.

## 4.3. Securing the Oven

Once positioned in the cabinet, secure the oven using the provided screws through the designated mounting holes to prevent tipping.

# 5. INITIAL SETUP

## 5.1. First Cleaning

Before first use, clean the interior of the oven and all accessories (racks, trays) with a damp cloth and mild detergent. Dry thoroughly.

## 5.2. Initial Burn-Off

To eliminate any manufacturing odors, operate the empty oven at its maximum temperature (e.g., 250°C) for approximately 30-60 minutes. Ensure the kitchen is well-ventilated during this process.

# 6. OPERATING INSTRUCTIONS

Your BEKO BBIM13300XD oven features intuitive touch controls. Refer to the control panel diagram in the full manual for specific button layouts.

## 6.1. Setting the Time

Upon first connection or after a power outage, the clock display will flash. Use the touch controls to set the current time. Confirm the setting to exit the clock adjustment mode.

## 6.2. Selecting a Cooking Function

Press the function selection button (often represented by an icon showing different heating elements or a fan) to cycle through available cooking modes. Common functions include:

- **Conventional Cooking:** Heat from top and bottom elements, ideal for baking cakes and pastries.
- **Fan-Assisted Cooking:** Heat distributed by a fan, suitable for cooking multiple dishes simultaneously at lower temperatures.
- **Grill:** Intense heat from the top element, perfect for browning and toasting.
- **Bottom Heat:** For crisping bases of pizzas or pies.

## 6.3. Setting the Temperature

After selecting a function, use the temperature control buttons (usually '+' and '-') to set the desired cooking temperature. The oven will begin to preheat.

## 6.4. Setting the Cooking Time (Timer)

To set a cooking duration, press the timer button and use the '+' and '-' buttons to adjust the time. The oven will automatically switch off when the set time expires.

## 7. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will help keep your oven in optimal condition.

### 7.1. General Cleaning

- Exterior:** Clean the exterior surfaces with a soft cloth and warm soapy water. For stainless steel parts, use a non-abrasive stainless steel cleaner.
- Interior:** For light soiling, wipe the interior with a damp cloth after each use once the oven has cooled. For stubborn stains, use a specialized oven cleaner, following the product instructions carefully. Ensure all cleaner residue is removed before next use.
- Oven Door:** Clean the glass door with a soft cloth and glass cleaner. Avoid harsh abrasive cleaners or metal scrapers that can scratch the surface.

### 7.2. Removing Oven Racks and Trays

Oven racks and trays can be removed for easier cleaning. Wash them in warm soapy water or in a dishwasher if suitable.

### 7.3. Replacing the Oven Lamp

Ensure the oven is disconnected from the power supply. Unscrew the protective glass cover, replace the old lamp with a new heat-resistant oven lamp of the correct wattage, and reattach the cover.

## 8. TROUBLESHOOTING

Before contacting customer service, consult the following table for common issues and their potential solutions.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect function/temperature setting; door not closed properly.	Check power connection and circuit breaker. Verify function and temperature settings. Ensure oven door is fully closed.
Food not cooking evenly.	Incorrect rack position; oven not preheated; overloaded oven.	Use recommended rack positions. Allow oven to fully preheat. Avoid overcrowding the oven.
Oven light not working.	Lamp is faulty or loose.	Replace the oven lamp (refer to Section 7.3).
Smoke or odor during first use.	Residues from manufacturing process.	This is normal. Ensure good ventilation. It will dissipate after initial burn-off (refer to Section 5.2).

If the problem persists after attempting these solutions, please contact BEKO customer support.

## 9. TECHNICAL SPECIFICATIONS

Brand	BEKO
Model Name	BBIM13300XD

<b>Model Number</b>	S0429117
<b>Type</b>	Built-in Multifunction Electric Oven
<b>Color</b>	Black
<b>Material</b>	Stainless Steel
<b>Usable Capacity</b>	72 Liters
<b>Total Capacity</b>	80 Liters
<b>Power/Wattage</b>	2500 W
<b>Voltage</b>	220 V
<b>Energy Efficiency Class</b>	A
<b>Product Dimensions (D x W x H)</b>	63 x 80 x 72.5 cm
<b>Item Weight</b>	41 kg
<b>Control Type</b>	Touch Control

## 10. WARRANTY AND SUPPORT

Your BEKO BBIM13300XD oven comes with a manufacturer's warranty. For detailed information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official BEKO website.

For technical assistance, spare parts, or service requests, please contact BEKO customer support. Have your model number (S0429117) and serial number ready when contacting support.

You can find contact information for your region on the official BEKO website: [www.beko.com](http://www.beko.com)