

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Eco-Drive Aqualand Chrono Diver Watch Instruction Manual (Model BJ2167-03E)

Citizen BJ2167-03E

Citizen Eco-Drive Aqualand Chrono Diver Watch Instruction Manual (Model BJ2167-03E)

Comprehensive guide for setup, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Citizen Eco-Drive Aqualand Chrono Diver Watch, Model BJ2167-03E. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Citizen Eco-Drive technology converts any light source into energy, eliminating the need for battery replacement. This watch also features a depth meter and chronograph functions, designed for diving activities.

PRODUCT OVERVIEW

The Citizen BJ2167-03E is a robust men's watch featuring a quartz Eco-Drive movement, analog display, and a black rubber strap. Its design incorporates a 47mm case diameter and a black dial.



Image: Front view of the Citizen Eco-Drive Aqualand Chrono Diver Watch, Model BJ2167-03E. The watch features a black dial with red and blue accents, luminous hands and markers, and multiple sub-dials. The bezel is black with red markings

from 0 to 10 and white markings from 10 to 50. The watch has a black rubber strap.

Key Features:

- **Eco-Drive Movement:** Powered by light, never needs a battery.
- **Analog Display:** Clear and traditional timekeeping.
- **Depth Meter:** Measures current and maximum depth during dives.
- **Chronograph:** Stopwatch function for measuring elapsed time.
- **Luminous Hands and Markers:** Enhanced visibility in low light conditions.
- **Water Resistance:** Suitable for diving (Diver's 200M).
- **Rubber Strap:** Durable and comfortable for active use.

SETUP AND INITIAL CHARGE

Initial Charging:

Your Citizen Eco-Drive watch requires an initial charge to function correctly. Expose the watch dial to a strong light source (natural sunlight is ideal) for several hours. Avoid placing the watch in direct sunlight for extended periods in extremely hot environments, as this may cause damage.

- For a full charge from a completely discharged state, expose to direct sunlight for approximately 11 hours, or to an incandescent lamp (30W at 20cm) for about 50 hours.
- A low charge indicator (second hand moving in two-second intervals) signifies the need for charging.

Setting the Time and Date:

1. **Unscrew the Crown:** Locate the crown on the right side of the watch case. Rotate it counter-clockwise until it springs out.
2. **Pull the Crown to Position 2:** Gently pull the crown out to the second click position. The second hand will stop.
3. **Set the Date:** Rotate the crown clockwise or counter-clockwise to adjust the date. Adjust the date to the day before the current date.
4. **Pull the Crown to Position 3:** Pull the crown out to the third click position.
5. **Set the Time:** Rotate the crown to advance the hour and minute hands. Continue rotating until the date changes to the current date, then set the correct time. Ensure AM/PM is correctly set (the date changes at midnight).
6. **Push and Screw Down the Crown:** Once the time and date are set, push the crown back in and screw it clockwise firmly against the case to ensure water resistance.



Image: Side view of the Citizen Eco-Drive Aqualand Chrono Diver Watch, Model BJ2167-03E, highlighting the crown and pushers on the right side of the watch case. The crown is located at the 3 o'clock position, and two pushers are positioned above and below it.

OPERATING INSTRUCTIONS

Using the Chronograph:

The chronograph function allows for precise measurement of elapsed time.

1. **Start:** Press the upper pusher (A) to start the chronograph. The chronograph second hand will begin moving.
2. **Stop:** Press the upper pusher (A) again to stop the chronograph. The elapsed time will be displayed by the chronograph hands.
3. **Reset:** Press the lower pusher (B) to reset the chronograph. All chronograph hands will return to their zero positions.

Using the Depth Meter:

This watch is equipped with a depth meter for diving. Ensure the crown is securely screwed down before entering water.

- The depth meter automatically activates when submerged in water.
- The depth hand indicates the current depth.
- The maximum depth reached during a dive is typically recorded and can be recalled after the dive. Refer to the full manual for specific recall procedures.
- Always check the depth meter's functionality before each dive.



Image: Close-up view of the side of the Citizen Eco-Drive Aqualand Chrono Diver Watch, Model BJ2167-03E, showing the depth sensor located on the left side of the watch case. This sensor is crucial for the watch's diving functions.

Dive Bezel:

The unidirectional rotating bezel can be used to measure elapsed time during a dive or other activities.

1. Rotate the bezel counter-clockwise to align the zero mark with the minute hand at the start of your activity.
2. Read the elapsed time by noting the position of the minute hand against the bezel markings.

MAINTENANCE AND CARE

Charging Guidelines:

- Regularly expose your watch to light to maintain a sufficient charge.
- Avoid prolonged storage in dark places, which can lead to complete discharge and require a longer recharge time.
- Do not expose the watch to extreme temperatures during charging.

Cleaning:

- After exposure to saltwater, rinse the watch thoroughly with fresh water and dry it with a soft cloth.
- For general cleaning, wipe the case and strap with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.

Water Resistance:

- Ensure the crown is always screwed down tightly before exposing the watch to water.
- Do not operate the pushers or crown while the watch is submerged in water.
- Water resistance is not a permanent condition and may be affected by aging gaskets or accidental impacts. Regular inspection by an authorized service center is recommended.

Strap Care:

The rubber strap is durable but can be affected by prolonged exposure to chemicals or extreme temperatures. Clean it regularly with mild soap and water.



Image: Back view of the Citizen Eco-Drive Aqualand Chrono Diver Watch, Model BJ2167-03E, displaying the stainless steel case back with engraved details including "CITIZEN WATCH CO.", "ECO-DRIVE", and "DIVER'S WATCH 200M". The black rubber strap is also visible, secured by a metal buckle.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or second hand moves in two-second intervals.	Insufficient charge.	Expose the watch to a strong light source for several hours to fully charge.

Problem	Possible Cause	Solution
Time and/or date are incorrect.	Incorrect setting or watch was stopped due to low charge.	Refer to the "Setting the Time and Date" section to reset. Ensure the watch is fully charged.
Water inside the watch or fogging under the crystal.	Crown not properly screwed down, or water resistance compromised.	Immediately take the watch to an authorized Citizen service center for inspection and repair. Do not attempt to open the watch yourself.
Chronograph hands do not reset to zero.	Chronograph reset position needs adjustment.	Consult the full instruction manual for chronograph zero position adjustment procedures, or contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	BJ2167-03E
Movement Type	Eco-Drive Quartz
Display Type	Analog
Case Diameter	47 millimeters
Band Material	Rubber
Band Color	Black
Dial Color	Black
Water Resistance	Diver's 200M (ISO compliant)
Special Features	Chronograph, Depth Meter, Luminous Hands/Markers
Batteries	1 Lithium Metal battery (included, charged by light)

CUSTOMER SUPPORT AND WARRANTY

For further assistance, detailed operating instructions, or warranty information, please refer to the official Citizen website or contact Citizen customer service. Keep your purchase receipt as proof of purchase for warranty claims.
Official Website: www.citizenwatch.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08W381TGM>

More documents and user manuals: **<https://manuals.plus/>**