

[Manuals.plus](#) /

› [Kastar](#) /

› Kastar AC Wall Battery Charger Instruction Manual for Vivitar Vivicam and Praktica Luxmedia Cameras

Kastar NOCAR-0B-FNP40-U

Kastar AC Wall Battery Charger Instruction Manual

Model: NOCAR-0B-FNP40-U

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your Kastar AC Wall Battery Charger. This charger is designed to power various camera batteries, including those compatible with Vivitar Vivicam and Praktica Luxmedia models. Please read this manual thoroughly before use and retain it for future reference.





Image: Kastar AC Wall Battery Charger in its retail packaging.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage to the charger or injury, please observe the following precautions:

- **WARNING:** To prevent fire or moisture damage, do not expose the charger to water or high humidity.
- **WARNING:** Do not remove the cover or back plate of the charger. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- **CAUTION:** Use this charger only in dry locations. Avoid use in damp or wet environments.
- Do not attempt to charge batteries that are not specified as compatible with this charger.
- Keep the charger away from heat sources and direct sunlight.
- Unplug the charger from the power outlet when not in use or during electrical storms.
- Do not operate the charger with a damaged cord or plug.

3. SETUP

Follow these steps to set up your Kastar AC Wall Battery Charger:

1. **Unfold the AC Plug:** The charger features a foldable flat AC plug for compact storage. Gently pull out the prongs until they are fully extended and locked into place.



Image: The charger with its AC plug extended, ready for use.

2. **Connect to Power:** Plug the charger directly into a standard AC wall outlet (100-240V, 50/60Hz).



Image: The charger with its AC plug folded for compact storage.

4. OPERATING INSTRUCTIONS

Follow these steps to charge your camera battery:

1. **Insert Battery:** Carefully insert the compatible battery into the charging slot of the charger. Ensure the battery is oriented correctly according to the polarity indicators on the charger.
2. **Charging Indicator:** Once the battery is correctly inserted and the charger is plugged into a power outlet, the LED indicator light will turn **red**, signifying that the battery is actively charging.
3. **Full Charge Indicator:** When the battery is fully charged, the LED indicator light will turn **green**.
4. **Remove Battery:** Once charging is complete (green light), remove the battery from the charger.
5. **Unplug Charger:** Unplug the charger from the wall outlet when not in use.

Demonstration Video

Your browser does not support the video tag.

Video: This video demonstrates the features and usage of the Kastar AC Wall Battery Charger, including its foldable plug design and the battery charging process. It shows how to plug in the charger and insert a battery for charging.

5. MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a soft, dry cloth to wipe the exterior of the charger. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the charger in a cool, dry place, away from direct sunlight and moisture. Fold the AC plug for compact storage.
- **Inspection:** Periodically inspect the charger and its power prongs for any signs of damage. If damage is observed, discontinue use and contact customer support.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Charger LED does not light up.	No power from outlet. Charger not properly plugged in. Battery not inserted correctly. Battery is fully charged (green light).	Check the power outlet with another device. Ensure the charger is firmly plugged into the outlet. Re-insert the battery, ensuring correct orientation. If the light is green, the battery is already charged.
Battery does not charge (LED remains green or off).	Battery is not compatible. Battery is defective. Charger is defective.	Verify battery compatibility with the list in this manual. Try charging a different, known-good compatible battery. If multiple compatible batteries fail to charge, the charger may be faulty. Contact customer support.

7. SPECIFICATIONS

- **Model Number:** NOCAR-0B-FNP40-U
- **Input:** AC 100-240V, 50/60Hz
- **Output:** DC 4.2V, 600mA
- **Dimensions:** 2 x 1.5 x 3 inches (approximately)
- **Item Weight:** 2.4 ounces (approximately)
- **Plug Type:** Foldable flat AC pin (US standard)
- **LED Indicator:** Red (Charging), Green (Standby/Full Charge)
- **Safety Certification:** CE

8. COMPATIBILITY

This Kastar AC Wall Battery Charger is compatible with the following battery and camera models:

Compatible Battery Models:

- Pentax D-Li8, D-Li85
- Fujifilm NP-40, NP-40N
- Panasonic DMW-BCB7, CGA-S004, CGA-S004A, CGA-S004A/1B, CGA-S004E/1B
- Kodak KLIC-7005
- Benq DLI-102
- Samsung SLB-0737, SLB-0837
- Sanyo NP-40

- HP R742

Compatible Camera Models:

- **Braun:** D808
- **Easypix:** DVC5308, DVC5308HD, S530, SDV1200, TS530, V600, VX600, VX6330, VX1400, VX1400HD
- **JAY-tech:** JayCam i6550, Z630
- **Jenoptik:** EasyShot JD 5.3z3, EasyShot JD 7.3z3
- **Medion:** Life S47000, MD86064, Life P42010, Life P42012, MD85866, MD85416
- **Polaroid:** MH-45503, PR-130DG
- **Prosio:** SlimNeo XT1600, Strato DC2007
- **Technika:** SH-Z735
- **Revue:** DC 600 Slim, DC 5600 Slim
- **Rollei:** DA10, DB60, DP60, DX63, DX68, Tribute DT6
- **Vivitar:** DVR-560G, Vivicam 3660, Vivicam 7388, Vivicam 7388S, Vivicam 7500i
- **Praktica:** Luxmedia 12-03, 6015, 8503, 8403, 8303, LB-5030, LM 8403, LM 8503, LM 8303, LM 7403, LM 7303, LM 7203, DCZ 10.3, 12-HD

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or visit the official Kastar website. If you encounter any issues or require technical assistance, please contact Kastar customer support.

Kastar Customer Support: Refer to the contact information provided on the product packaging or the official Kastar website.

