

Denver VPL-210BLACK

Denver VPL-210BLACK Bluetooth Turntable Instruction Manual

Model: VPL-210BLACK

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Denver VPL-210BLACK Bluetooth Turntable. Please read this manual thoroughly before using the device and retain it for future reference. The VPL-210BLACK is designed for playing vinyl records at multiple speeds, connecting wirelessly via Bluetooth, and recording audio to USB or SD card.

SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter (DC 5V-1A). Ensure the power outlet matches the required voltage.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or liquids. Avoid placing objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Cleaning:** Unplug the unit from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, flat surface to prevent damage from falling.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Denver VPL-210BLACK Turntable Unit

- Dust Cover
- Power Adapter (DC 5V-1A)
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Denver VPL-210BLACK turntable.



Figure 1: Front View with Dust Cover Open

This image displays the Denver VPL-210BLACK turntable from the front, with its clear dust cover lifted. Visible components include the record platter, tonearm with stylus, and control knobs for power/volume and speed selection on the front panel.

The integrated speakers are also visible on either side of the platter.



Figure 2: Top View in Operation

A top-down view of the Denver VPL-210BLACK turntable, featuring a vinyl record placed on the platter and the tonearm positioned as if playing. The dust cover is open, providing a clear view of the main operational area. The integrated speakers are visible on the left and right sides of the platter.



Figure 3: Rear Panel Connections

This image shows the rear panel of the Denver VPL-210BLACK turntable. Clearly visible are the RCA "AUDIO OUTPUT" jacks (red and white) for connecting to external amplifiers, and the "DC 5V-1A" input port for the power adapter.

Key Components:

1. **Dust Cover:** Protects the platter and tonearm from dust.
2. **Platter:** The rotating platform where records are placed.

3. **Center Spindle:** Holds the record in place.
4. **Tonearm:** Holds the cartridge and stylus.
5. **Stylus (Needle):** Reads the grooves of the record.
6. **Tonearm Lift Lever:** Raises and lowers the tonearm.
7. **Speed Selector:** Allows selection of 33 1/3, 45, or 78 RPM.
8. **Power/Volume Knob:** Turns the unit on/off and adjusts speaker volume.
9. **Integrated Speakers:** Two 2.5W speakers for direct audio playback.
10. **Bluetooth Indicator:** Lights up when Bluetooth is active.
11. **USB Port:** For connecting USB drives for recording.
12. **SD Card Slot:** For inserting SD cards for recording.
13. **RCA Audio Output:** Connects to external amplifiers or powered speakers.
14. **DC IN Port:** For connecting the power adapter.

SETUP

1. **Unpacking:** Carefully remove the turntable from its packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations.
3. **Dust Cover:** Attach the dust cover to the hinges at the back of the unit.
4. **Power Connection:** Connect the DC 5V-1A power adapter to the DC IN port on the rear of the turntable, then plug the adapter into a wall outlet.
5. **External Audio (Optional):** If connecting to an external amplifier or powered speakers, use RCA cables (not included) to connect the RCA Audio Output ports on the turntable to the corresponding input ports on your audio system.

OPERATING INSTRUCTIONS

1. Playing a Vinyl Record

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the unit.
2. **Select Speed:** Set the speed selector to the appropriate speed for your record (33 1/3, 45, or 78 RPM). For 45 RPM records, place the included 45 RPM adapter on the center spindle if needed.
3. **Place Record:** Carefully place a vinyl record on the platter.
4. **Prepare Tonearm:** Release the tonearm clip. Lift the tonearm using the tonearm lift lever.
5. **Position Stylus:** Gently move the tonearm over the desired starting track of the record.
6. **Lower Tonearm:** Slowly lower the tonearm using the lift lever. The stylus will make contact with the record, and playback will begin.
7. **Adjust Volume:** Adjust the volume using the Power/Volume knob.
8. **Auto-Stop Function:** The turntable features an auto-stop function that will stop the platter rotation when the record finishes playing.
9. **End Playback:** At the end of the record, or when you wish to stop, lift the tonearm using the lift lever, return it to the tonearm rest, and secure it with the clip. Turn the Power/Volume knob counter-clockwise to turn off the unit.

2. Bluetooth Connection

The VPL-210BLACK can stream audio from your vinyl records wirelessly to a Bluetooth-enabled speaker (not included).

1. **Activate Bluetooth:** Ensure the turntable is powered on. The Bluetooth indicator light will flash, indicating it is in pairing mode.
2. **Enable Bluetooth on Speaker:** Turn on your external Bluetooth speaker and put it into pairing mode (refer to your speaker's manual for instructions).
3. **Pairing:** The turntable will automatically search for and connect to nearby Bluetooth speakers. Once connected, the Bluetooth indicator light on the turntable will become solid.
4. **Playback:** Begin playing a record. The audio will now be transmitted to your paired Bluetooth speaker.
5. **Range:** The approximate Bluetooth range is 10 meters. Ensure the turntable and speaker are within this range for stable connection.

3. Recording to USB or SD Card

You can record your vinyl records directly to a USB flash drive or SD card.

1. **Insert Storage:** Insert a USB flash drive into the USB port or an SD card into the SD card slot. Ensure the storage device has sufficient free space.
2. **Start Playback:** Begin playing the vinyl record you wish to record (follow steps in "Playing a Vinyl Record").
3. **Start Recording:** (Specific button for recording is not detailed in input, assuming a general record function) Locate the record button (if present) or follow the manual's specific instructions for initiating recording. The unit will typically start recording the audio from the playing record to the inserted storage device.
4. **Stop Recording:** Press the record button again or follow the manual's specific instructions to stop recording. The audio file will be saved to the USB drive or SD card.
5. **Remove Storage:** Safely remove the USB drive or SD card after recording is complete.

MAINTENANCE

- **Cleaning the Unit:** Wipe the turntable cabinet and dust cover with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Stylus:** Use a soft brush (often included with turntable accessories) to gently brush the stylus from back to front. Do not brush from side to side.
- **Record Care:** Keep your records clean and free of dust to ensure optimal sound quality and prolong stylus life.
- **Dust Cover:** Keep the dust cover closed when the turntable is not in use to prevent dust accumulation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the turntable and a working power outlet.
No sound from speakers	Volume too low, stylus not on record, or external Bluetooth speaker connected.	Increase volume. Ensure the stylus is properly placed on the record. If using Bluetooth, ensure the external speaker is powered on and connected.
Skipping or distorted sound	Dirty record, worn stylus, or turntable not on a stable surface.	Clean the record. Check the stylus for wear and replace if necessary. Place the turntable on a stable, level surface.
Bluetooth not connecting	External speaker not in pairing mode or out of range.	Ensure your Bluetooth speaker is in pairing mode and within 10 meters of the turntable. Try restarting both devices.
Recording not working	USB/SD card full, not inserted correctly, or incompatible format.	Check storage space. Ensure the USB drive or SD card is inserted correctly. Refer to the full product manual for supported file systems/formats.

SPECIFICATIONS

Model Name: VPL-210BLACK

Brand: Denver

Playback Speeds: 33 1/3, 45, 78 RPM

Connectivity: Bluetooth, USB, SD Card, RCA Audio Output

Integrated Speakers: Yes, 2 x 2.5W

Special Features: Built-in speaker, Dust cover, Adjustable speed, Auto-stop function, USB/SD recording

Material: Wood

Color: Black

Item Weight: 4.2 Kilograms

Power Input: DC 5V-1A

Motor Type: DC Motor

Signal Format: Digital (for recording)

Model Number (ASIN): 5706751052125 (B08W4T1RR8)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Information regarding spare parts availability and software updates is not explicitly provided in the product specifications.

You may also visit the official Denver website for general product information: [Denver Brand Store](#)

